

封面



US UK

Dear user

Thank you for choosing the **REDRAGON** products. In order to protect your right and get better service, please pay attention to the following warranty rules:

- Written warranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
- Consumable parts (such as foot pads) and spare parts replacement are not included in the warranty.

Function Overview

Scroll wheel & Middle button

Left button

Right button

Side button


Forward button

Back button

DPF button

Battery & USB receiver storage slot

USB receiver storage slot

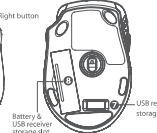

1

2

REDRAGON

BS-8773

2.4G WIRELESS MECHANICAL KEYBOARD & MOUSE BUNDLE

CE FC EAC

RoHS

ANATEL 02089-24-10056

USER MANUAL

O.S. Support

Win XP/ Win 7/ Win 8/ Win 10/ Win 11/ MAC OS.

Connection

2.4GHz wireless connection, insert 1*AA battery into mouse battery slot, turn the keyboard [ON/OFF] switch to "ON", plug USB receiver into computer USB port, the computer will connect mouse and keyboard automatically.

Tip: If the computer didn't connect successfully, plug out USB receiver from computer USB port, plug USB receiver into new available computer USB port.

Mouse: take out batteries from mouse, install the battery again, press hold [1] + [2] + [3] LED indicator under DPF button lighting on Red, when connected the LED indicator will turn OFF.

Keyboard: turn OFF the keyboard and turn ON again, press [ESC] + [1] keys for 1s, the keyboard will reconnect.

Product Features

Mouse

DPI switching: Press [DPF] button to cycle switch DPI in 800/1200/1600/2400/4000 DPI, when switch the DPI, LED indicator will flash to show current DPI as below:

800 ----- 1 time
1200 ----- 2 times
1600 ----- 3 times
2400 ----- 4 times
4000 ----- 5 times

Pulling Rate switching: Press hold [1] + [3] for 1s to cycling switch pulling rate between 125Hz and 250Hz, when switch to 125Hz, LED indicator flash 3 times slowly switch to 250Hz, LED indicator flash 3 times quickly.

Power save mode: The mouse will enter power save mode when it is out of operation over 1 minute, move or click any button to wake it up, when the mouse is out of operation over 10 minutes, the mouse will enter deep power save mode, click any button to wake it up.

Low battery warning: when mouse battery is low, the LED below the scroll wheel will twinkle, to remind change the battery.

Keyboard Backlight

Press [FN] + [1] to turn ON/OFF the backlight.

Press [FN] + [1] / [2] to adjust the backlight brightness.

Shortcut keys:

FN + Z: Volume -	FN + B: Pre-track
FN + X: Volume +	FN + N: Play/Pause
FN + C: Mute	FN + M: Next Track
FN + V: Stop Page	
FN + ESC: -	FN + +/-: F11
FN + [1]: F1	FN + +/-: F12
FN + [2]: F2	FN + P: PrintSc
FN + [3]: F3	FN + [1]: SCRLK
FN + [4]: F4	FN + [1]: PAUSE
FN + [5]: F5	FN + L: INS
FN + [6]: F6	FN + [1]: HOME
FN + [7]: F7	FN + [1]: END
FN + [8]: F8	FN + <: DEL
FN + [9]: F9	FN + >: PGUP
FN + [0]: F10	FN + /: PGDN

Power save mode: The keyboard will enter power save mode when it is out of operation over 2 minutes, the backlight will turn OFF, click any button to wake it up.

Low battery warning: when keyboard battery is low, the LED will twinkle, to remind change the battery.

Warning: Charging current 5V --- 2A max

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.

2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

3. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports.

4. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, unlevel, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.

REDRAGON

4

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity [outside of the product (not)], or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

CAUTION:

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s) (receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s)). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RS(s)) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

6

PT

Prezado usuário,

Obrigado por escolher a marca **REDRAGON**. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.

Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito eletrônico. Danos causados ​​pelos desmontagens, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados ​​por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.

2. Peças que sofrem desgaste (como pé) e a substituição de peças avulsas não estão incluídas em nossa garantia.

Visão geral das funções

1. Botão esquerdo
2. Botão direito
3. Botão da rodinha e botão do meio
4. Botão lateral - Botão Avançar
5. Botão lateral - Botão Voltar
6. Botão de DPI
7. Compartimento de armazenamento do receptor USB
- Compartimento de armazenamento da bateria e do receptor USB

Compatibilidade com Win XP/ Win 7/ Win 8/ Win 10/ Win 11/ MAC OS.

7

Conexão

Conecte sem fio de 2.4 GHz: insira 1 pilha AA no compartimento de pilhas do mouse, clique a chave [ON/OFF] do teclado na posição "ON", conecte o receptor USB na porta USB do computador; o computador conectará o mouse e o teclado automaticamente.

Dica: Se o computador não conectar corretamente, desconecte o receptor USB da porta USB do computador e conecte-o em uma nova porta USB disponível do computador.

Mouse: retire as pilhas do mouse, instale a pilha novamente, pressione e segure [1] + [2] + [3] LED indicador do botão de DPI acenderá em vermelho, quando conectado, o indicador LED se apagará.

Teclado: desligue o teclado e ligue-o novamente, pressione as teclas [ESC] + [1] por 1 segundo; o teclado será reconectado.

Características do produto

Mouse

Botão de comutação de DPI: Pressione o botão [DPF] para alternar o DPI entre 800/1200/1600/2400/4000 DPI, ao observar o DPF e LED indicador piscará para mostrar o DPI atual conforme abaixo:

800 ----- 1 vez
1200 ----- 2 vezes
1600 ----- 3 vezes
2400 ----- 4 vezes
4000 ----- 5 vezes

Comandador de taxa de leitura: Pressione e segure [1] + [3] por 3 segundos para alternar a taxa de leitura entre 125 Hz e 250 Hz. Quando mudar para 125Hz, o LED indicador piscará três vezes lentamente. Quando mudar para 250Hz, o LED indicador piscará três vezes rapidamente.

Modo de economia de energia: o mouse entrará no modo de economia de energia se ficar inativo por mais de 1 minuto. Mou ou clique em qualquer botão para ativá-lo. Se o mouse ficar inativo por mais de 10 minutos entrará no modo de economia de energia profunda. Clique em qualquer botão para ativá-lo.

Aviso de bateria fraca: quando a bateria do mouse estiver baixa, o indicador LED abaixo da rodinha piscará para lembrar de trocar a bateria.

8

Teclado

Retroluminação:

Pressione [FN] + [1] para ativar a retroiluminação.

Pressione [FN] + [1] / [2] para ajustar o brilho da retroiluminação.

Teclas de atalho:

FN + Z: Baixar o volume	FN + B: Função anterior
FN + X: Aumentar o volume	FN + N: Tecla/Pausa
FN + C: Mudo	FN + M: Próxima faixa
FN + V: Fazer Reprodução	
FN + ESC: -	FN + +/-: F11
FN + [1]: F1	FN + +/-: F12
FN + [2]: F2	FN + P: PrintSc
FN + [3]: F3	FN + [1]: SCRLK
FN + [4]: F4	FN + [1]: PAUSE
FN + [5]: F5	FN + L: INS
FN + [6]: F6	FN + [1]: HOME
FN + [7]: F7	FN + [1]: END
FN + [8]: F8	FN + <: DEL
FN + [9]: F9	FN + >: PGUP
FN + [0]: F10	FN + /: PGDN

9

Modo de economia de energia: O teclado entrará no modo de economia de energia se ficar inativo por mais de 2 minutos; a retroiluminação se apagará. Pressione qualquer tecla para ativá-lo.

Aviso de bateria fraca: quando a bateria do teclado estiver fraca, o LED piscará para lembrar de trocar a bateria.

Aviso: corrente de carga: 5V --- 2A max

Dóvidas frequentes

1. Se o teclado não estiver respondendo, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador.

2. Se você desmontar liquid no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxágue o excesso de líquido e coloque o teclado em um local quente e ventilado. É importante que o teclado seque naturalmente antes de usá-lo.

3. Se o mouse não estiver respondendo, verifique se o mouse está conectado corretamente na porta USB correspondente do computador, ou experimente usar outra porta USB.

4. Se o mouse não estiver respondendo, experimente outro superfície. Superfícies escuras, úmidas, irregulares ou brilhantes podem afetar o desempenho do mouse. É recomendado o uso de mouse pad.

REDRAGON

10

封面

型号	BS-8773-G-K		备注：尺寸：100x100mm (折页)			
名称	说明书		材质：80g书写纸			
日期	2025-5-26(修改)		印刷：单黑色双面印刷			
页码	1 OF 1		文件编号			
绘图	邓子松	审核	香敏琪	核准	版本	A.0