

封面

REDRAGON

**BS-8773**

2.4G WIRELESS MECHANICAL KEYBOARD & MOUSE BUNDLE

USER MANUAL

**US UK**

**Dear user**

Thank you for choosing the REDRAGON products. In order to protect your right and get better service, please pay attention to the following warranty rules:

- Written warranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
- Consumable parts (such as foot pads) and spare parts replacement are not included in the warranty.

**Function Overview**

Scroll wheel & Middle button

Left button

Right button

Side button

Forward button

Back button

DPI button

Battery & USB receiver storage dot

USB receiver storage dot

1

**O.S. Support**

Win XP/ Win 7/ Win 8/ Win 10/ Win 11/ MAC OS.

**Connection**

2.4GHz wireless connection, insert 1\*AA battery into mouse battery slot, turn the keyboard [ON/OFF] switch to "ON", plug USB receiver into computer USB port, the computer will connect mouse and keyboard automatically.

**Tip:** If the computer didn't connect successfully, plug out USB receiver from computer USB port, plug USB receiver into new available computer USB port.

**Mouse:** take out batteries from mouse, install the battery again, press hold [1] + [2] + [3] LED indicator under DH button lighting up Red, when connected the LED indicator will turn OFF.

**Keyboard:** turn OFF the keyboard and turn ON again, press [ESC] + [4] keys for 1s, the keyboard will re-connect.

**Product Features**

**Mouse**

DPI switching: Press [DP] button to cycle: switch DPI in 800/1200/1600/2400/4000 DPI, when switch the DPI, LED indicator will flash to show current DPI as below:

800 → 1 time  
1200 → 2 times  
1600 → 3 times  
2400 → 4 times  
4000 → 5 times

Pulling Rate switching: Press hold [2] + [3] for 1s to cycling switch pulling rate between 125Hz and 250Hz, when switch to 125Hz, LED indicator flash 3 times slowly until to 250Hz, LED indicator flash 3 times quickly.

Power save mode: The mouse will enter power save mode when it is out of operation over 1 minute, move or click any button to wake it up, when the mouse is out of operation over 10 minutes, the mouse will enter deep power save mode, click any button to wake it up.

Low battery warning: when mouse battery is low, the LED below the scroll wheel will twinkle, to remind change the battery.

2

**Keyboard Backlight**

Press [FN] + [A] to turn ON/OFF the backlight.

Press [FN] + [1] / [2] to adjust the backlight brightness.

**Shortcut keys:**

|                   |                    |
|-------------------|--------------------|
| FN + Z: Volume -  | FN + B: Pre-track  |
| FN + X: Volume +  | FN + N: Play/Pause |
| FN + C: Mute      | FN + M: Next Track |
| FN + V: Stop Page |                    |
| FN + ESC: ~       | FN + <: F11        |
| FN + 11: F1       | FN + >: F12        |
| FN + 20: F2       | FN + P: PrintSc    |
| FN + 38: F3       | FN + [ ]: SCRLK    |
| FN + 43: F4       | FN + [ ]: PAUSE    |
| FN + 58: F5       | FN + L: INS        |
| FN + 64: F6       | FN + : : HOME      |
| FN + 78: F7       | FN + " : DEL       |
| FN + 84: F8       | FN + <: DEL        |
| FN + 94: F9       | FN + >: PGUP       |
| FN + 0: F10       | FN + / : PGDN      |

3

Power save mode: The keyboard will enter power save mode when it is out of operation over 2 minutes, the backlight will turn OFF, click any button to wake it up.

**Low battery warning:** when keyboard battery is low, the LED will twinkle, to remind change the battery.

**Warning: Charging current 5V=2A max**

4

**BATTERY SAFETY GUIDELINES**

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to swelling, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

5

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

6

**PT**

**Prezado usuário,**

Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.

Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito eletrônico. Danos causados ​​pelos desmontagens, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados ​​por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.

2. Peças que sofrem desgaste (como pé) e a substituição de peças avulsas não estão incluídas em nossa garantia.

**Visão geral das funções**

- 1. Botão esquerdo
- 2. Botão direito
- 3. Botão da rotação e botão do meio
- 4. Botão lateral - Botão Avançar
- 5. Botão lateral - Botão Voltar
- 6. Botão de DPI
- 7. Compartimento de armazenamento do receptor USB
- 8. Compartimento de armazenamento da bateria e do receptor USB

Compatibilidade com Win XP/ Win 7/ Win 8/ Win 10/ Win 11/ MAC OS.

7

**Conexão**

Conecte sem fio de 2,4 GHz: insira 1 pilha AA no compartimento de pilhas do mouse, clique a chave [ON/OFF] do teclado na posição "ON", conecte o receptor USB na porta USB do computador; o computador conectará o mouse e o teclado automaticamente.

**Dica:** Se o computador não conectar corretamente, desconecte o receptor USB da porta USB do computador e conecte-o em uma nova porta USB disponível do computador.

**Mouse:** retire as pilhas do mouse, instale a pilha novamente, pressione e segure [1] + [2] + [3] LED indicador do botão de DPI acendendo em vermelho; quando conectado, o indicador LED se apagará.

**Teclado:** desligue o teclado e ligue-o novamente, pressione as teclas [ESC] + [4] por 1 segundo; o teclado será reconectado.

**Características do produto**

**Mouse**

Botão de comutação de DPI: Pressione o botão [DP] para alternar o DPI entre 800/1200/1600/2400/4000 DPI, ao alternar o DPI, o LED indicador piscará para mostrar o DPI atual conforme abaixo:

800 → 1 vez  
1200 → 2 vezes  
1600 → 3 vezes  
2400 → 4 vezes  
4000 → 5 vezes

Modo de economia de energia: o mouse entrará no modo de economia de energia se ficar inativo por mais de 1 minuto. Mova ou clique em qualquer botão para ativá-lo. Se o mouse ficar inativo por mais de 10 minutos entrará no modo de economia de energia profunda. Clique em qualquer botão para ativá-lo.

Aviso de bateria fraca: quando a bateria do mouse estiver baixa, o indicador LED abaixo da rotação piscará para lembrar de trocar a bateria.

8

**Teclado**

**Retroluminação:**

Pressione [FN] + [A] para ligar/DESLIGAR a retroluminação.

Pressione [FN] + [1] / [2] para ajustar a brilho da retroluminação.

**Teclas de atalho:**

|                           |                        |
|---------------------------|------------------------|
| FN + Z: Baixar o volume   | FN + B: Falsa anterior |
| FN + X: Aumentar o volume | FN + N: Tocar/Pausa    |
| FN + C: Mudo              | FN + M: Próxima lista  |
| FN + V: Fazer Reprodução  |                        |
| FN + ESC: ~               | FN + <: F11            |
| FN + 11: F1               | FN + >: F12            |
| FN + 20: F2               | FN + P: PrintSc        |
| FN + 38: F3               | FN + [ ]: SCRLK        |
| FN + 43: F4               | FN + [ ]: PAUSE        |
| FN + 58: F5               | FN + L: INS            |
| FN + 64: F6               | FN + : : HOME          |
| FN + 78: F7               | FN + " : DEL           |
| FN + 84: F8               | FN + <: DEL            |
| FN + 94: F9               | FN + >: PGUP           |
| FN + 0: F10               | FN + / : PGDN          |

9

Modo de economia de energia: O teclado entrará no modo de economia de energia se ficar inativo por mais de 2 minutos; a retroiluminação se apagará. Pressione qualquer tecla para restaurá-la.

**Aviso de bateria fraca:** quando a bateria do teclado estiver fraca, o LED [DP] piscará para lembrar de trocar a bateria.

**Aviso: corrente de carga: 5V=2A máx**

10

**Dóvidas frequentes**

- Se o teclado não estiver respondendo, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador; ou experimente outra porta USB no computador.
- Se você desmontar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Envolva-o e exceda o líquido e coloque o teclado em um local quente e ventilado. É importante que o teclado seque naturalmente antes de usá-lo.
- Se o mouse não estiver respondendo, verifique se o mouse está conectado corretamente na porta USB correspondente do computador; ou experimente usar outra porta USB.
- Se o cursor estiver se movendo lentamente, experimente uma superfície. Superfícies escuros, úmidas, oleosas ou diferentes podem afetar o desempenho do mouse. É recomendado o uso de umidade, mover o pó.

11

封底

|    |               |      |                    |
|----|---------------|------|--------------------|
| 型号 | BS-8773-W-K   | 备注   | 尺寸: 100x100mm (折页) |
| 名称 | 说明书           | 材质   | 80g书写纸             |
| 日期 | 2025-5-26(修改) | 印刷   | 单黑色双面印刷            |
| 页码 | 1 OF 1        | 文件编号 |                    |
| 绘图 | 邓子松           | 审核   | 香敏琪                |
|    |               | 核准   |                    |
|    |               | 版本   | A.0                |

Redragon  
Quality  
Matters