

AMG-Mercedes CLK DTM R/C REAL DRIVE

USER'S MANUAL

Attention

If batteries are misused, there is possibility of heat generation, explosion and battery leakage. Please be aware of the following:

- Charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with the charger until the damage has been repaired.

1. Specifications and functions

- Motor: 1.10
- Frequency: 27MHz, 40MHz, 48MHz
- Medium speed: 18km/h
- Right, stop: 1.10
- Battery: 8.6V rechargeable battery pack for microcontrol 3V battery pack for remote control

11. Parts illustration



- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries, new or used are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Do not mix old and new batteries;
- Do not mix alkaline batteries, standard (carbon-zinc) or rechargeable (Nickel-cadmium) batteries.

WARNING:

**CHOKING HAZARD - Small parts
Not for children under 3 yrs.
HIGH SPEED-Not for children
under 8 yrs.**

**Intellectual Property Rights licensed
by Daimler Chrysler AG**

All materials for fastening or packing purposes are not part of the toy and should be discarded for children's safety.



Packing has to be kept since it contains important information

Thank you for purchasing our product - 1:10 Radio Control Race Car. Please read the user manual carefully before using the product, and retain the information for future reference.

IV. Installation of batteries to the control

- See diagram 1. Remove the cover of the battery cabinet on the control in the order shown.
- See diagram 2. Install the 8V battery cell according to the correct polarity.
- See diagram 3. Close the cover of the battery cabinet on the control in the order shown.



V. To install and remove antennas

- See diagram 1. Insert the antenna in the antenna socket on the control in the direction shown.
- To remove the antenna, turn it anti-clockwise.



- See diagram 1. Unhook and flip open the cover of the antenna socket on the car.
- See diagram 2. Plug in the connectors of the battery pack and the car together.



- See diagram 3. Insert the 8.6V battery pack into the cabinet. Close the cabinet cover properly by clicking tight the lock as shown in diagram 4.



VIII. Methods to operate

- Switch the power button ON/OFF. The car will start moving forward and backward.
- Switch the power button ON/OFF. The car will start moving forward and backward.



- Change the speed by using the speed lever. The car will start moving forward and backward.

Change the speed by using the speed lever. The car will start moving forward and backward.

 
IX. Recharging frequency and environment

- When there is another car of similar radio frequency operating nearby, the radio control may not function.
- When the car is in a low speed, the car may not function.
- When the car is in a low speed, the car may not function.



VIII. To Consumers


- When playing the car indoor, avoid damaging furniture or glass surface.
- Do not use the car in a public place.
- When thundering while running the car outdoor, should stop immediately.
- Do not use the car in a public place.



- When the car is in a low speed, the car may not function.
- When the car is in a low speed, the car may not function.



 - When the car is in a low speed, the car may not function.
- When the car is in a low speed, the car may not function.



VIII. To Consumers

- When the car is in a low speed, the car may not function.
- When the car is in a low speed, the car may not function.



- When the car is in a low speed, the car may not function.
- When the car is in a low speed, the car may not function.

When the car is in a low speed, the car may not function.