

Info and Codes



It's simple to program your XFINITY Remote to control your TV and Audio Video Receiver.

Your XFINITY Remote is already programmed to control your set-top box or Digital Transport Adapter (DTA). To program the remote for control of Power, Volume, Mute and TV Input on your TV or Power, Volume, and Mute on your audio video receiver (AVR), including a soundbar, follow the steps below.

Note: A soundbar is a type of AVR.

Here's how to program your remote for control of a TV or TV and AVR:

1. Install the remote control batteries and make sure your TV, AVR and set-top box or DTA are powered on.
2. Refer to the "Setup Codes for TVs" and "Setup Codes for AVRs and Soundbars" sections on the back of this guide to find the manufacturers of your TV and AVR.
3. Press and hold the Setup button on your remote until the status LED changes from red to green.
4. Enter the first code listed for the TV manufacturer. The status LED should flash green twice when the code is entered.
5. Press the TV Power button on the remote. If the TV turns off, you have successfully programmed your remote. Turn the TV back on and press the VOL +/- and Mute buttons to confirm they control the volume of your device.
6. If the TV (or AVR) does not turn off or the VOL +/- and Mute buttons do not work, repeat the steps above using the next code listed for your TV manufacturer.

If you only want to program your remote for TV control, you're all set!

Continue with the following steps to program your remote for AVR control.

Note: To program your remote for simultaneous control of both a TV and AVR, the TV must be programmed before the AVR.

7. Press and hold the Setup button on your remote until the status LED changes from red to green.
8. Enter the first code listed for the AVR manufacturer. The status LED should flash green twice when the code is entered.
9. Press the All Power button on the remote. If the AVR turns off, you have successfully programmed your remote. Turn the AVR back on and press the VOL +/- and Mute buttons to confirm they control the volume of your device. If so, you're all set!
10. If the AVR does not turn off or the VOL +/- and Mute buttons do not work, repeat the steps above using the next code listed for your AVR manufacturer.

Here's how to program your remote for only AVR control:

1. Install the remote control batteries and make sure your AVR and set-top box or DTA are powered on.
2. Find the manufacturer of your AVR on the back of this guide.
3. Press and hold the Setup button on your remote until the status LED changes from red to green.
4. Enter the first code listed for the AVR manufacturer. The status LED should flash green twice when the code is entered.

5. Press the TV Power button on the remote. If the AVR turns off, you have successfully programmed your remote. Turn the AVR back on and press the VOL +/- and Mute buttons to confirm they control the volume of your device. If so, you're all set!
6. If the AVR does not turn off or the VOL +/- and Mute buttons do not work, repeat the steps above using next code listed for the device manufacturer. You may need to try several codes to find the one that works for your device.

CAN'T FIND YOUR CODE?

If you can't program your remote for TV and/or AVR control using the codes on the back of this guide, follow the steps below to search for your code.

1. Turn on your TV and AVR.
2. Press and hold the Setup button on your remote until the status LED changes from red to green.
3. To search for a TV code, enter 9-9-1 on the remote. To search for an AVR code, enter 9-9-2. The status LED should flash green twice.
4. Press the CH ^ button repeatedly to search through the manufacturer codes until the device you are programming turns off.
5. After the device turns off, press Setup. The status LED on your remote should flash green twice. Press the TV Power button on the remote. If the device turns on, your have successfully programmed your remote.



xfinity.com/remotes

Troubleshooting

Q: Why does the status LED flash red then green while I am entering the code on my remote?

A: You may have entered an incorrect code. Check the code and try re-entering it.

Q: Why does the status LED flash red, but there is no response when I press a key?

A: Make sure the remote is aimed at your TV or AVR and is no farther than 15 feet away. Also, make sure your set-top box or DTA is powered on and in plain sight.

Helpful Tip: Additional remote control programming support, including code lookup tool and frequently asked questions, can be found at xfinity.com/remotes.

Additional Feature: Aim Anywhere Control
See the back of this user guide to learn how to pair your remote and set-top box or DTA* for Aim Anywhere control, allowing you to control your devices even when they are placed behind your TV or in another room (up to 50 feet away).

*Aim Anywhere control is not supported by all set-top boxes.

Solución de problemas

P: ¿Por qué la luz LED de estado parpadea en color rojo y luego en verde mientras ingreso el código en el control remoto?

R: Es posible que haya ingresado un código incorrecto. Verifique el código y pruebe volver a ingresarlo.

P: ¿Por qué la luz LED de estado parpadea en rojo, pero no hay respuesta cuando presiono alguna tecla?

R: Asegúrese de que el control remoto apunte al televisor o AVR y no esté a más de 15 pies de distancia. Además, cerciórese de que su decodificador o DTA esté encendido y a plena vista.

Consejo útil: Puede encontrar más soporte para programar el control remoto, como la herramienta de búsqueda de código y las preguntas frecuentes, en xfinity.com/remotes.

Función adicional: Control Aim Anywhere
Consulte en la parte posterior de esta guía del usuario para averiguar cómo sincronizar su control remoto y decodificador o DTA* para el control Aim Anywhere, que permite controlar equipos aunque estén detrás del televisor o en otra habitación (a una distancia de hasta 50 pies).

*No todos los decodificadores son compatibles con el control Aim Anywhere.

Here's what your remote can do.

Esto es lo que tu control remoto puede hacer.

TV Power: Turns your TV on/off.

All Power: One button to turn the TV, AVR and DTA or set-top box on/off.

Vol +/-: Controls the volume on the DTA or set-top box. After your remote is programmed, these keys control the TV or AVR's volume.

CH ^/v: Selects the next higher or next lower channel.

Mute: Turns the sound on and off.

TV Input: Changes to the next available input on your TV.

Note: Some features above require programming the remote for control of a TV and/or AVR.

Video Controls: Controls On Demand or DVR viewing, Play, Pause, Fast-Forward, Rewind, and Stop.

Search: Search for content by channel, program, or key words.

Rec: Records content currently being viewed.

Note: Some features above require a DVR set-top box and/or access to On Demand programming.

XFINITY/Menu: Enters the on-screen guide menus.

Guide: Shortcut to TV listings.

OK: Selects the highlighted item within the guide.

Last: Returns to the previous channel or guide screen.

Exit: Exits guide screens and returns you to TV viewing.

Info: Provides a program description.

Fav: Allows you to set up or easily view your favorite channels.

Setup: Programs your remote control to your TV, AVR, set-top box or DTA.

A, B, C, D: Context-sensitive control keys.

Note: Some features above require an on-screen programming guide not available with all devices.

Keypad (0-9): Select the channel you want to view (e.g., 0-9 or 0-2-6).

Setup: Programs your remote control to your TV, AVR, set-top box or DTA.

Swap: Switches between two DVR tuners so you can control playback of two channels.



FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced remote control/TV technician for help.
- It is strongly recommended that the TV be plugged into a separate wall outlet.

The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

"CAUTION" : Exposure to Radio Frequency Radiation. Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation. The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.

Programar el control remoto XFINITY para que controle su televisor y receptor de audio y video es muy sencillo.

El control remoto XFINITY ya está programado para controlar su decodificador o adaptador de transporte digital (Digital Transport Adapter, DTA). A fin de programar el control remoto para el control de Power (Encendido), Volume (Volumen), Mute (Silenciar) y TV Input (Entrada de televisión) de su televisor, o bien Power (Encendido), Volume (Volumen) y Mute (Silenciar) en su receptor de audio y video (audio video receiver, AVR), inclusive un sistema soundbar, siga los pasos a continuación.

Note: Un sistema soundbar es un tipo de AVR.

Instrucciones para programar su control remoto para que controle un televisor o televisor y AVR:

1. Coloque las baterías al control remoto y asegúrese de que su televisor, AVR y decodificador o DTA estén encendidos.
2. Consulte las secciones "Códigos de configuración para televisores" y "Códigos de configuración para AVR y Sistema Soundbar" en la parte posterior de esta guía para encontrar a los fabricantes de su televisor y AVR.
3. Mantenga presionado el botón Setup (Configurar) de su control remoto hasta que la luz LED de estado cambie de color rojo a verde.
4. Ingrese el primer código de la lista del fabricante del televisor. La luz LED de estado debe parpadear en color verde dos veces cuando se ingresa el código.
5. Presione el botón TV Power (Encendido de televisor) del control remoto. Si el televisor se apaga, usted ha programado satisfactoriamente el control remoto. Vuelva a encender el televisor y presione los botones VOL +/- y

Mute (Silenciar) para confirmar que controlan el volumen de su equipo.

6. Si el televisor (o el AVR) no se apaga o los botones VOL +/- y Mute (Silenciar) no funcionan, repita los pasos anteriores utilizando el código siguiente de la lista del fabricante de su televisor.

Si solamente quiere programar el control remoto para que controle el televisor, ya terminó. Continúe con los pasos siguientes con el fin de programar su control remoto para control de un AVR.

Note: Si desea programar su control remoto para que controle simultáneamente un televisor y un AVR, debe programar el televisor antes que el AVR.

7. Mantenga presionado el botón Setup (Configurar) del control remoto hasta que la luz LED de estado cambie de color rojo a verde.
8. Ingrese el primer código de la lista del fabricante del AVR. La luz LED de estado debe parpadear en color verde dos veces cuando se ingresa el código.
9. Presione el botón All Power (Todo encendido) del control remoto. Si el AVR se apaga, usted ha programado satisfactoriamente el control remoto. Vuelva a encender el AVR y presione los botones VOL +/- y Mute (Silenciar) para confirmar que controlan el volumen de su equipo. Si es así, ya terminó.
10. Si el AVR no se apaga o los botones VOL +/- y Mute (Silenciar) no funcionan, repita los pasos anteriores utilizando el código siguiente de la lista del fabricante de su AVR.

Instrucciones para programar su control remoto para que controle solamente un AVR:

1. Coloque las baterías al control remoto y asegúrese de que su AVR y decodificador o DTA estén encendidos.
2. Busque el fabricante de su AVR en la parte posterior de esta guía.
3. Mantenga presionado el botón Setup (Configurar) del control remoto hasta que la luz LED de estado cambie de color rojo a verde.
4. Ingrese el primer código de la lista del fabricante del AVR. La luz LED de estado debe parpadear en color verde dos veces cuando se ingresa el código.
5. Presione el botón TV Power (Encendido de televisor) del control remoto. Si el AVR se apaga, usted ha programado satisfactoriamente el control remoto. Vuelva a encender el AVR y presione los botones VOL +/- y Mute (Silenciar) para confirmar que controlan el volumen de su equipo. Si es así, ya terminó.
6. Si el AVR no se apaga o los botones VOL +/- y Mute (Silenciar) no funcionan, repita los pasos anteriores utilizando el siguiente código de la lista del fabricante del equipo. Es posible que deba probar varios códigos hasta encontrar el que funciona con su equipo.



xfinity.com/remotes



SETUP CODES FOR TVs

CÓDIGOS DE CONFIGURACIÓN PARA TELEVISORES	PARA	Cybervision	12253	11326, 11517, 11641, 11963, 11326, 12003	Nikko	10178, 10030, 10092, 12284	Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711, 12284	11742
		Cytron	11326, 12003		Niko	11581		10179, 10309, 11711, 12284	10046, 10312
		Daewoo	10451, 10092, 10019, 10066, 11661, 10623, 10067, 10091, 10661, 10672, 11909, 11928, 12268, 12284		Noblex	10430	Sears	10047, 10054, 10154, 10156, 10178, 10171, 10015, 10149, 10159, 10168, 10179, 10747, 11007, 11904, 10056, 12284, 12293	11336
3M	10737, 11616, 11655			Inteq	10017				11758, 10864, 10885, 11756, 12247
A-Mark	10003			IX	10877	Norwood Micro	11286, 11296, 11303		
Abex	10032	Daytron	10019, 12284	Janeli	10046	Noshi	10018	Seleco	10737, 11297
Accurian	11803	Dell	11264, 11080, 11178, 11403	JBL	10054	NTC	10092	Selectron	12283
Acer	12244, 12245	Denon	10145, 10511	JCB	10000	NuVision	11657	Sharp	10093, 10153, 10165, 10386, 11602, 10491, 10851, 12284, 12285, 12286
Action	10873	Denstar	10628	JC Penney	12268, 12284, 12293	Olevia	11144, 11240, 11331, 12272		
ADC	12246	Diamond Vision	11801, 11996, 12288	Jensen	10761, 10050, 10815, 10817, 11299, 11933, 12284	Olympus	11342		
Admiral	10093, 10463, 12246, 12258, 12286	Digistar	11565, 12267	JVC	10053, 10036, 10160, 10169, 10731, 11349, 11253, 12265	Onwa	10180		
Advert	10761, 10783, 10815, 10817, 10842, 11933, 12267	Digital Lifestyles	11765, 11822	Kamp	10216	Optimus	10154, 10250, 10166, 10650, 11913, 12273	Sharper Image	11950
Adventura	10046	Digital Projection	11482, 11725, 11726, 11750	Kawasaki	12266			Sheng Chia	10093
Afttron	10891	Inc.		Kawasho	10216, 10308, 12284	Optoma	10887, 11348, 11674	Sherwood	11399
Aiko	10092	Dimensia	12293	Kaypani	10052	Optonica	10093, 10165, 12286	Shogun	10019, 12284
Aiwa	10701, 11914, 12248, 12270	Disney	12258, 12259	KDS	11687	Orion	10236, 10463, 11463, 10179, 11905, 11911, 12258	Signature	10016, 12246, 12293
Akai	10030, 10060, 10098, 10672, 10702, 10812, 11207, 11385, 10030, 10060, 10098, 10672, 10702, 10812, 11207, 11385, 11675, 11676, 11688, 11689, 11692, 11903, 11935	Dream Vision	11297	KEC	10180	Panasonic	10250, 10051, 10055, 10650, 11291, 11941, 10162, 10226, 10375, 11310, 11410, 11919, 12273, 12274	Signet	10800, 10844, 11262
Alaron	10179, 10183, 10216	Dukane	12251	Kenwood	10030, 10019, 12284			SIM2 Multimedia	11297
Albatron	10700, 10843	Dumont	10017	KLH	10765, 10767	Simpson	10186, 10187	Skyworth	11799
Amark	12286	Durabrand	10463, 10180, 10178, 10171, 10003, 11034, 12258	Kloss	10024, 10046, 10078	Solarism	11220	Sole	10813, 11031, 11366, 11377, 11483, 11530, 11623, 12075, 12076
Ambassador	10177	Dwin	10093, 10747, 10774	Knoll Systems	10781	Penney	10047, 10156, 10051, 10060, 10178, 10030, 11919, 11907, 10747, 10309, 10149, 10032, 10027, 10021, 10019, 10018, 10003, 10002, 11347	Sonic	12287
American Action	10180	Dynatech	10049	Konka	10628, 10632, 10638, 10707, 11385, 11831, 11939			Sony	11100, 10000, 10011, 10353, 10834, 11317, 11400, 11685, 11786, 11791, 11904, 11925
Ampro	10751	Dynex	11463, 11780, 11785	Kost	11262, 11483	Petters	11523	Soundesign	10180, 10178, 10179, 10186, 12284
Anaba	12249	Elki	10735	Kreisen	10876, 11474	Philco	10054, 10030, 10019, 10020, 10028, 10096, 10302, 12268, 12284	Sova	11320, 11952
Anam	10180	Electroband	10000, 12287	Kurazai	12246			Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Anam National	10055	Electrograph	11755, 11623	Lasonic	12288	Philips	11454, 10054, 10037, 10690, 11483, 12275, 12284	Spectra	12288
AOC	10030, 12250, 12268, 12284, 12287, 11590, 11365	Electrohome	10463, 10446, 11570, 11670, 11672, 11760, 11761, 12284	Legend	12267			Spectricon	10003
Aomni	11623	Elektra	12246	LG	11265, 10178, 10700, 10442, 10856, 11178, 11530, 11637, 11758, 11934, 11993, 12248, 12268, 12269, 12270, 12271, 12284	Phillips-Magnavox	12275	Spectrioniq	11687
Apex Digital	10156, 10748, 10879, 10765, 10767, 10879, 10890, 11991	Element	11687, 12260	Llyod's	11904	Pilot	10030, 10019, 12284	Squareview	10171
Archer	10003, 12286	Emerson	10154, 10451, 10236, 10463, 10180, 10178, 10171, 11963, 11928, 11913, 11911, 11909, 11905, 11665, 10282, 10280, 10270, 10183, 10181, 10179, 10177, 10038, 10019, 10623, 11963, 12248, 12258, 12270, 12284, 12285, 12288	Loewen	10136	Pioneer	10166, 10679, 10866, 10038, 10172, 11398, 12284	SSS	10180, 10019, 12284
Aspect	12251	Emprex	11422, 11546, 11765	Logik	10016, 12246, 12293	Piva	12277, 12276	Starlite	10180
Astar	11531, 11738	Envision	10030, 10813, 11365, 12250, 12284	Luce	10837, 11031	Planar	11496	Studio Experience	10843
Audiovox	10451, 10180, 10092, 10003, 10623, 10802, 10846, 10875, 11284, 11951, 11952	Epson	11122, 11290	Luxman	10056, 12284	Polaroid	10765, 12063, 12002, 11991, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11538, 11523, 11385, 11341, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865, 12267	SunBrite	11420, 11435
		Erae	11222	LXI	10047, 10054, 10154, 10156, 10178, 10747, 12248, 12270, 12284, 12293			Superscan	10093, 10864
Aurora Systems	10801	ESA	10812, 10171, 11963	Magnavox	11454, 11866, 10054, 10030, 10706, 11990, 11963, 11913, 11904, 11525, 11365, 11198, 11254, 10386, 10802, 10230, 10187, 10186, 10179, 10096, 10036, 10028, 10024, 10020, 12275, 12284	Portland	10092, 10019, 12268, 12284	Supra	12284
Aventura	10171	Fisher	10154, 10159			Prima	10761, 10815, 10817, 11389, 11785, 11933, 10783, 12267	Supre-Macy	10046
Bang & Olufsen	12252	Fujitsu	10179, 10186, 10683, 10853, 12008, 10809			Princeton	10700, 10717	Supreme	10000
Belcor	10019, 12284	Funai	10180, 10171, 10179, 11904, 11963, 11271, 12248, 12270			Princeton Graphics	12286	SVA	10748, 10587, 10768, 10865, 10870, 10871, 10872, 12289
Bell & Howell	10154, 10016, 12246, 12293	Futurtech	10180			Prism	10051	Sylvania	11864, 10054, 10030, 10171, 11271, 10020, 10028, 10065, 10096, 11314, 11665, 11963, 12248, 12258, 12270, 12284
BenQ	11032, 11315	Gateway	11755, 11756			Proscan	11447, 10047, 11347, 10466, 10747, 11922, 12291, 12293	Symphonic	10180, 10171, 11904, 11913, 12248, 12270
BlueSky	12253, 12254	GE	11447, 10047, 10051, 10451, 10178, 10021, 10027, 10029, 10055, 10135, 10279, 10282, 10747, 11907, 11919, 11922, 11347, 12284, 12290, 12293			Proton	10178, 10003, 10031, 10052, 10466, 12284	Syntax	11144, 11240, 11331, 11610
Bradford	10180			Magnin	11907	Protron	11320, 11323	Tandy	10093, 10218, 12286
Brillan	11007, 11257, 11258			Majestic	10015, 10016, 12246, 12293	Proview	10835, 11687	Tashiko	10588
Brockwood	10019			Marantz	10054, 10030, 10704, 10854, 10855, 11398, 11554, 12284	Pulsar	10017, 10019, 12284	Tatung	10003, 10049, 10055, 11101, 11286, 11287, 11288, 11361, 11503, 11756
Broksonic	10236, 10463, 12258			Matsushita	10250, 10650			TCL	12290, 12291, 12292, 12293
Brokwood	12284			Maxent	11755, 11757			Technics	10250, 10051
Bush	10355,			MB Quart	11868			Technol Ace	10179
Byd:sign	11309			Medion	12259			Techview	10847, 12004
Cadia	11283			Megapower	10700			Techwood	10051, 10003, 10056, 12284
Candle	10030, 10046, 10056, 10186, 12284			Megatron	10178, 10145, 10003, 12251, 12284			Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10019, 10056, 10175, 10179, 10186, 10312, 12246, 12268, 12284, 12293
Canon	10793, 11396			MEI	12287			Telefunken	10702, 10056, 10101
Carnivale	10030			Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11911, 11920, 12246, 12258, 12284, 12293			Telemagic	10735
Carver	10054, 10170							Teletnet	12246, 12293
Casio	10611, 11205							Tera	10031, 12284
CCE	10217, 10329							Thomas	11904
Celebrity	10000							Thomson	10209, 10210, 10625
Celera	10765							TMK	10178, 10056, 10177, 12284
Centrios	12255							TNCi	10017
Changhong	10765							Toshiba	10154, 11256, 10156, 10060, 10036, 10650, 10845, 10149, 10736, 10832, 11343, 11369, 11704, 11935, 11156, 11356, 11656, 11265, 12294
Cineral	12253								
Cinego	11986							TruTech	11723, 12066
Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11928 11935, 12246, 12258, 12284, 12287							TVS	10463
								Ultra	10391, 11323
Clarion	10180							Universal	10027
Classic	11984							US Logic	11286, 11303
CLP Classic	12284							Vector Research	10030
Coby	12017, 12256, 12257							Venturer	11865
Colortyme	12284							VEOS	11007
Commercial	11447, 10047							Victor	10053
Solutions								Video Concepts	10098
Compaq	10749							Vidikron	10054, 10242, 11398, 11629
Concerto	10056, 12284							Vidtech	10178, 10019, 10036, 12268, 12284
Contec	10180, 12287								
Craig	10180							Viewsonic	11755, 12014, 10724, 10775, 10797, 10857, 10864, 10885, 11330, 11342, 11578, 11627,
Crosley	10054								
Crown	10180								
CTX	12286								
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 10145, 10166, 10016, 10056, 10466, 10747, 11147, 11347, 11919, 12246, 12284, 12293								
CXC	10180								
CyberHome	10794								

Pairing your XFINITY Remote for Aim Anywhere control.

Your XFINITY Remote can be paired with Aim Anywhere devices, including select set-top boxes and DTAs, allowing you to control your devices even when they are placed out of line-of-sight (for example, in an entertainment center or behind your TV). XFINITY Remotes can be identified by a model number beginning with “XR” on the back of the remote.

If your set-top box or DTA supports Aim Anywhere technology, follow the steps below to pair your XFINITY Remote with the device.

Aim Anywhere Pairing:

- Press and hold the Setup button for 3 seconds, until the status LED changes from red to green.
- Press the XFINITY button on the remote. Your TV should display on-screen instructions to enter a 3-digit code. If the instructions do not appear, press the XFINITY button again - up to 2 more times.
- Follow the on-screen instructions to enter the 3-digit code that appears.
- Once the code is correctly entered, your XFINITY Remote is paired with the device.

SETUP CODES FOR AVRs & SOUNDBARS

CÓDIGOS DE CONFIGURACIÓN PARA AVR Y SISTEMA SOUNDBAR

ADC	30531
Aiwa	31964, 30158, 30189
Bose	31934, 31935, 31229, 31933
Boston Acoustics	31944
B&W	31940, 31941
Capetronic	30531
Carver	30189
Coby	31946
Definitive	31936
Denon	31961, 31104, 31360
GE	30078
Harman/Kardon	30110, 30189, 31955
Ilive	31957
Insignia	31960
Integra	30135
JBL	31958, 30110
JVC	30074, 30331
Kenwood	30027, 31027, 31313, 31570
KHL	31967
LG	31953
Linn	30189
Magnavox	30189, 30531
Marantz	31972, 30189
NAD	31973, 31974
Onkyo	31965, 30135
Optimus	30531, 31023
Panasonic	31959, 31308, 31518
Philips	31945, 31962, 30189, 31266
Pinnacle	31954, 31971
Pioneer	31963, 30531, 31023, 31384
Polk Audio	31951, 31952, 30189
Proscan	31254
RCA	30531, 31023, 31254
Regent	31968, 31969
Rio	31970
Samsung	31949, 31950
Sansui	30189
Sharp	31942, 31956
Sony	31938, 31939, 30158, 31758, 31759