

OPERATING DRONE

TAKE OFF

Press the right (R) button on the remote control to take the drone out of the ground and into the air.

LAND

There are two ways to land the drone:
1. Simply press the left button on the remote control (L) and the drone will land.
2. To prevent auto-orientation, hold the right button (R) on the remote control.

After the drone lands, press the left button (L) on the remote control to turn the drone off.

OPERATING DRONE

FORWARD/BACKWARD

Press the forward/backward button on the remote control to move the drone forward or backward.

LEFT/RIGHT

Press the left/right button on the remote control to move the drone left or right.

UP/DOWN

Press the up/down button on the remote control to move the drone up or down.

STUNT MODES

FLIP STUNTS

Press the flip button on the remote control to perform flip stunts.

MANEUVER STUNTS

Press the maneuver button on the remote control to perform maneuver stunts.

STUNT MODES

TURN STUNTS

Press the turn button on the remote control to perform turn stunts.

AUTO-ORIENTATION

Press the auto-orientation button on the remote control to enable the drone to return to its original position.

TIPS & TROUBLESHOOTING

TIPS

- Do not crash the drone into walls or other objects. The drone may become damaged.
- When first starting to fly, practice lifting off and hovering indoors.
- Always keep the drone in sight.
- Do not fly near people, animals, or buildings.
- Always press the left button on the remote control when something gets stuck in the propellers.
- When the drone is in flight, the propellers will stop spinning. Do not touch the propellers.
- Always use caution when flying the drone outdoors. They are not toys. Respect the privacy and property rights of others.
- The drone should never be modified or used for anything except its intended purpose.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING

When remote switch is turned on, the remote light does not illuminate:
1. Check that batteries in the remote are inserted correctly.
2. Replace with new batteries.

During flight, the Remote Power LED is flashing:
1. Remote batteries are low. Load the drone immediately.
2. Replace old batteries.

Drone and remote power on, but the drone will not lift off:
1. Drone battery needs charging. Use the USB Charge Cable to connect the drone to power source.

After receiving the drone, flight is very unstable and is caused by property:
1. Check every battery and make sure they are fully charged. Replace with the proper current replacement.
2. Press the auto-orientation button on the remote control for 5 seconds to reset the gyroscope.
3. Turn off the drone and remote, then repeat the pairing process (page 4).

Remote and drone cannot be paired:
1. Remote must be within 12 feet of drone.

Note: If there is more than one unpaired drone within 12 feet, one must be successfully paired before others may be paired.

SHARPER IMAGE

14+

DRONE AERO STUNT LED

GETTING TO KNOW YOUR DRONE

PLEASE READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO USE. KEEP THIS DOCUMENT AS IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR DRONE.

CHARGING

- Drone must be charged before each use (USB Charge Cable included).
- Indicator light will turn off once fully charged.
- Install batteries in remote.

PAIRING

Before each flight, pair the remote with the drone:
1. Turn your drone on and place on a flat, level surface.
2. Turn on the remote.
3. Push click up and then down.
4. Repeat steps 1 and 2 if necessary.

IMPORTANT: After paired landing, turn drone and remote off. Then, repeat pairing!

DIRECTION

- The head of the Drone Aero Stunt LED is the front of the drone.
- The tail of the Drone Aero Stunt LED is the back of the drone.
- Not applicable to auto-orientation mode.

REMOTE CONTROL

Practice flying your drone below 10 feet and at low speeds until comfortable with all controls to avoid unnecessary damage or injury.

- Left joystick:
 - Up/Down: controls elevation.
 - Left/Right: controls spin.
- Right joystick: controls flight direction.
- Direction Trim: use to eliminate drift.
- The left power to drone, more left joystick to down position.

GENERAL WARNINGS

READ ALL WARNINGS AND PRECAUTIONS BEFORE USE.

SAFETY WARNINGS:

- Not recommended for children under 14 years of age. As with all electrical products, please read the manual and operating instructions and use as directed.
- Adult supervision is required at all times.
- Always use caution when flying the drone. They are not toys. Respect the privacy and property rights of others.
- The drone must never be modified or used for anything except its intended purpose.
- Before each use, an adult should review the product and battery to determine that no damage or hazardous condition exists.
- Do not fly the drone in inclement weather.
- Do not allow children to fly the drone without adult supervision.
- Use caution and pay attention to your surroundings while operating the drone.
- Do not fly the drone near people, animals, or buildings.
- Keep the drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and/or any type of severe weather.
- Do not land the drone on wet surfaces.
- Never touch or allow others to touch the drone while it is flying.
- Always keep the drone at least 10 feet away from people.
- Always keep the drone at least 10 feet away from buildings.
- Fly outdoors on your own risk. Sudden wind change or other conditions may lead to unexpected crashes and damage.

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY. RECYCLING INFORMATION IS AVAILABLE AT WWW.RECYCLEDROONE.COM

FAQ WARNING

This drone weighs 0.187 lbs (85g). As of November 2017, the Federal Aviation Administration (FAA) requires registration of unmanned aircraft weighing more than 0.55 lbs. This drone is not registered for FAA use. For more information, please visit www.faa.gov.

WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Sharper Image® name and logo (including the 77 logo and Tamron's Tamron logo) are trademarks or registered trademarks. ©2017 Sharp Corporation. All rights reserved.

The product and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. Altering, copying or reproducing any of the trademarks or copyright notices on this package is not permitted.

PATENT PENDING
Patented in China

CONTENTS

Drone Aero Stunt LED

INSIDE THE BOX

- Drone Controller
- USB Charge Cable

REPLACE PROPELLERS

Each blade has a tab on it. Pull the tab to remove the propeller. Replace with new ones. Pull them out carefully.

Each blade has a tab on it. Pull the tab to remove the propeller. Replace with new ones. Pull them out carefully.

CHARGING/BATTERY

REMOTE

DRONE

Turn off the drone before charging.
Connect the USB Charge Cable to the charge port.
Connect the USB Charge Cable to the power source.

Note: The USB Charge Cable is not included. Please purchase a USB Charge Cable separately.

OVERVIEW

PROPELLER
LANDING FEET
TURN
FLIGHT AND ROTATE
TRANSMITTER (Forward/Backward)
SPEED
ON/OFF SWITCH

STATUS LIGHT
FLIP
FLIGHT
NAVIGATION AND STUNTS
TURN (Left/Right)
AUTO ORIENTATION

OPERATING DRONE

1 Pre-Flight Checklist

- Read the manual and instructions.
- Install remote batteries (page 4).
- Make sure the drone and remote are powered off.
- Install the drone.
- Charge batteries (page 4).

2 Choose an Indoor Location

Choose an indoor location for the drone to fly. The drone should be at least 10 feet away from people and buildings.

3 Pairing Drone

Turn on the remote and the drone. Press the pairing button on the remote and the drone. The drone will be paired to the remote.

4

Turn on the remote and the drone. Press the pairing button on the remote and the drone. The drone will be paired to the remote.