

Reference

When the car owner with remote stays beside the vehicle long, the doors will be open and close repeatedly. You can set [auto door PAUSE] by pressing button (Y→Y†) for 0.5 second simultaneously.

When the vehicle disarmed, [auto door PAUSE] is cancelled automatically.

5) Driving door lock(Ignition Lock)

Press button I or II and choose [IG LOCK] and press button III for 0,5 second. Choose  hen the icon blinks.

Press button III for a long time  tops blinking then [IG LOCK] is selected.

This function enables your vehicle to automatically lock the doors in 30 seconds after starting.

On the contrary, the vehicle will automatically unlock the doors when you finish the starting.

6) Shock sensing

Press button I or II and choose [SHOCK] and press button III for 0,5 second. Choose  hen the icon blinks.

Press button III for a long time,  stops blinking then shock sensing is off.

example) It is useful when you or your baby sleep in the vehicle, or your pet stays in the vehicle.

7) Timer start mode

Press button I or II and choose [TIMER] and press button III for 0,5 second. Choose  hen the icon blinks.

Press button III for a long time,  stops blinking then [TIMER] is selected.

The vehicle will automatically start at reserved time every 24(3) hours.

[MENU] → [SETUP] → [TIMER]

Note

Timer start mode should be used only in open areas. Never start and run the vehicle in an closed space such as a garage or carport because of exhaust gas.

8) Turbo mode

Press button I or II and choose [TURBO] and press button III for 0,5 second. Choose  hen the icon blinks.

Press button III for a long time  stops blinking then [TURBO] is selected.
Under this mode, engine keeps running for 30second(it can be changed to 2 minute by optional setting) after key has been taken from the ignition.
This mode is useful for Turbo vehicle that need to be cooled down after long drive.
This mode can be used when parking brake (emergency brake) is ON. (Manual vehicle only)


9) Owner call

Press button I or II and choose [CALL] and press button III for 0,5 second. Choose  hen the icon blinks.
Press button III for a long time,  stops blinking then [CALL] is selected.
This mode allows other people to call you by knocking twice on  the front window of the car.
This mode operated in Arming mode only.
You can recognize this call through the icon  the remote OLED.
Press button IV for 0,5 second to stop the call signal.

2. Option setting (E502AS Only)

MENU → OPTION → CHECK

Press button IV for a long time and select [MENU] → [OPTION] → [CHECK].
Press the button III long, the present state of options is displayed.

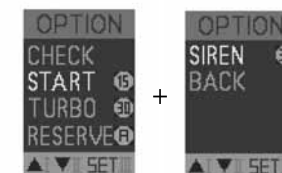

1) Length of starting - 15minutes/25minutes

After auto start, set the starting keeping time.
Press button I or II and choose [STARTING TIME] and press button III for 0,5 second. Choose  hen the icon blinks.
Press button III for a long time  stops blinking then 15 minutes of starting time is selected.

2) Length of turbo - 30seconds/2minute

It is to set turbo length of turbo.
Press button I or II and choose [TURBO TIME] and press button III for 0,5 second. Choose  hen the icon blinks.

Press button III for a long time, [30] ops blinking then 30 seconds of length of turbo is selected.

3) Reservation method - auto/manual

It is to set reservation method of manual vehicle.

Press button I or II and choose [RESERVATION METHOD] and press button III for 0,5 second. Choose [R] then the icon blinks.

Press button III for a long time, [R] tops blinking then auto reservation mode is selected.

4) Siren - 30seconds/60seconds

It is to set the siren working hour during panic mode.

Press button I or II and choose [SIREN] and press button III for 0,5 second. Choose [30] then the icon blinks.

Press button III for a long time, [30] tops blinking then 30 seconds of siren working hour is selected.

* Under factory setting, siren working hour is 10 seconds for shock and 30 seconds for theft. If you want to change the siren working hour for shock to 20 seconds, set the [SIREN] at 60 seconds.

3. Carkeeping book (exchange time of supplies) (E502-U Only)

MENU → KEEPING →

Press button IV for a long time to have menu



1) Engine oil

- After changing engine oil of the car, press button IV long and move to [MENU] → [KEEPING] → [ENGINE OIL]
- According to your pressing button I repeatedly, screen moves to [BACK] - [EXC] [PER] choose [EXC]
- Press button III long, then the present running distance in speed indicator of your car is displayed on OLED.
(example: when the running distance is 45000mi)
- Press button I and choose [PER]



- ⑤ Whenever you press button II, number increases 1000mi each and blinks.
(example:If you want to change engine oil every 7000mi, set the number at 7000)
- ⑥ Press button III long, number's increase stops and this option is completed.
- ⑦ When you exchange engine oil again, you can change only **EXC** without changing **PER**
-when the running distance is 52000mi, [ENG OIL]  green and chirps indicate you time of exchange.

2) Air filter

- ① After changing air filter of the car, press button IV long and move to [MENU] → [KEEPIN] → [A FILTER]
- ② According to your pressing button I repeatedly, screen moves to [BACK] - **EXC** **PER** choose **PER**
- ③ Press button III long, the present running distance in speed indicator of your car is displayed on OLED.
(example:when the running distance is 45,000mi)
- ④ Press button I and choose **PER**



- ⑤ Whenever you press button II, number increases 1,000mi each and blinks.
(example:If you want to change air filter every 7,000mi, set the number at 7,000)
- ⑥ Press button III long, then number's increase stops and this option is completed.
- ⑦ When you exchange air filter again, you can change only **EXC** without changing **PER**
-when the running distance is 52,000mi, [A FILTER]  green and chirps indicate you time of exchange

3) Gearbox oil

- ① After changing gearbox oil of the car, press button IV long and move to [MENU] → [KEEPING] → [GEAR OIL].
- ② According to your pressing button I repeatedly, screen moves to [BACK] - **EXC** **PER** choose **EXC**
- ③ Press button III long, the present running distance in speed indicator of your car is displayed on OLED.
(example:when the running distance is 45000mi)
- ④ Press button I and choose **PER**
- ⑤ Whenever you press button II, number increases 1000mi each and blinks.
(example:If you want to change gearbox oil every 7000mi, set the number at 7000)



- ⑥ Press button III long, then number's increase stops and this option is completed.
- ⑦ When you exchange gearbox oil again, you can change only **EXC** without changing **PER**.
 - when the running distance is 52000mi, [GEAR OIL] green and chirps indicate you time of exchange.

4) Brake pad

- ① After changing brake pad of the car, press button IV long and move to [MENU] → [KEEPING] → [BRK PAD].
- ② According to your pressing button I repeatedly, screen moves to [BACK] - **EXC** **PER** choose **EXC**.
- ③ Press button III long, the present running distance in speed indicator of your car is displayed on OLED.
(example:when the running distance is 45000mi)
- ④ Press button I and choose **PER**.
- ⑤ Whenever you press button II, number increases 1000mi each and blinks.




(example:If you want to change brake pad every 7000mi, set the number at 7000)

- ⑥ Press button III long, then number's increase stops and this option is completed.
- ⑦ When you exchange brake pad again, you can change only **EXC** without changing **PER**.
 - when the running distance is 52000mi, [BRK PAD] green and chirps indicate you time of exchange.

4. Factory setting

MENU → SETUP →

Press button IV for a long time to have menu

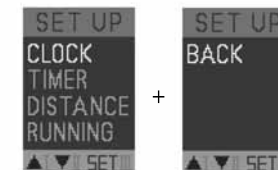

1) Setting current time

- ❶ Press button I shortly then 'hour' blinks and increases.
- ❷ Press button II shortly then 'minute' blinks and increases.
- ❸ After setting the current time, press button III for 2 seconds then current time stops blinkir and the time is set up.

If the remote does not be handled for 20 seconds, it will return to factory setting.

Reference

If you change battery within 20 seconds, current time is maintained.



2) Reservation time (E502AS Only)

- ❶ Press button I shortly then 'hour' blinks and increases.
- ❷ Press button II shortly then 'minute' blinks and increases.
- ❸ After setting the reservation time, press button III for 2 seconds then reservation time stops blinking and the time is set up.

If the remote does not be handled for 20 seconds, it will return to factory setting.



Note

These settings are for using the function "exchange time of supplies".
But owner must not set up voluntary. These must be in the state of setting of expert
installing shop when you purchase it.

3) distance confirmation, running distance

Operation is subject to the following two conditions :

- (1) This Device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution : Any changes or modifications in construction of this device which are not expressly approved the party responsible for compliance could void the user's authority to operate the equipment.