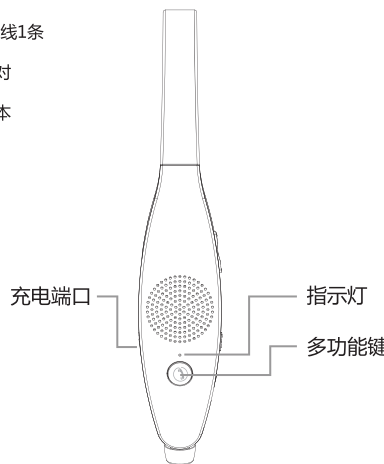 
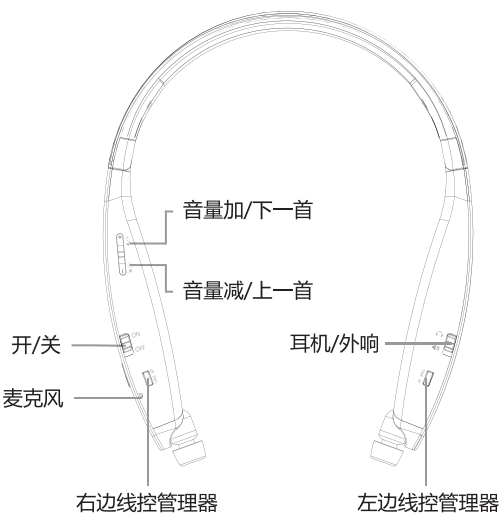 
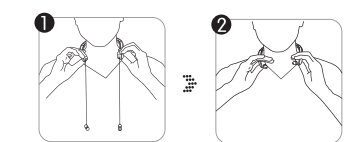 
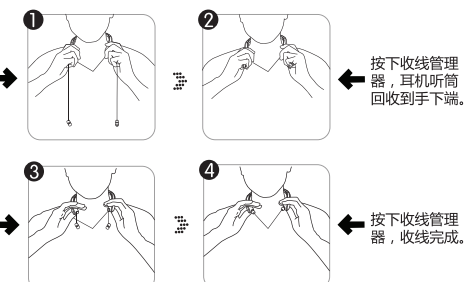 
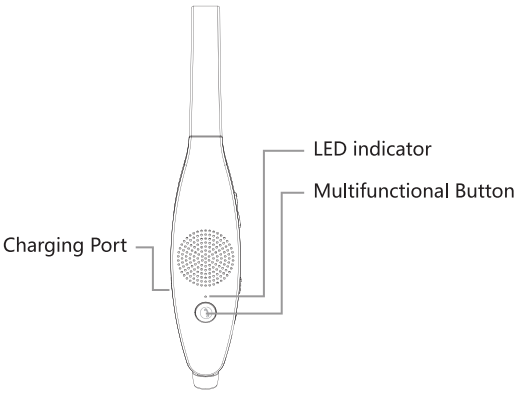 
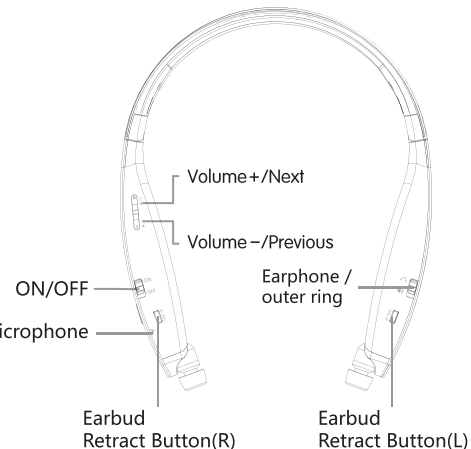 
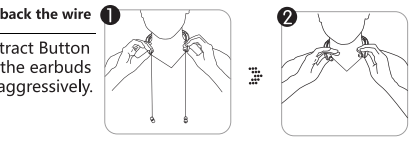 
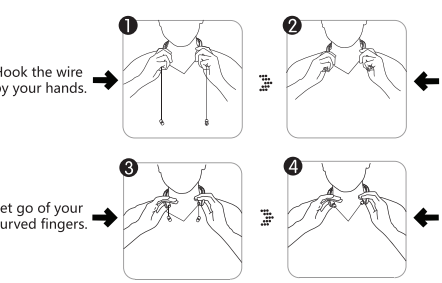 


颈挂式音响 Foldable Neckband Speaker 快速入门指南 Quick Guide SX-805	颈挂式音响的使用 为正确而安全地使用本音响，请在使用前详细阅读本手册，并保存好。 使用颈挂式音响耳机模式时应注意下列事项： 应尽量避免长期高音量使用耳机模式，以避免损伤听力。 如所处环境有潜在危险，请暂停使用耳机，以确保安全。 应合理控制收听耳机时的音量和时间。 不应把音量调得太高，导致您听不到四周的声音。如果出现耳鸣可能是音量调得太高，请将音量调低。 不建议在驾驶时使用耳机听取。 用干的软布擦拭便可！应避免音响进水，以免导致音响的损害。 如果使用耳机感觉明显不适，有刺激感或其它不良反应，应立即停止使用。 不应将音响储存或使用于温度低于-15°C(5°F)或高于55°C (131°F) 的环境，以免影响音响寿命。 充电和电池： 使用充电线给本音响充电前，请先检查充电线是否为原装。 警告：建议使用配套的充电线给音响充电，如果使用不配套的充电线可能会损坏电池或音响。 本音响使用内置式不可拆卸式充电电池。请勿尝试从音响中取出电池，以免损坏音响。	1. 充电前，关闭耳机。 2. 将USB充电线插入音响充电插孔，另一端的USB端口插到USB充电器或其他充电装置。此时音响开始充电，充电时，红灯亮起。 3. 音响充满电，约需3小时，充满后红灯熄灭。 ■ 耳机包装清单： • 颈挂式音响1个 • USB充电线1条 • 耳塞套2对 • 说明书1本  (2)	开机/关机： 1. 将开关推到“ON”，音响会提示“开机”并伴有振动，此时，音响开机。 2. 在开机状态下，将开关推到“OFF”，音响提示“关机”，此时，音响关机。  (3)	蓝牙配对步骤： 1. 请将颈挂式音响和手机（或其他作用连接的装置）的距离控制在1米范围内，越近越好。 2. 将音响拨到“ON”，5S后会提示“进入配对”，此时蓝灯快闪烁。 3. 打开手机或其他所需连接装置的蓝牙搜索功能，手机上会显示已找到“SX-805”。 4. 选择“SX-805”（部分手机需输入“0000”作为配对密码，颈挂式音响会自动与手机连接，蓝灯闪烁）。 将耳机跟两部手机连接 1. 与第一部手机配对成功后，关闭第一部手机蓝牙，将SX-805拨动开关拨到OFF位； 2. 按照与第一部手机配对的步骤与第二部手机配对； 3. 打开第一步手机蓝牙功能，选择SX-805，完成与两部手机的配对。 注： 1、当已经配对过的蓝牙设备处于蓝牙开启状态并在连接范围内，只需要将SX-805开机就可以自动回连到上次连接的设备；如果不能自动回连，请打开蓝牙设备的蓝牙菜单，点击已连接过“SX-805”就可以回连。 2、配对时间超3分钟，音响会自动关机；超出范围3分钟内回到有效距离可以自动回连上一次连接的设备。 3、同时连接两部手机的情况下，两部手机不能同时播放音乐；需暂停其中一部手机的音乐播放，才能让另一部手机继续播放音乐。两部手机都可进行蓝牙电话功能，可在iPhone上显示颈挂式音响剩余电量。	接通与挂断/来电震动提醒 接听来电： 当手机与音响连接后，有来电时，音响会有提示音并伴随着振动。播报来电号码“134.....”按“多功能键”1次可接听来电；或用您的手机直接接听来电。 挂断通话： 正在通话时，可按一次音响的“多功能键”即可挂断通话，或用您的手机直接挂断通话。 拒绝通话： 当听到有来电时，音响会有提示音并伴随着振动，此时，长按2秒“多功能键”通话便会拒绝；或用您的手机拒绝通话。 末位重拨： 双击“多功能键”即可拨出手机最后一次拨打的号码。 电话转移： 通话时，可双击音量减键，在手机与音响间相互切换通话。 中英文切换： 同时按住多功能键和音量加键2秒；中、英文可相互转换。 EQ切换： 在播放音乐时可双击“音量减”键切换不同的音效；低音加强，正常，高音加强。默认低音加强，根据不同的音乐，不同的爱好，选择最舒适的音效。 电量提示： SX-805每次开会提示音响的剩余电量的工作时长，如“电量满、电量充足、电量中等、电量低”。 耳机/外响： 将开关拨到“□”模式，SX-805就会进入耳机状态，将开关推到“◀▶”模式，SX-805会进入外响状态。	语音拨号 手机在解锁状态下双击“音量加键”听到提示音后说“打电话给XXX”手机就会自动拨出该电话（手机内需存有XXX电话）部分手机不适用。 播放/暂停 耳机正在音乐播放期间，单击“多功能键”可暂停音乐播放；单击“多功能键”可恢复音乐播放。 上一首/音量减：在播放音乐时可短按“—”，选择上一首音乐，长按“—”降低音量。 下一首/音量加：在播放音乐时可短按“+”，选择下一首音乐，长按“+”增加音量。 手机防丢提示 当手机与颈挂式音响连接后，音响离开手机约20米外，音响就会语音提示“超出连接范围”如果在三分钟内回到耳机，可自动与手机连接，超过3分钟不回到有效距离，10分钟后自动关机。 恢复出厂设置 开机状态下，长按多功能键，蓝灯闪3次，恢复出厂设置（注：音响连接状态下下，长按多功能键无法恢复出厂设置）。 技术参数 符合蓝牙标准：Bluetooth V4.1 支持：HSP、HFP、A2DP、AVRCP 发送功率：Class 2 无线连接范围：≤10m 操作频率范围：2.402 GHz-2.480GHz 充电时间：≤3 小时 扬声器播放时间：≈5 小时 待机时间：≥400 小时 扬声器通话：≥15 小时 耳机听取时间：≤32 Hours 耳机通话时间：≤34 Hours	温馨提示： 不正确收线方式 直接按下收线管 步骤一：将耳机 耳机听筒撞击壳 体力度很大，音 量损坏耳机线和 喇叭。  正确收线方式 为了延长耳机线和喇叭使用寿命，建议收线缓冲，按下图所示步骤操作！  (7)
For user’ s safety, please read this manual before using the speaker. The following matters should be paid attention to when using headphones： Please avoid under the high volume mode, because that will leads to hearing loss caused by noise. If you are in bad condition of potentially dangerous, please stop using headphones, in order to ensure safety. Users should be reasonable control volume and time when listening to the headphones. The volume should not be too high, cause you can't hear the voice around the volume，if volume is too high that may appear tinnitus, please lower down the volume. Don't recommend to listening music while driving. With dry soft cloth to clean the speaker! Should avoid throwing the headphone into the water，that will cause speaker damage. If you feel obvious discomfort, stimulation, or other adverse reaction hen use the headset, should immediately stop using it. The speaker should not be stored or used in temperature below 15°C (5°F) or higher than 55°C (131°F), otherwise will reduce speaker or battery life.	Charging and Battery: Before charging this speaker with charging cable, please check whether the charging cable is the original. Warning: please charging the speaker with original charging cable ,it may damage the battery or the speaker if you are using improperly charging cable .This speaker built-in rechargeable batteries, so do not attempt to remove the battery from the speaker to avoid damage it. 1. Before charging, it’ s best to turn off the headsr. 2. Insert the USB charging cable to speaker jack, the other and of the USBport into the USB charger or any other devices to start charging. The speaker red light flashing means it is charging.  (9)	3. The speaker need about 3 hours for fully charging, the red light goes off when fully charged. ■ Package content: • Headset 1pcs • USB charging cable 1pcs • Earbud 2pcs • User Manual 1pcs ON/OFF 1. Push “ON”, the speaker will prompt for “Power ON” with vibration; if red and bluelight flashing alternately means it’ s ready for pairing with your device. 2. Switch to OFF to turn off the speaker, it will prompt “power OFF”  (10)	Bluetooth connection steps: 1. Please keep your Foldable Neckband Speaker and mobile phone as close as you can, within 1 meter. 2. Switch to “ON”, it will prompts "pairing" after 5 seconds, and then Red and blue lights flashing alternately when speaker is on and ready for pairing. 3. Turn on “Bluetooth” in setting(your device) and find speaker name SX-805. 4. Click SX-805, Bluetooth Foldable Neckband Speaker gets connected with your mobile phone automatically. Some may require pass code which is 0000. Pair the headset with 2 mobile phones 1. After successfully paired with a mobile phone, close the Bluetooth function of the mobile phone, and switch the button of SX-805 to OFF. 2. Same procedure to get the 2nd mobile phone paired with the Bluetooth speaker. 3. Turn on the Bluetooth function of the 1st mobile phone; choose “SX-805” to finish the pairing status with the 2nd mobile phones. Note： 1. With you perviously paired device’ s Bluetooth turned on and in range，turn on SX-805. The headset will automatically reconnect to the same Bluetooth device that connected last time. If you have a perviously paired device that does not auto-reconnect，navigate to the Bluetooth settings menu on your device，turn on the Bluetooth feature，and select “SX-805” from your list of paired Bluetooth devices .	2. Pairing time exceeds 3 minutes, SX-805 will automatically shut down；in 3 minutes back to the effective distance can automatically return to the last connected device . 3. PS: If connected with two moblie phones, only mobile phone 1 supports wireless music and you can start conversation for both mobile phones. Battery check up through iPhone. Answer & End call / Incoming call vibration remind Answer phone call： When there is a incoming call, there will be a voice promt, 134.....578 (phone number will be broadcasted). Click MFB to answer, or just operate your mobile phone. End Call： Press the multifunction button to hang up calls, or by direct hang up your phone call. Reject call： When there is incoming call, speaker will broadcast the phone number with vibration. Long press the MFB to reject, or just reject it on your mobile phone. Last number redial： Double click MFB.	Call Transfer： Double click the volume “—” when calling to have call transfer between phone and speaker. Chinese/English Shift： Long press the MFB and volume “+” simultaneously for 2 seconds. EQ Shift： Double click the volume “—” when playing music to have different sound effect (low bass boost, normal, high pitch boost). Default setting is low bass boost. Choose your favorite sound effect base on your habit and music style. Power prompt： Each time turning on SX-805, it will report speaker battery power remaining, such as “battery full”, “battery level high”, “battery level medium”, “battery level low”，“recharge headset” . Headphone/speaker: Push the switch to “□”，SX-805 will work as headphone, and switch it to “◀▶”，it will work as speaker. Voice Dial： Unlock the mobile phone and double click the volume “+” to launch the voice dial, and then just speak the people name you want to call. This function can work only if your mobile phone support it.	Play/Pause/Tracks During music playing, single click MFB to pause music, and click again MFB toback to play. During music playing, single click “+ / —” to change songs. During the call or listening to music, user can long press “+” or “—” button to adjust the volume. Mobile phone anti-lost indicator When the Foldable Neckband Speaker connected to smart phone, if the distance between device and speaker out of 10 m, speaker will prompt. "Beyond the range of connections" .If coming back to the working distance within 3 min or after, the prompt will be off and reconnect automatically. If not coming back to the working distance in 10 min, speaker will be power off, please switch the button to the OFF and switch ON to the power on mode, speaker will back to work. Restore Factory Settings Long press the MFB when turn on the speaker until the blue light flashing 3 times. (Notes: It will not work when the speaker under connection status.) Technical Index • Correspond With：Bluetooth V4.1 • Support：HSP、HFP、A2DP、AVRCP • Transmitting Power：Class 2 • Working Distance：≤10m • Frequency Range：2.402 GHz-2.480GHz • Charge Time：≤3 Hours • Standby Time：≥400 Hours • Talk Time of Earphone：≥34 Hours • Music Time of Earphone：≤32 Hours • Talk Time of Speaker：≥15 Hours • Music Time of Speaker：≈5 Hours	Tips: Wrong way of setting back the wire Press the Earbud Retract Button directly. In this way, the earbuds will hit the headset aggressively.  Correct way of setting back the wire In order to prolong the working life of the headset, please setback the wire slowly, and follow the steps shown below.  (15)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.