


Microwave Oven Instructions

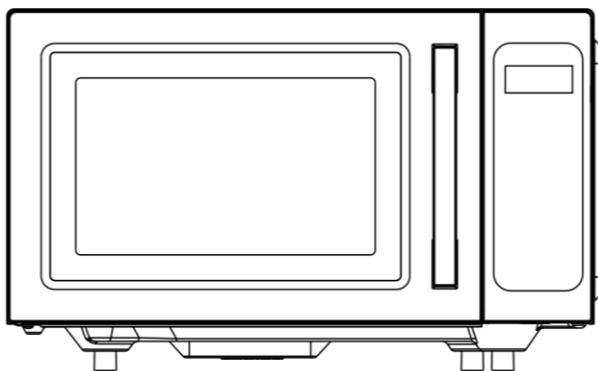

Model: SEE250W9H-SABC0A(P100M25ASLV-W9)

Owner's Manual

Please read these instructions carefully before installing and operating the oven.

--	--	--	--	--	--

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

CONTENT

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	1
IMPORTANT SAFETY INSTRUCTIONS	2
GROUNDING INSTRUCTIONS	3
INSTALLATION GUIDE	4
COOKING UTENSILS GUIDE.....	4
SPECIFICATIONS	5
PRODUCT DIAGRAM AND CONTROL PANEL.....	5
OPERATION INSTRUCTIONS	6
Microwave cooking	7
Deodorization	8
Defrost	8
Save cooking program	8
How to use the X2 button	9
Setting memory function	9
Restore factory defaults setting	11
Button adhesion protection	11
CLEANING AND CARE	11

IMPORTANT SAFETY INSTRUCTIONS

WARNING!--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on page 1.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" on page 4.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Do not operate the oven when empty.
6. Some products such as whole eggs and sealed containers -for example, closed glass jars- are able to explode and should not be heated in this oven.
7. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
8. HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE. Use caution when removing hot items.
9. To reduce the risk of fire in the oven cavity:
 - a) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - c) If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
 - d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
10. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to person:
 - a) Do not overheat the liquid.
 - b) Stir the liquid both before and halfway through heating it.
 - c) Do not use straight-sided containers with narrow necks.
 - d) After heating, allow the container to stand in the microwave oven for a short time before removing the container.

e) Use extreme care when inserting a spoon or other utensil into the container.

11. Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.
12. Do not cover or block any openings on the appliance.
13. Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
14. Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
15. Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
16. This appliance should be serviced only by qualified service personnel, contact nearest authorized service facility for examination, repair, or adjustment.
17. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
18. The microwave oven is for commercial use.
19. This device complies with Part 18 of the FCC Rules.
20. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This

appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING!— Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and if it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

Electrical Requirements

The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and grounded.

Power Cord

1. A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If long cord or extension cord is used:
 - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord must be a grounding-type 3-wire cord, and The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. This microwave oven must be placed on a flat.
3. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
4. Make sure that the power cord is undamaged and does not run under the oven or over any hot or sharp surface.
5. The socket must be readily accessible so the microwave oven can be easily unplugged in an emergency.

COOKING UTENSILS GUIDE

This section lists which utensils can be used in this microwave, which have limited use for short periods, and which should not be used in this microwave.

RECOMMENDED

Microwave browning dish — Use to brown the exterior of small items such as steaks, chops, or

pancakes. Follow the directions provided with your browning dish.

Microwaveable plastic wrap — Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.

Paper towels and napkins — Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

Glass and glass-ceramic bowls and dishes — Use for heating or cooking.

Paper plates and cups — Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.

Wax paper — Use as a cover to prevent spattering.

Thermometers — Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

LIMITED USE

Aluminum foil — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (2.54cm) between aluminum foil and cavity.

Ceramic, porcelain, and stoneware— Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.

Plastic — Use only if labeled "Microwave Safe". Other plastics can melt.

NOT RECOMMENDED

Glass jars and bottles — Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

Paper bags — These are a fire hazard, except for popcorn bags that are designed for microwave use.

Styrofoam plates and cups — These can melt and leave an unhealthy residue on food.

Plastic storage and food containers — Containers such as margarine tubs can melt in the microwave.

Metal utensils — These can damage your oven. Remove all metal before cooking.

Note:



Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave on HIGH for 30 seconds. A dish which becomes very hot should not be used.

SPECIFICATIONS

Power Consumption	120V/60Hz, 1500W(microwave)
Output	1000W
Operation Frequency	2450MHz
Outside Dimensions(H x W x D)	11 ¹¹ / ₁₆ × 20 ¹ / ₂ × 16 ⁹ / ₁₆ in.
Oven Capacity	0.9cu.ft.
Net Weight	Approx.21.9lbs

PRODUCT DIAGRAM AND CONTROL PANEL

1. Door Safety Lock System
2. Oven Window
3. Cavity Floor
4. Control Panel
5. Display Screen
6. Set 0% power level and deodorization function.
7. Set 20% power level and defrost program.
8. Set 50% power level.
9. Set 70% power level.
10. Press to set microwave cooking program.
11. Cooking time x 2
12. Press to pause or cancel programs.
13. Press to start programs.
14. Press to set time and save programs.

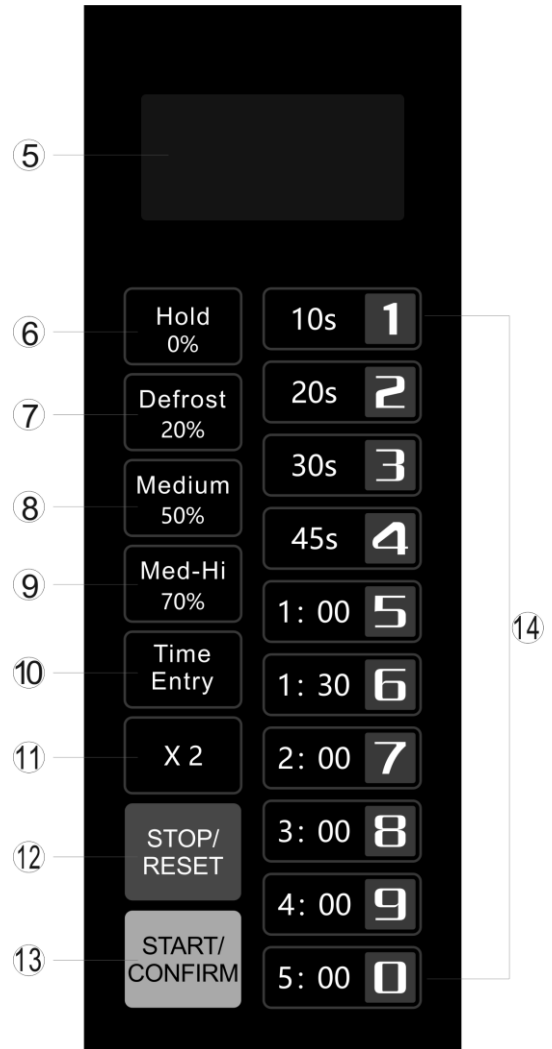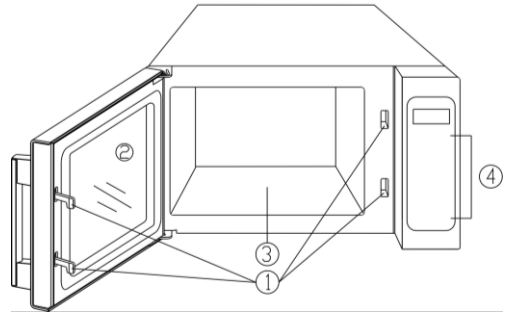

OPERATION INSTRUCTIONS

- When the oven is first plugged in, a beep will sound and the display screen will show "- - -". Press STOP/RESET button or there is no operation for some time, the oven will enter to power saving mode.

Or open the oven door, the display screen will show "0", the oven will enter to standby mode.

- During setting, a bee will sound and the system will return to standby mode if there is not any operation within 1 minute.
- During cooking, press STOP/RESET button once to pause the program, then press START/CONFIRM button to resume. Press STOP/RESET button twice to cancel the program.
- After cooking ends, the display screen will show "End" and the beep will sound, until open the oven door, the system returns to standby mode. For microwave cooking, deodorization and defrost, after opening the oven door, the display screen will show the total cooking time, the first stage of power level icon and "Time".
- In the process of operation, press a valid button, the buzzer rings once, but if press a invalid button, the buzzer rings twice.
- When cooking pauses or ends, the fan continues to work until it enters power-saving state, and then the fan is turned off. If the power-saving mode is set to "OP: 44", the fan will delay working for 1 minute (when cooking continuously for 2 minutes or more, the fan will delay working for 3 minutes).
- Countdown display, with the seconds digit displayed in base 60 seconds, for example, if there are 66 seconds left, it will display "1:06".

MICROWAVE COOKING

Your oven can be programmed for up to 3 stage cooking programs.

Suppose you want to set the following cooking program.

20% power + 1 minute and 30 seconds



70% power + 5 minutes



50% power + 10 minutes

1. In standby mode, press TIME ENTRY button once. The display screen will show "00:00", "Hi" "Time".
2. Press number button 1, 3, 0. The display screen will show "01:30", "Hi", "Time".
3. Press DEFROST button once. The display screen will show "P-20", "Def".
4. Press TIME ENTRY button once. The display screen will show "S-2" for 2 seconds, then "00:00", "Hi", "Time".
5. Press number button 5, 0, 0. The display screen will show "05:00", "Hi", "Time".
6. Press MED-HI button once. The display screen will show "P-70", "M-HI".
7. Press TIME ENTRY button once. The display screen will show "S-3" for 2 seconds, then "00:00", "Hi", "Time".
8. Press number button 1, 0, 0, 0. The display screen will show "10:00", "Hi", "Time".
9. Press MEDIUM button once. The display screen will show "P-50", "Med".
10. Press START/CONFIRM button to start.

Press button	/	MED-HI	MEDIUM	DEFROST	HOLD
Power	100%	70%	50%	20%	0%
Display	P100	P-70	P-50	P-20	P-00
Icon display	HI	M-HI	Med	Def	Hold

NOTE:

- If you want to set 100% power, press any one of these buttons twice: MED-HI, MEDIUM, DEFROST, HOLD.

- Open the oven door after cooking ends, the display screen will show "16:30", "Def", "Time". At this time, you can place food in oven, close the oven door and press START/CONFIRM button to start again. Or press STOP/RESET button once to return to standby mode.
- If the set cooking time exceeds the maximum value, pressing START/CONFIRM button will be ineffective, and the system will return to the display of step 1.
- During cooking, you can check the current power level by pressing TIME ENTRY button.
- The longest cooking time is set in OP: 7-.

DEODORIZATION

1. In standby mode, press HOLD button repeatedly to select deodorization time, the display screen will show "05:00" or "10:00", "Hi", "Time".
2. Use number buttons to add time, the program will start 2 seconds later.

Press number button	1	2	3	4	5	6	7	8	9	0
Each increases time	0:10	0:20	0:30	0:45	1:00	1:30	2:00	3:00	4:00	5:00

NOTE:

- Open the oven door after cooking ends, the display screen will show the time before, "Hi", "Time". At this time, you can close the oven door and press START/CONFIRM button to start again. Or press STOP/RESET button once to return to standby mode.
- The longest cooking time is set in OP: 7-.

DEFROST

1. In standby mode, press DEFROST button repeatedly to select defrosting time, the display screen will show "01:00" or "02:00", "Def", "Time".
2. Use number buttons to add time, the program will start 2 seconds later.

Press number button	1	2	3	4	5	6	7	8	9	0
Each increases time	0:10	0:20	0:30	0:45	1:00	1:30	2:00	3:00	4:00	5:00


NOTE:

- Open the oven door after cooking ends, the display screen will show the time before, "Def", "Time". At this time, you can place food in oven, close the oven door and press START/CONFIRM button to start again. Or press STOP/RESET button once to return to standby mode.
- The longest cooking time is set in OP: 7-.

SAVE COOKING PROGRAM

For frequently used cooking program, you can save it to a number button. Each of the number buttons is pre-set with a cooking program. Each number can save up to 3 stage cooking programs.

To save: Suppose you want to save cooking programs in number button 4.

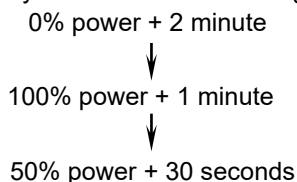

1. Open the oven door in standby mode.
2. Press and hold number button 1 for 5 seconds. The display screen will show "PrOG".
3. Press number button 4. The display screen will show "4" for 2 seconds, then the first cooking time, power icon saved before the menu and "Time".

4. Press number button 2, 0, 0. The display screen will show "02:00", "Hi", "Time".
5. Press HOLD button once. The display screen will show "P-00", "HOLD".
6. Press TIME ENTRY button once. The display screen will show "S-2" for 2 seconds, then the second cooking time, power icon saved before the menu and "Time".
7. Press number button 1, 0, 0. The display screen will show "01:00", "Hi", "Time".
8. Press HOLD button twice. The display screen will show "P100", "Hi".
9. Press TIME ENTRY button once. The display screen will show "S-3" for 2 seconds, then the third cooking time, power icon saved before the menu and "Time".
10. Press number button 3, 0. The display screen will show "00:30", "Hi", "Time".
11. Press MEDIUM button once. The display screen will show "P-50", "Med".
12. Press START/CONFIRM button to start. The display screen will show "PrOG".
13. Press STOP/RESET button once, the system returns to standby mode.

Default Time (100% power level)

Number button	1	2	3	4	5	6	7	8	9	0
Cooking time	0:10	0:20	0:30	0:45	1:00	1:30	2:00	3:00	4:00	5:00

NOTE:

- During setting, if close oven the door, the system will return to standby mode directly.
- If the set cooking time is invalid value, pressing START/CONFIRM button will be ineffective, and the system will return to the display of step 2.
- The longest cooking time is set in OP: 7-.

To start:

Press number button 4 once. The display screen will show "4" for 2 seconds, then the program will start automatically. The display screen shows the countdown to the total cooking time and the current stage power icon. Open the oven door after cooking ends, the system returns to standby mode.

HOW TO USE THE X2 BUTTON

This feature doubles the original cooking time. After power failure, the settings can be memorized.

For example, doubling the cooking program time for numeric button 4:

1. In standby mode, press X2 button once. The display screen will show "X2".
2. Press number button 4 once. The display screen will show "4" for 2 seconds, then the program will start automatically. The display screen shows the countdown to the total cooking time and the current stage power icon. Open the oven door after cooking ends, the system returns to standby mode.

SETTING MEMORY FUNCTION

After power failure, the settings can be memorized.

1. In standby mode, open the oven door.
2. Press and hold number button 2 for 5 seconds. The display screen will show "OP:- -".
3. Press corresponding number button repeatedly to select type.
4. Press START/CONFIRM button to start. The display screen will show "OP:- -".
5. Press STOP/RESET button once, the system returns to standby mode.

Number button	Set Project	Type	Note
1	End State	OP:10(Default)	Cooking is over, with 3 beeps.
	Beeping method	OP:11	Cooking is over,

			the buzzer keeps sounding.
		OP:12	Cooking is over, let out 5 rapid beeps repeatedly.
2	Beep volume	OP:20	Silent mode, which means turning off all buzzing sounds.
		OP:21	The buzzing volume is low.
		OP:22(Default)	The buzzing volume is middle.
		OP:23	The buzzing volume is high.
3	Button sound switch	OP:30	Turn off button sound.
		OP:31(Default)	Turn on button sound.
4	Power saving mode	OP:40	Standby, pause mode, no operation for 30 seconds, the system enters power saving mode.
		OP:41	Standby, pause mode, no operation for 45 seconds, the system enters power saving mode.
		OP:42	Standby, pause mode, no operation for 1 minute, the system enters power saving mode.
		OP:43	Standby, pause mode, no operation for 2 minute, the system enters power saving mode.
		OP:44(Default)	Do not enter power saving mode.
5	Fast switching	OP:50	During cooking countdown, the number buttons cannot be pressed to switch to the corresponding memory menu.
		OP:51(Default)	During cooking countdown, the number buttons can be pressed to switch to the corresponding memory menu.
6	Door reset	OP:60(Default)	During cooking countdown, the door is opened and the system enters a pause state.
		OP:61	During the cooking countdown, open the door and the system returns to standby mode.
7	Total cooking time	OP:70(Default)	The longest time is 60 minutes.
		OP:71	The longest time is 10 minutes.
8	Manual menu settings	OP:80	Disable manual microwave cooking, deodorization, and defrost functions.
		OP:81(Default)	Enable manual microwave cooking, deodorization, and defrost functions.
9	Number of memory menus	OP:90(Default)	The number of memory menus is "0-9".
		OP:91	The number of memory menus is "0-99".

NOTE:

- During setting, if close oven the door, the system will return to standby mode directly.
- In power saving mode, the display screen turns off and the fan is turned off. At this time, pressing any button has no response (the buzzer does not sound). Open or close the furnace door, the system exits power saving mode and enters standby mode.
- If the buzzer is set to "OP: 10", in the cooking ends state, the system will automatically enter power saving state based on the OP: 4- setting if there is on operation.

RESTORE FACTORY DEFAULTS SETTING

In standby mode, press and hold START/CONFIRM button, then press number button 0, a beep will sound, and the display screen will show "00" or "11".

- When "00" is displayed: Press START/CONFIRM button once within 10 seconds, the display screen will show "11", the system will be reset to factory settings, and it will return to standby mode automatically after 3 seconds; Otherwise, the system will return to standby mode automatically after 10 seconds.
- When "11" is displayed: After 3 seconds, the system returns to standby mode automatically.

NOTE: '00' represents that the system is currently in non factory settings, while '11' represents that the system is currently in factory settings.

BUTTON ADHESION PROTECTION

In any state, if any button on the control panel is adhesion for 1 minute, the program stops working immediately, the display shows "FAIL" and a "DE-" will sound. If the button is adhesion all the time, a "DE-" will sound every one minute. Any button is invalid at this time. After troubleshooting, press STOP/RESET button to return standby mode.

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe

with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.

3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. The oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent.
8. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
9. If the light bulb burns out, please contact customer service to have it replaced.
10. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
11. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.