



**RAM**

# RAM 1500

2021 OWNER'S MANUAL

# TABLE OF CONTENTS

|    |                                             |     |
|----|---------------------------------------------|-----|
| 1  | INTRODUCTION .....                          | 10  |
| 2  | GETTING TO KNOW YOUR VEHICLE .....          | 17  |
| 3  | GETTING TO KNOW YOUR INSTRUMENT PANEL ..... | 104 |
| 4  | STARTING AND OPERATING .....                | 140 |
| 5  | MULTIMEDIA .....                            | 236 |
| 6  | SAFETY .....                                | 310 |
| 7  | IN CASE OF EMERGENCY .....                  | 373 |
| 8  | SERVICING AND MAINTENANCE .....             | 395 |
| 9  | TECHNICAL SPECIFICATIONS .....              | 467 |
| 10 | CUSTOMER ASSISTANCE .....                   | 479 |
| 11 | INDEX .....                                 | 483 |

1

2

3

4

5

6

7

8

9

10

11

## INTRODUCTION

|                                                |    |
|------------------------------------------------|----|
| Symbols Key .....                              | 11 |
| <b>WARNINGS AND CAUTIONS</b> .....             | 11 |
| <b>VAN CONVERSIONS/CAMPERS</b> .....           | 11 |
| <b>VEHICLE MODIFICATIONS/ALTERATIONS</b> ..... | 11 |
| Symbol Glossary .....                          | 12 |

## GETTING TO KNOW YOUR VEHICLE

|                                                                      |    |
|----------------------------------------------------------------------|----|
| <b>KEYS</b> .....                                                    | 17 |
| Key Fob .....                                                        | 17 |
| <b>SENTRY KEY</b> .....                                              | 20 |
| <b>IGNITION SWITCH</b> .....                                         | 21 |
| Keyless Enter-N-Go — Ignition .....                                  | 21 |
| <b>REMOTE START — IF EQUIPPED (GASOLINE)</b> .....                   | 22 |
| How To Use Remote Start .....                                        | 22 |
| To Exit Remote Start Mode .....                                      | 23 |
| Remote Start Front Defrost Activation — If Equipped .....            | 24 |
| Remote Start Comfort Systems — If Equipped .....                     | 24 |
| Remote Start Windshield Wiper De-Icer Activation — If Equipped ..... | 25 |
| Remote Start Abort Message .....                                     | 25 |
| <b>REMOTE START — IF EQUIPPED (DIESEL)</b> .....                     | 25 |
| How To Use Remote Start .....                                        | 25 |

|                                                      |    |
|------------------------------------------------------|----|
| <b>VEHICLE SECURITY SYSTEM — IF EQUIPPED</b> ..      | 26 |
| To Arm The System .....                              | 26 |
| To Disarm The System .....                           | 26 |
| Rearming Of The System .....                         | 27 |
| Security System Manual Override .....                | 27 |
| <b>DOORS</b> .....                                   | 27 |
| Manual Door Locks .....                              | 27 |
| Power Door Locks — If Equipped .....                 | 28 |
| Power Side Steps — If Equipped .....                 | 28 |
| Keyless Enter-N-Go — Passive Entry .....             | 28 |
| Automatic Unlock Doors On Exit — If Equipped .....   | 30 |
| Automatic Door Locks — If Equipped .....             | 30 |
| Child-Protection Door Lock System — Rear Doors ..... | 31 |
| <b>STEERING WHEEL</b> .....                          | 31 |
| Tilt/Telescoping Steering Column .....               | 31 |
| Heated Steering Wheel — If Equipped .....            | 32 |
| <b>DRIVER MEMORY SETTINGS — IF EQUIPPED</b> ...      | 32 |
| Programming The Memory Feature .....                 | 33 |
| Linking And Unlinking The Key Fob To Memory .....    | 33 |
| Memory Position Recall .....                         | 34 |
| <b>SEATS</b> .....                                   | 34 |
| Manual Adjustment (Front Seats) — If Equipped .....  | 34 |
| Manual Adjustment (Rear Seats) .....                 | 36 |

|                                                                               |    |
|-------------------------------------------------------------------------------|----|
| Power Adjustment (Front Seats) — If Equipped .....                            | 36 |
| Heated Seats — If Equipped .....                                              | 38 |
| Ventilated Seats — If Equipped .....                                          | 39 |
| Plastic Grocery Bag Retainers .....                                           | 39 |
| Head Restraints .....                                                         | 40 |
| <b>UNCONNECT VOICE RECOGNITION</b> .....                                      | 41 |
| Introducing Voice Recognition .....                                           | 41 |
| Basic Voice Commands .....                                                    | 42 |
| Get Started .....                                                             | 43 |
| Additional Information .....                                                  | 43 |
| <b>DRIVER ADJUSTABLE PEDALS — IF EQUIPPED</b> .....                           | 43 |
| <b>MIRRORS</b> .....                                                          | 44 |
| Inside Rearview Mirror .....                                                  | 44 |
| Outside Mirrors .....                                                         | 46 |
| Outside Automatic Dimming Mirrors — If Equipped .....                         | 47 |
| Power Mirrors .....                                                           | 47 |
| Power Folding Outside Mirrors For Standard And Trailer Tow — If Equipped .... | 47 |
| Trailer Towing Mirrors — If Equipped .....                                    | 48 |
| Heated Mirrors — If Equipped .....                                            | 48 |
| Tilt Side Mirrors In Reverse — If Equipped .....                              | 48 |

**UNIVERSAL GARAGE DOOR OPENER****(HOMELINK®) — IF EQUIPPED .....49**

|                                         |    |
|-----------------------------------------|----|
| Before You Begin Programming            |    |
| HomeLink® .....                         | 49 |
| Erasing All The HomeLink® Channels..... | 49 |
| Identifying Whether You Have A Rolling  |    |
| Code Or Non-Rolling Code Device .....   | 49 |
| Programming HomeLink® To A Garage       |    |
| Door Opener .....                       | 50 |
| Programming HomeLink® To A              |    |
| Miscellaneous Device.....               | 51 |
| Reprogramming A Single HomeLink®        |    |
| Button .....                            | 51 |
| Canadian/Gate Operator Programming..... | 51 |

**EXTERIOR LIGHTS.....52**

|                                          |    |
|------------------------------------------|----|
| Headlight Switch .....                   | 52 |
| Multifunction Lever .....                | 53 |
| Daytime Running Lights (DRLs) .....      | 53 |
| High/Low Beam Switch .....               | 53 |
| Automatic High Beam Headlamp             |    |
| Control — If Equipped .....              | 53 |
| Flash-To-Pass.....                       | 54 |
| Automatic Headlights — If Equipped ..... | 54 |
| Parking Lights And Panel Lights .....    | 54 |
| Automatic Headlights With Wipers .....   | 54 |
| Headlight Delay.....                     | 55 |
| Lights-On Reminder .....                 | 55 |
| Fog Lights — If Equipped .....           | 55 |
| Turn Signals .....                       | 55 |
| Lane Change Assist — If Equipped .....   | 55 |

|                                          |    |
|------------------------------------------|----|
| Cargo Lights/Trailer Spotter Lights With |    |
| Bed Lights — If Equipped.....            | 56 |
| Battery Saver .....                      | 57 |

**INTERIOR LIGHTS .....57**

|                         |    |
|-------------------------|----|
| Courtesy Lights .....   | 57 |
| Illuminated Entry ..... | 58 |

**WINDSHIELD WIPERS AND WASHERS.....58**

|                                        |    |
|----------------------------------------|----|
| Windshield Wiper Operation .....       | 58 |
| Rain Sensing Wipers — If Equipped..... | 59 |

**CLIMATE CONTROLS .....60**

|                                         |    |
|-----------------------------------------|----|
| Automatic Climate Control Descriptions  |    |
| And Functions .....                     | 60 |
| Manual Climate Control Descriptions And |    |
| Functions.....                          | 63 |
| Automatic Temperature Control (ATC) —   |    |
| If Equipped .....                       | 65 |
| Climate Voice Recognition .....         | 66 |
| Operating Tips .....                    | 66 |

**INTERIOR STORAGE AND EQUIPMENT .....68**

|                                           |    |
|-------------------------------------------|----|
| Storage.....                              | 68 |
| USB/AUX Control .....                     | 72 |
| Electrical Power Outlets.....             | 74 |
| Power Inverter — If Equipped .....        | 75 |
| Wireless Charging Pad — If Equipped ..... | 77 |

**WINDOWS .....77**

|                                 |    |
|---------------------------------|----|
| Power Windows.....              | 77 |
| Automatic Window Features ..... | 78 |
| Reset Auto-Up .....             | 78 |
| Window Lockout Switch .....     | 79 |

|                              |    |
|------------------------------|----|
| Power Sliding Rear Window —  |    |
| If Equipped .....            | 79 |
| Manual Sliding Rear Window — |    |
| If Equipped .....            | 79 |

|                      |    |
|----------------------|----|
| Wind Buffeting ..... | 80 |
|----------------------|----|

**POWER SUNROOF — IF EQUIPPED .....80**

|                             |    |
|-----------------------------|----|
| Single Pane Power Sunroof — |    |
| If Equipped.....            | 80 |
| Dual Pane Power Sunroof —   |    |
| If Equipped.....            | 82 |

**HOOD .....84**

|                        |    |
|------------------------|----|
| To Open The Hood.....  | 84 |
| To Close The Hood..... | 85 |

**TAILGATE .....85**

|                                           |    |
|-------------------------------------------|----|
| Opening.....                              | 85 |
| Closing.....                              | 85 |
| Locking Tailgate.....                     | 85 |
| Multifunction Tailgate — If Equipped..... | 85 |
| Tailgate Removal .....                    | 86 |
| Bed Step — If Equipped.....               | 89 |

**PICKUP BOX .....90**

|                            |    |
|----------------------------|----|
| Bed Rail Tie-Down System — |    |
| If Equipped .....          | 91 |

**RAMBOX — IF EQUIPPED .....92**

|                                    |    |
|------------------------------------|----|
| Locking And Unlocking RamBox ..... | 93 |
| RamBox Cargo Storage Bins.....     | 93 |
| RamBox Safety Warning .....        | 94 |
| Bed Divider — If Equipped.....     | 95 |

|                                                   |           |
|---------------------------------------------------|-----------|
| <b>SLIDE-IN CAMPERS .....</b>                     | <b>97</b> |
| Camper Applications .....                         | 97        |
| <b>TRI-FOLD TONNEAU COVER — IF EQUIPPED .....</b> | <b>97</b> |
| Tonneau Cover Components.....                     | 97        |
| Tri-Fold Tonneau Cover Folding For                |           |
| Driving Or Removal .....                          | 98        |
| Tri-Fold Tonneau Cover Installation.....          | 101       |
| Tri-Fold Tonneau Cover Cleaning.....              | 103       |

## GETTING TO KNOW YOUR INSTRUMENT PANEL

|                                                               |            |
|---------------------------------------------------------------|------------|
| <b>BASE / MIDLINE INSTRUMENT CLUSTER —<br/>GASOLINE .....</b> | <b>104</b> |
| Base / Midline Instrument Cluster                             |            |
| Descriptions — Gasoline.....                                  | 105        |
| <b>PREMIUM INSTRUMENT CLUSTER —<br/>GASOLINE .....</b>        | <b>107</b> |
| Premium Instrument Cluster                                    |            |
| Descriptions — Gasoline.....                                  | 108        |
| <b>BASE / MIDLINE INSTRUMENT CLUSTER —<br/>DIESEL.....</b>    | <b>109</b> |
| Base / Midline Instrument Cluster                             |            |
| Descriptions — Diesel .....                                   | 110        |
| <b>PREMIUM INSTRUMENT CLUSTER —<br/>DIESEL.....</b>           | <b>112</b> |
| Premium Instrument Cluster                                    |            |
| Descriptions — Diesel .....                                   | 113        |

|                                                                |            |
|----------------------------------------------------------------|------------|
| <b>INSTRUMENT CLUSTER DISPLAY.....</b>                         | <b>114</b> |
| Instrument Cluster Display Controls.....                       | 114        |
| Oil Life Reset.....                                            | 115        |
| Display Menu Items.....                                        | 116        |
| Diesel Particulate Filter (DPF)                                |            |
| Messages .....                                                 | 121        |
| Displays .....                                                 | 123        |
| Diesel Exhaust Fluid (DEF) Warning                             |            |
| Messages .....                                                 | 123        |
| Diesel Exhaust Fluid (DEF) Fault                               |            |
| Warning Messages .....                                         | 124        |
| Battery Saver On/Battery Saver Mode                            |            |
| Message — Electrical Load Reduction                            |            |
| Actions — If Equipped .....                                    | 125        |
| <b>WARNING LIGHTS AND MESSAGES .....</b>                       | <b>126</b> |
| Red Warning Lights .....                                       | 126        |
| Yellow Warning Lights .....                                    | 129        |
| Yellow Indicator Lights .....                                  | 133        |
| Green Indicator Lights.....                                    | 135        |
| White Indicator Lights .....                                   | 136        |
| Blue Indicator Lights.....                                     | 137        |
| <b>ONBOARD DIAGNOSTIC SYSTEM — OBD II.....</b>                 | <b>137</b> |
| Onboard Diagnostic System (OBD II)                             |            |
| Cybersecurity .....                                            | 138        |
| <b>EMISSIONS INSPECTION AND<br/>MAINTENANCE PROGRAMS .....</b> | <b>138</b> |

## STARTING AND OPERATING

|                                                                            |            |
|----------------------------------------------------------------------------|------------|
| <b>STARTING THE ENGINE.....</b>                                            | <b>140</b> |
| Automatic Transmission.....                                                | 141        |
| AutoPark.....                                                              | 141        |
| Tip Start Feature .....                                                    | 143        |
| Keyless Enter-N-Go — Ignition.....                                         | 143        |
| Normal Starting Using ENGINE START/<br>STOP Button — Gasoline Engine ..... | 143        |
| Normal Starting Using ENGINE START/<br>STOP Button — Diesel Engine .....   | 144        |
| Cold Weather Operation (Below -22 °F<br>Or -30 °C) .....                   | 146        |
| After Starting.....                                                        | 146        |
| Starting Fluids — Diesel Engine Only.....                                  | 146        |
| <b>NORMAL OPERATION — DIESEL ENGINE .....</b>                              | <b>146</b> |
| Cold Weather Precautions .....                                             | 146        |
| Engine Idling .....                                                        | 148        |
| Stopping The Engine .....                                                  | 148        |
| <b>ENGINE BLOCK HEATER — IF EQUIPPED .....</b>                             | <b>150</b> |
| <b>ENGINE BREAK-IN RECOMMENDATIONS —<br/>GASOLINE ENGINE .....</b>         | <b>150</b> |
| <b>ENGINE BREAK-IN RECOMMENDATIONS —<br/>DIESEL ENGINE .....</b>           | <b>151</b> |
| <b>PARKING BRAKE .....</b>                                                 | <b>151</b> |
| Electric Park Brake (EPB).....                                             | 151        |

|                                              |            |                                              |            |                                           |            |
|----------------------------------------------|------------|----------------------------------------------|------------|-------------------------------------------|------------|
| <b>AUTOMATIC TRANSMISSION</b> .....          | <b>154</b> | <b>FUEL SAVER TECHNOLOGY 5.7L ENGINES</b>    |            | <b>PARKSENSE ACTIVE PARK ASSIST</b>       |            |
| Ignition Park Interlock .....                | 155        | <b>ONLY — IF EQUIPPED</b> .....              | <b>175</b> | <b>SYSTEM — IF EQUIPPED</b> .....         | <b>195</b> |
| Brake/Transmission Shift Interlock           |            | <b>STOP/START SYSTEM — IF EQUIPPED</b> ..... | <b>175</b> | Enabling And Disabling The ParkSense      |            |
| System .....                                 | 155        | Autostop Mode .....                          | 175        | Active Park Assist System .....           | 196        |
| Eight-Speed Automatic Transmission .....     | 156        | Possible Reasons The Engine Does Not         |            | Parallel/Perpendicular Parking Space      |            |
| <b>FOUR-WHEEL DRIVE OPERATION —</b>          |            | Autostop .....                               | 175        | Assistance Operation .....                | 197        |
| <b>IF EQUIPPED</b> .....                     | <b>161</b> | To Start The Engine While In Autostop        |            | <b>LANESENSE — IF EQUIPPED</b> .....      | <b>199</b> |
| Four-Position Electronically Shifted         |            | Mode .....                                   | 176        | LaneSense Operation .....                 | 199        |
| Transfer Case — If Equipped .....            | 161        | To Manually Turn Off The Stop Start          |            | Turning LaneSense On Or Off .....         | 200        |
| Five-Position Electronically Shifted         |            | System .....                                 | 176        | LaneSense Warning Message .....           | 200        |
| Transfer Case — If Equipped .....            | 163        | To Manually Turn On The Stop Start           |            | Changing LaneSense Status .....           | 202        |
| <b>ACTIVE-LEVEL FOUR CORNER AIR</b>          |            | System .....                                 | 177        | <b>PARKVIEW REAR BACK UP CAMERA</b> ..... | <b>202</b> |
| <b>SUSPENSION SYSTEM — IF EQUIPPED</b> ..... | <b>165</b> | System Malfunction .....                     | 177        | AUX Camera — If Equipped .....            | 204        |
| Description .....                            | 165        | <b>CRUISE CONTROL SYSTEMS —</b>              |            | <b>SURROUND VIEW CAMERA SYSTEM — IF</b>   |            |
| Air Suspension Modes .....                   | 167        | <b>IF EQUIPPED</b> .....                     | <b>177</b> | <b>EQUIPPED</b> .....                     | <b>204</b> |
| Instrument Cluster Display Messages .....    | 168        | Cruise Control — If Equipped .....           | 177        | AUX Camera — If Equipped .....            | 208        |
| Operation .....                              | 168        | Adaptive Cruise Control (ACC) —              |            | <b>REFUELING THE VEHICLE — GASOLINE</b>   |            |
| <b>ACTIVE-LEVEL FOUR CORNER AIR</b>          |            | If Equipped .....                            | 179        | <b>ENGINE</b> .....                       | <b>208</b> |
| <b>SUSPENSION SYSTEM (REBEL MODELS</b>       |            | <b>PARKSENSE FRONT/REAR PARK ASSIST</b>      |            | <b>REFUELING THE VEHICLE — DIESEL</b>     |            |
| <b>ONLY) — IF EQUIPPED</b> .....             | <b>169</b> | <b>SYSTEM — IF EQUIPPED</b> .....            | <b>189</b> | <b>ENGINE</b> .....                       | <b>210</b> |
| Description .....                            | 169        | ParkSense Sensors .....                      | 190        | Avoid Using Contaminated Fuel .....       | 210        |
| Air Suspension Modes .....                   | 171        | ParkSense Warning Display .....              | 190        | Bulk Fuel Storage — Diesel Fuel .....     | 210        |
| Instrument Cluster Display Messages .....    | 171        | ParkSense Display .....                      | 190        | Diesel Exhaust Fluid .....                | 211        |
| Operation .....                              | 172        | Enabling And Disabling Front And/Or          |            | Diesel Exhaust Fluid Storage .....        | 211        |
| <b>AXLE LOCK SYSTEM — IF EQUIPPED</b> .....  | <b>173</b> | Rear ParkSense .....                         | 193        | Adding Diesel Exhaust Fluid .....         | 211        |
| <b>LIMITED-SLIP DIFFERENTIAL —</b>           |            | Service The ParkSense Park Assist            |            |                                           |            |
| <b>IF EQUIPPED</b> .....                     | <b>174</b> | System .....                                 | 193        |                                           |            |
| <b>POWER STEERING</b> .....                  | <b>174</b> | Cleaning The ParkSense System .....          | 194        |                                           |            |
| Electric Power Steering .....                | 174        | ParkSense System Usage Precautions .....     | 194        |                                           |            |