


Installation guide AELEMENT ANSI Lock



SALTO
inspiredaccess

- (Eng) Installation guide
(E) Guía de instalación
(F) Guide d'installation


AE i 0 xxx... series
(NO electronic privacy)

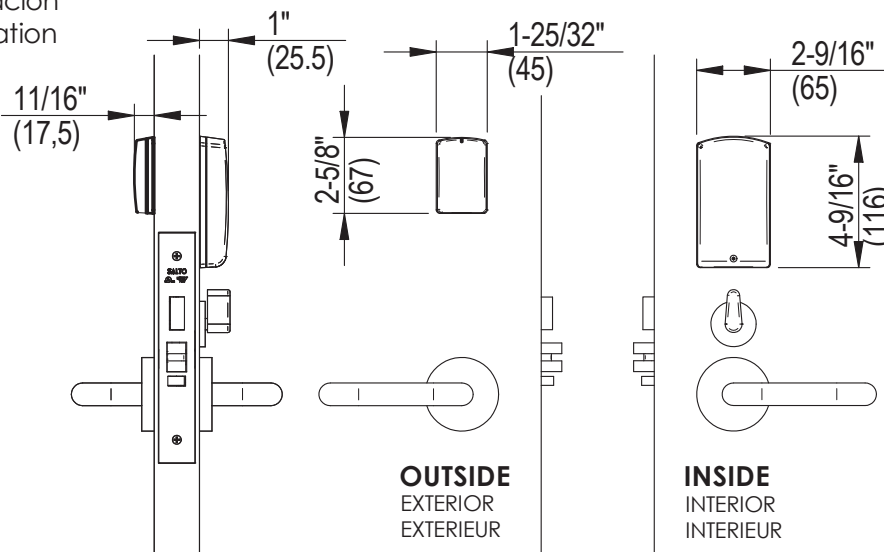

* Only for doors > 2-9/16" thickness
*Solo para puertas > 65mm de espesor
*Uniquement pour portes > 65 mm d'épaisseur

Only SALTO spindle
Solo cuadradillos SALTO
Seulement carrés SALTO

The mounting with other spindles voids the guaranty.
El montaje de otros cuadradillos anula la garantía.
Le montage d'autres carrés annulera le garantie.

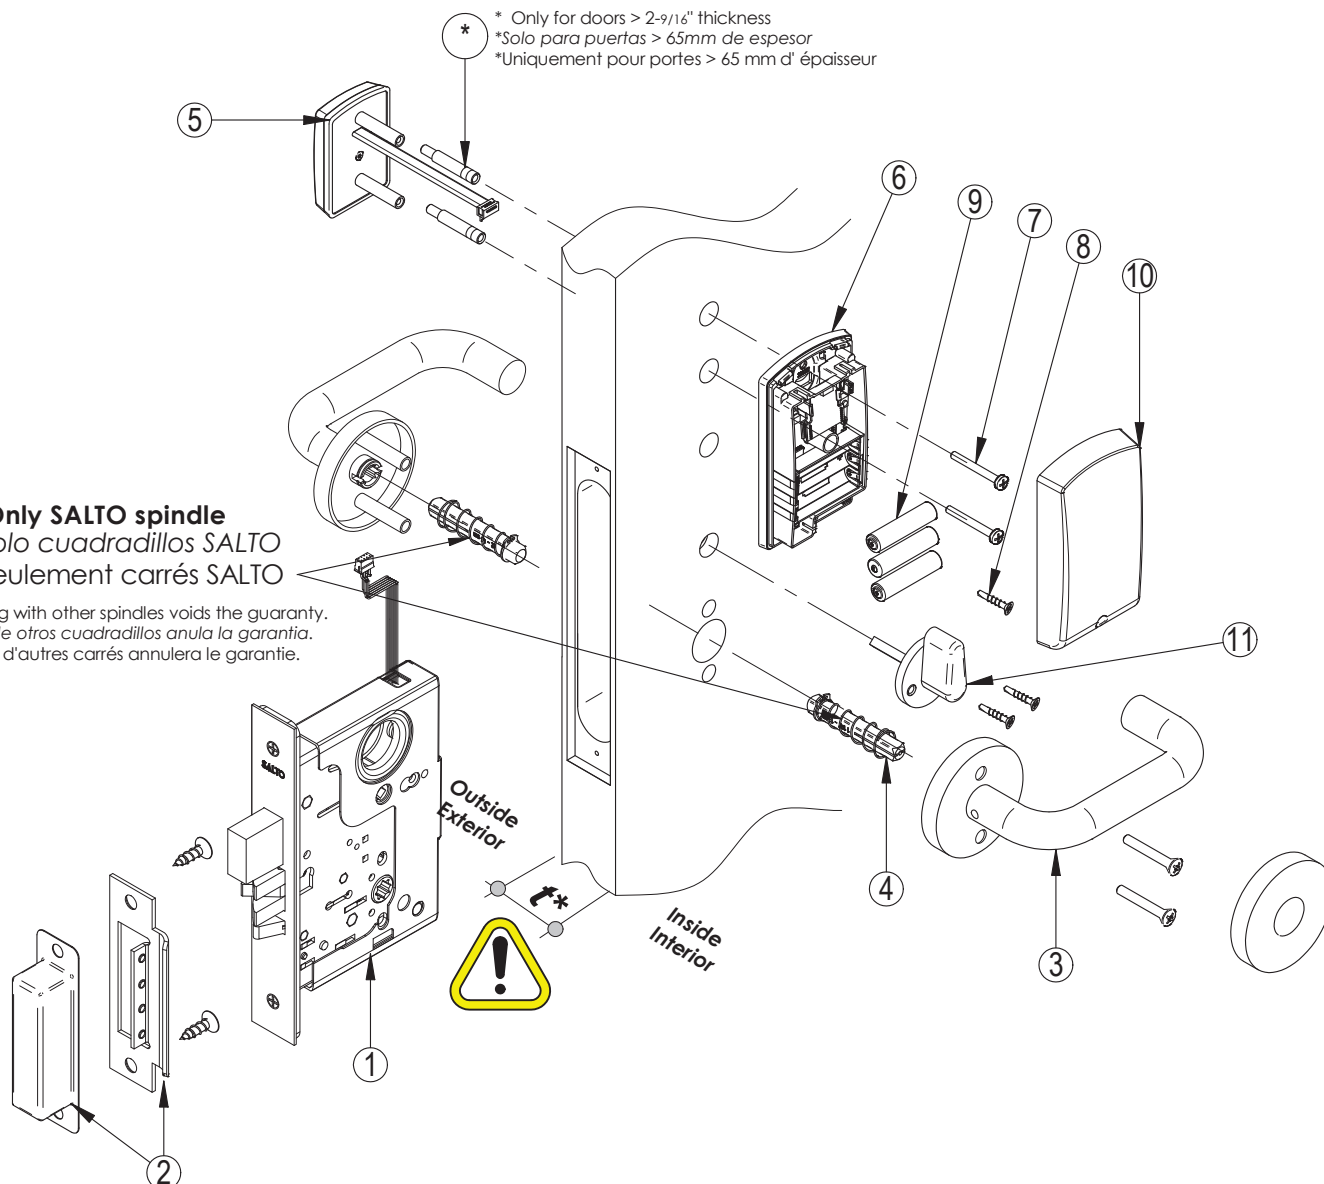

NOTE: Screws and spindles are included in the box of the reader.
NOTA: Los tornillos y cuadradillos están incluidos en la caja del lector.
NOTE: Les vis et les carrés sont inclus dans la boîte du lecteur.








(mm)

Recommendation for Customer's lever set installation on SALTO AELEMENT.
See : 4MO01300
Recomendaciones para la instalación de manillas Cliente en SALTO AELEMENT.
Ver: 4MO01300
Recommandation pour l'installation des béquilles client sur Salto AELEMENT.
Voir: 4MO01300

Installation guide AELEMENT ANSI Lock






SALTO
inspired access

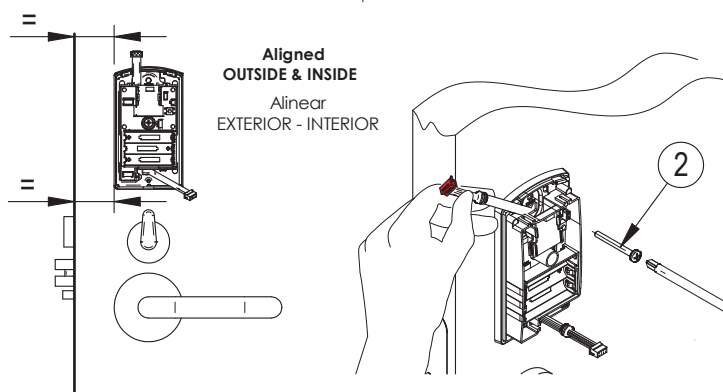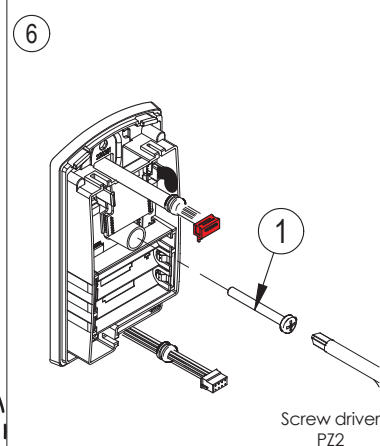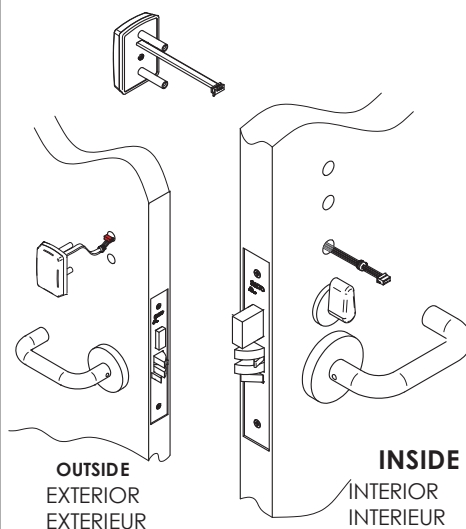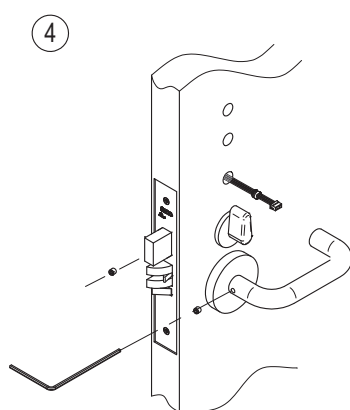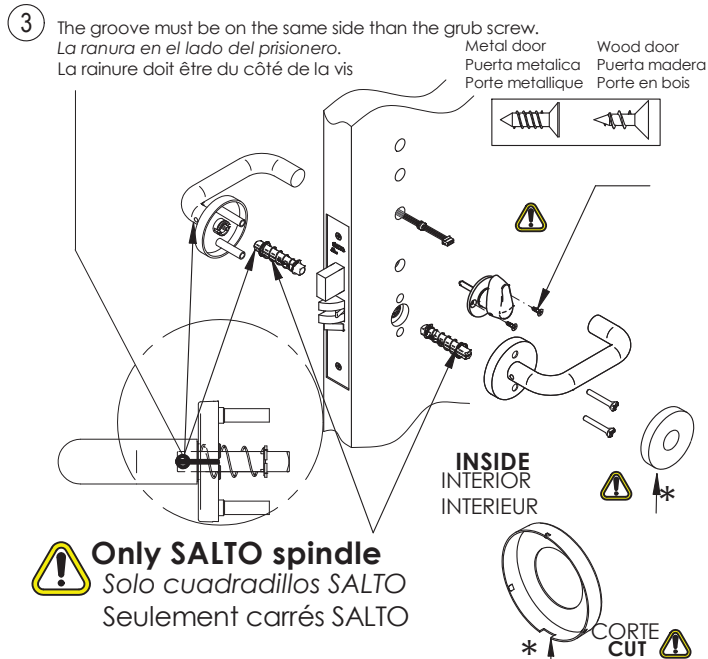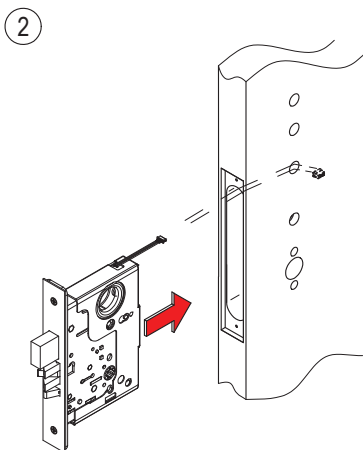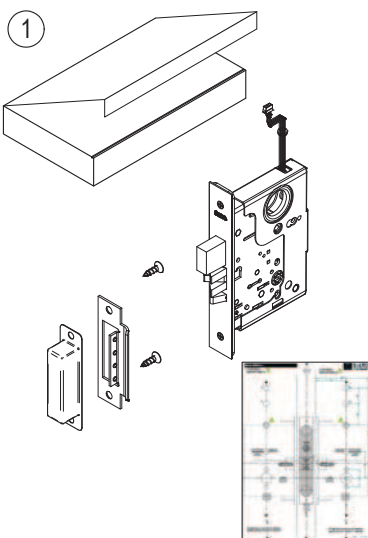

AT THIS POINT DO NOT
CLOSE THE DOOR
PROGRAM THE LOCK FIRST

follow user manual

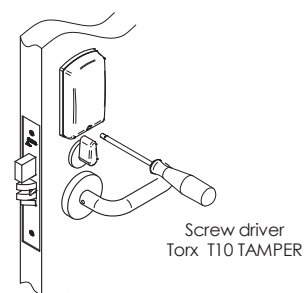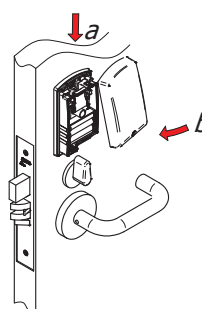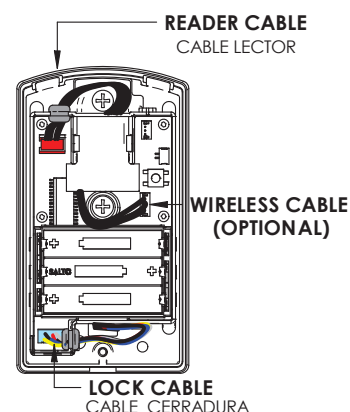

ERROR: undefined

OFFENDING COMMAND: AZPVBJ+ArialNarrow-Bold*1

STACK: