





- (Eng) Installation guide
(D) Montageanleitung
(F) Guide d'installation
(E) Guía de instalación
(NL) Installatiehandleiding
(I) Guida all'installazione
(P) Guia de instalação



N x E1 x... series
N x E2 x...
N x E3 x...

  
EN15684: 2021
1 6 B 4 A D 3 D

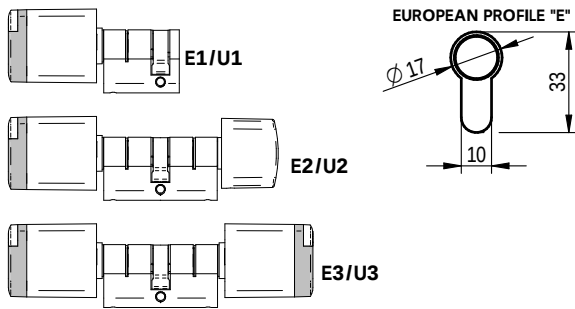

PH2 (x1)



 Danger for electronic components
due to electrostatic discharge.

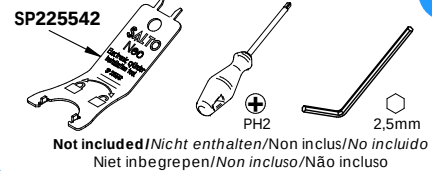

For more
information:

 
 


SALTO Neo

E1

E2


(Eng) Installation (D) Montageanleitung (F) Installation (E) Instalación (NL) Montage (I) Montaggio (P) Instalação

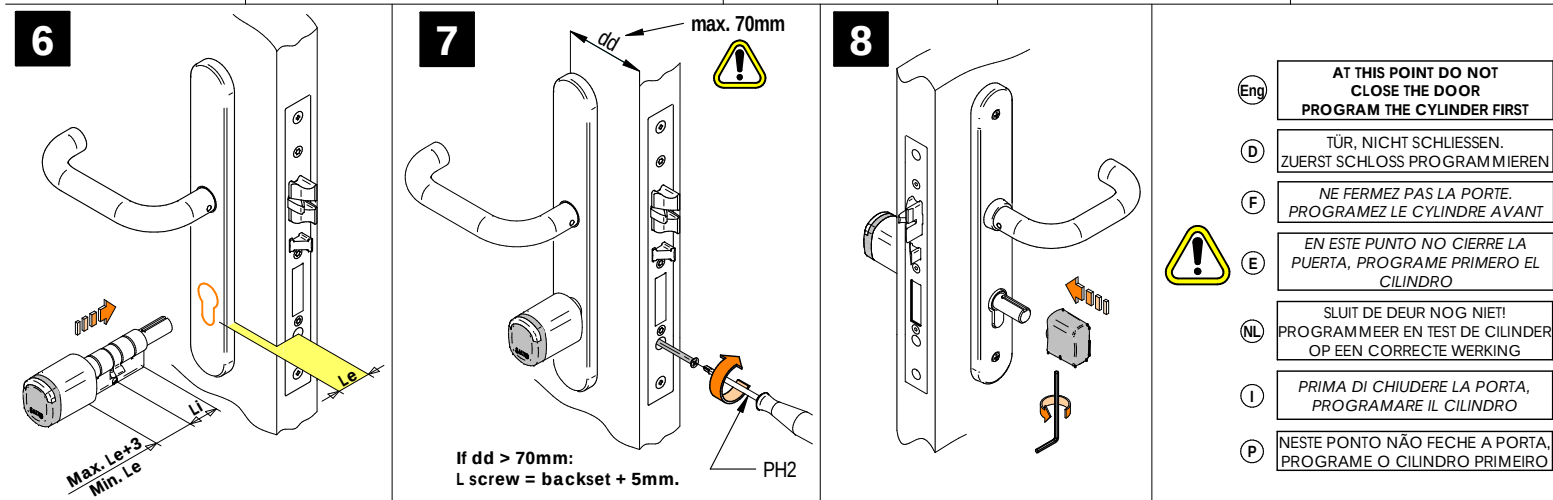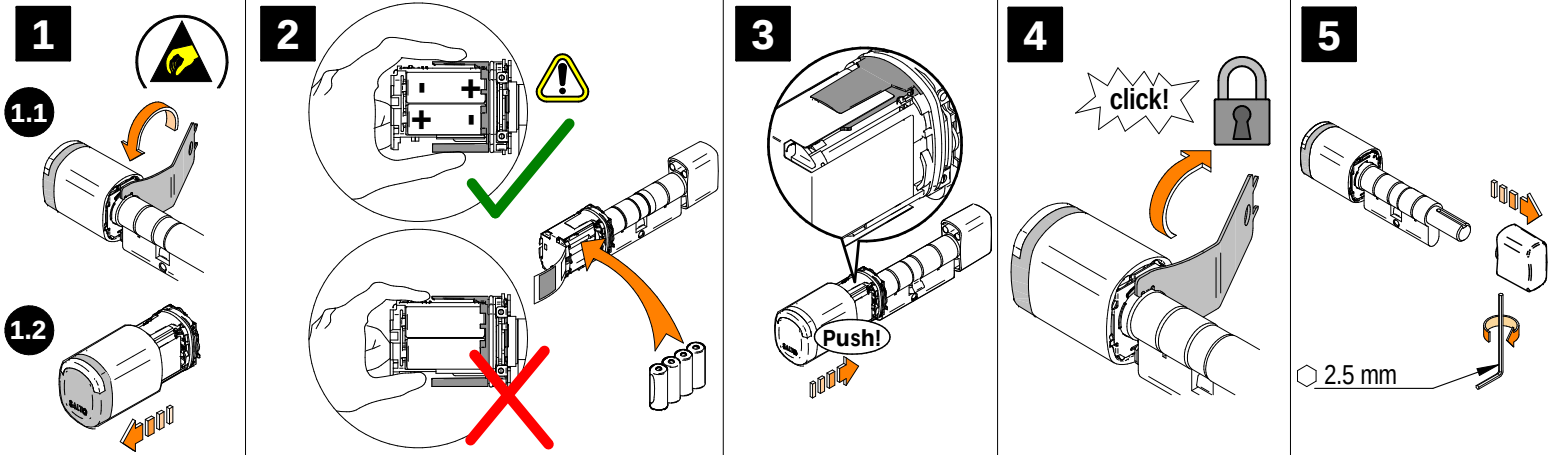


- (Eng) AT THIS POINT DO NOT
CLOSE THE DOOR
PROGRAM THE CYLINDER FIRST
- (D) TÜR, NICHT SCHLIESSEN.
ZUERST SCHLOSS PROGRAMMIEREN
- (F) NE FERMEZ PAS LA PORTE.
PROGRAMMEZ LE CYLINDRE AVANT
- (E) EN ESTE PUNTO NO CIERRE LA
PUERTA, PROGRAME PRIMERO EL
CILINDRO
- (NL) SLUIT DE DEUR NOG NIET!
PROGRAMMEER EN TEST DE CILINDER
OP EEN CORRECTE WERKING
- (I) PRIMA DI CHIUDERE LA PORTA,
PROGRAMMARE IL CILINDRO
- (P) NESTE PONTO NÃO FECHE A PORTA,
PROGRAME O CILINDRO PRIMEIRO

E3/U3

 
(Eng) Installation (D) Montageanleitung (F) Installation (E) Instalación (NL) Montage (I) Montaggio (P) Instalação

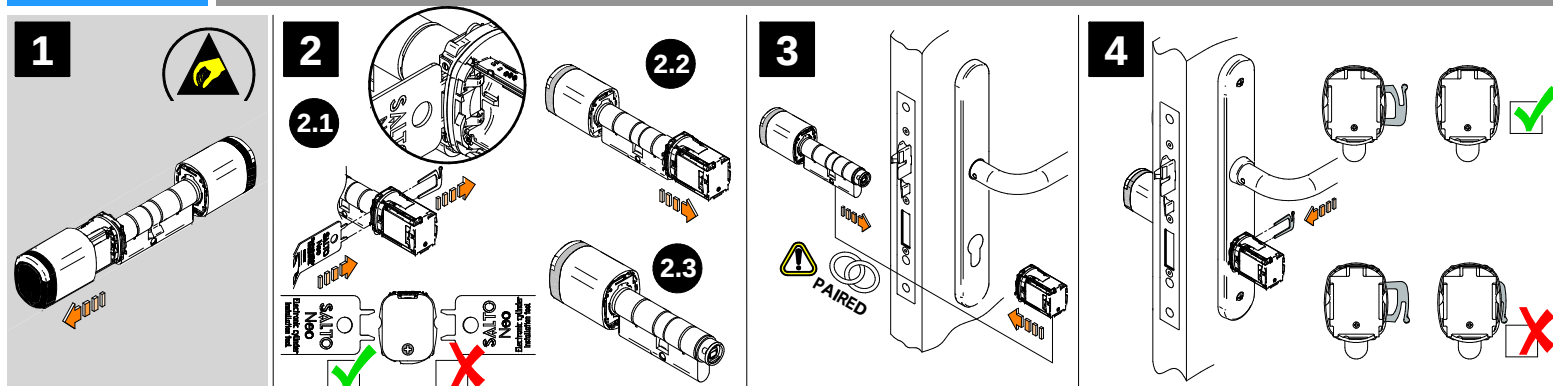


5

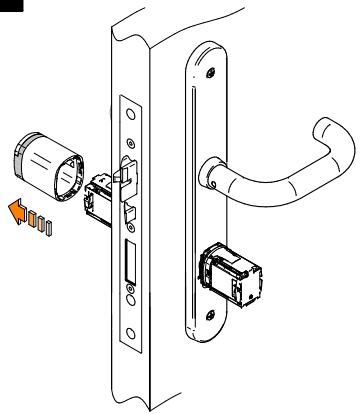 


6

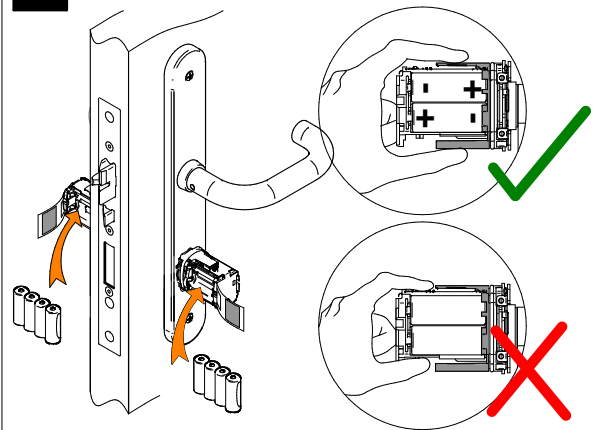 

7

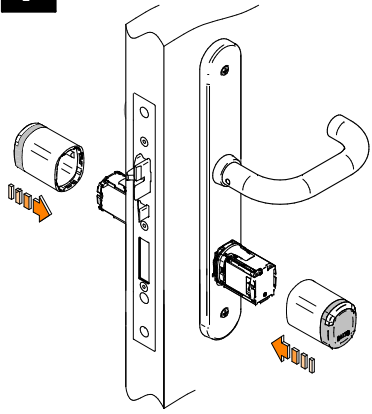 

8

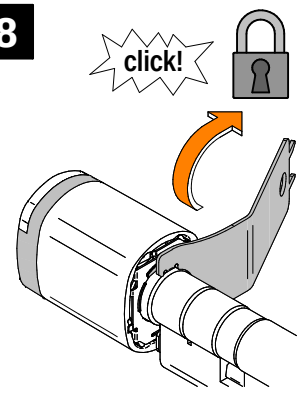 









(Eng)	AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE CYLINDER FIRST
(D)	TÜR, NICHT SCHLIESSEN. ZUERST SCHLOSS PROGRAMMIEREN
(F)	NE FERMEZ PAS LA PORTE. PROGRAMEZ LE CYLINDRE AVANT
(E)	EN ESTE PUNTO NO CIERRE LA PUERTA, PROGRAME PRIMERO EL CILINDRO
(NL)	SLUIT DE DEUR NOG NIET! PROGRAMEER EN TEST DE CILINDER OP EEN CORRECTE WERKIN
(I)	PRIMA DI CHIUDERE LA PORTA, PROGRAMARE IL CILINDRO
(P)	NESTE PONTO NÃO FECHÉ A PORTA, PROGRAME O CILINDRO PRIMEIRO

(Eng) Battery change (D) Batterie tauschen (F) Remplacer pile (E) Sustitución pilas (NL) Batterijwissel (I) Sostituzione pila (P) Substituição da pilhas

DRY! TROCKEN!

DROG! SECO!

        ASCIUTTO! SEC!

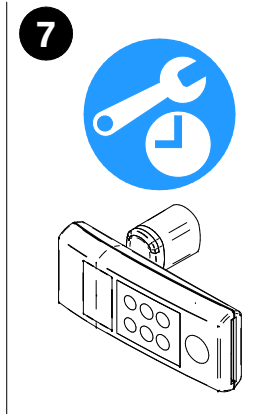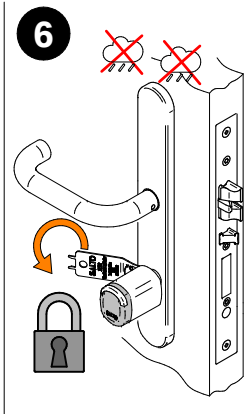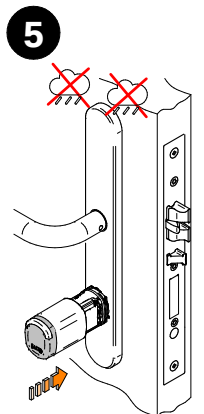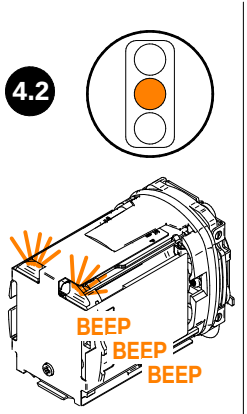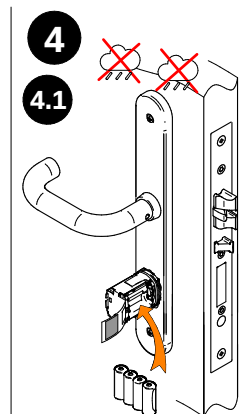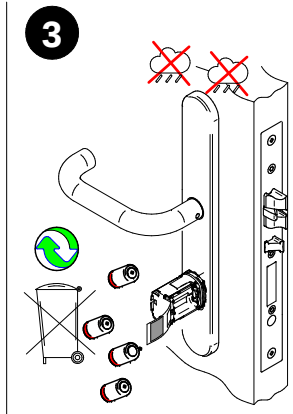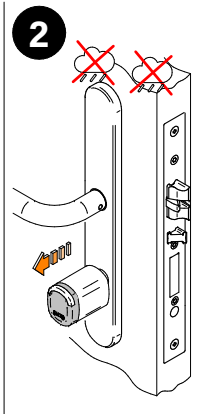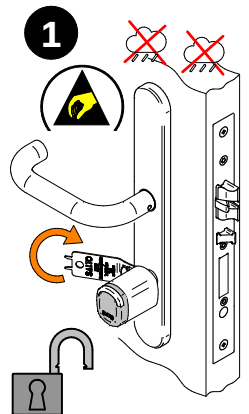

(Eng) Installation and use recommendations (D) Empfohlene Handhabung und Installation (F) Recommandations d'utilisation et d'installation (E) Consejos de uso e instalación (NL) Installatie - en gebruiksinstructies (I) Raccomandazioni d'uso ed d'utilizzo (P) Instruções de uso e instalação

(Eng) Outer knob

(D) Außenknopf

(F) Bouton extérieure

(E) Pomo exterior

(NL) Buitenknop

(I) Manopola esterna

(P) Botão exterior

0-3 mm max.

Door

Tür

Porte

 
 
 
 
 
 
Puerta

Deur

Porta

Porta

Burglar resistant door plate

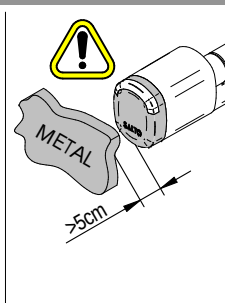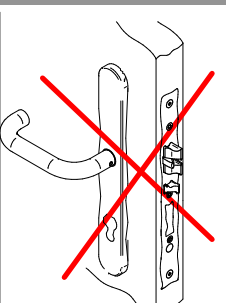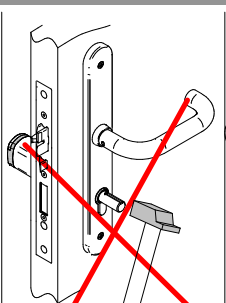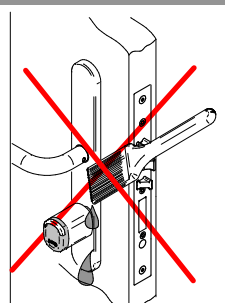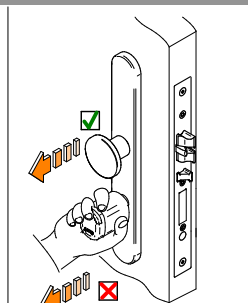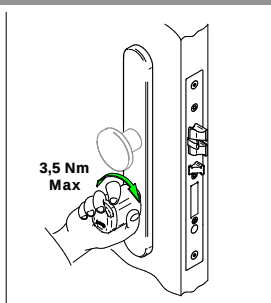

(Eng) Do not place any movable metallic object closer than 5cm in front of the reader.

(D) Platzieren Sie keine beweglichen Metallteile näher als 5 cm vor dem Leser.

(F) Ne placez aucun objet métallique mobile à moins de 5 cm du lecteur.

(E) No colocar ningún objeto móvil metálico delante del lector a menos de 5cm de distancia.

(NL) Plaats geen enkel beweegbaar metaal voorwerp dichterbij dan 5 cm voor de lezer.

(I) Non posizionare oggetti metallici mobili più vicini di 5 cm al lettore.

(P) Não coloque nenhum objeto metálico mais próximo do que 5cm na frente do leitor



(Eng) The knob is uniquely paired to the cylinder, and will not work if you switch in a different SALTO cylinder.
(D) Der Knopf ist eindeutig mit dem Zylinder gekoppelt und funktioniert nicht, wenn Sie einen anderen SALTO-Zylinder verwenden.
(F) Le bouton du lecteur SALTO est appairé au cylindre. Le cylindre ne fonctionnera pas si vous l'inversez avec un autre cylindre SALTO.
(E) El pomo está emparejado únicamente al cilindro, no funcionará si lo conecta a otro cilindro SALTO diferente.
(NL) De knop is is uniek gekoppeld aan de cilinder en zal niet werken als u de knop op een andere SALTO cilinder plaatst.

(I) Il pomolo è accoppiato univocamente con il corpo del cilindro, non funzionerà il dispositivo se si cambia con un altro cilindro.
(P) O botão está emparelhado ao cilindro correspondente e não funcionará se trocar por um cilindro SALTO diferente.