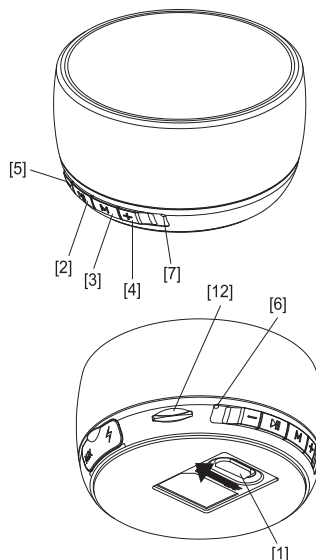 


BTS-802A**'LITTLE DRUM' Bluetooth Portable Speaker**

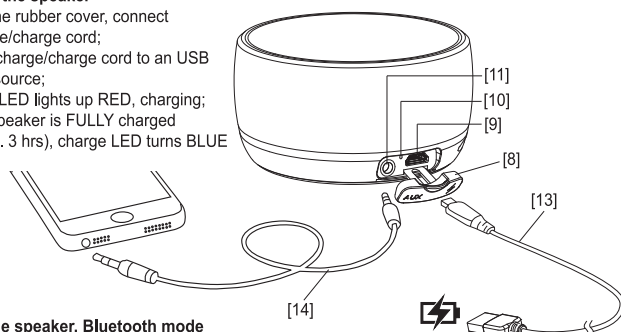 
- [1] ON-OFF slide switch
- [2] play/pause [>II] button
- [3] [M] mode button
- [4] [+] button
- [5] [-] button
- [6] built-in mic. for speaker phone function
- [7] STATUS LED
- [8] rubber cover for AUX/recharge ports
- [9] input recharging port – micro USB
- [10] charge LED
- [11] AUX audio in
- [12] microSD card slot (optional; only for BTS-802)
- [13] recharge/charge cord
- [14] AUX cord

**Product Features****BTS-802A**

- Full metal body, rubberized finish
- Chic portable little drum style
- 3W well tuned speaker
- built-in bass enhancer
- Bluetooth v3.0 wireless
- (only for BTS-802 – optional microSD MP3 playback)

Charging the speaker

- a) lift up the rubber cover, connect recharge/charge cord;
- b) plug recharge/charge cord to an USB power source;
- c) charge LED lights up RED, charging;
- d) when speaker is FULLY charged (approx. 3 hrs), charge LED turns BLUE

**Pairing the speaker, Bluetooth mode**

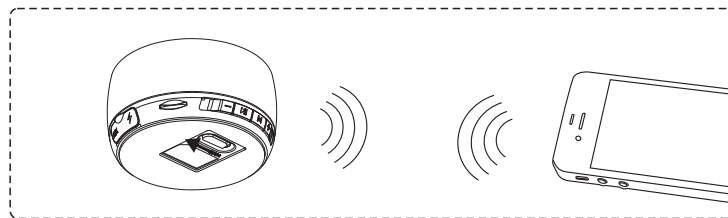 
- a) slide switch to ON > tune and voice 'Bluetooth mode'
- * (when no AUX connected; or no microSD card)
- b) wait till LED flashing fast > ready for pairing;
- c) for first time, browse smart phone Bluetooth device list, search and select the one 'LITTLE DRUM';
- d) wait till a 'bloop' tone on the speaker which is sent from your phone, and then the blue LED lit BLUE constantly – pairing done
- e) now pairing connection is successful
- * (when switch ON, or you can press [M] mode button to detect/switch mode,
 - 1. if connected with AUX cord, will voice 'AUX mode'; or
 - 2. if microSD card inserted to slot (optional only for model BTS-802), then voice 'card play mode';)

Disconnect the speaker's Bluetooth;

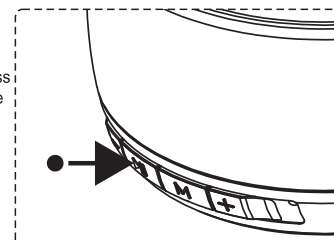 
- f) switch off Bluetooth function on your smart phone,
 - g) the speaker's blue LED will flash slowly (1x/sec.)
 - h) then slide switch speaker to OFF, (the pairing memory will be kept there)
- Next time when you turn ON the speaker again, speaker will automatically connect to your smart phone again and blue LED lit constant (your smart phone's Bluetooth function also need to be ON and is nearby <5M)

If need to pair the speaker with a new smart phone;

- i) switch off Bluetooth function on your smart phone,
 - j) then power on your new smart phone's Bluetooth,
 - k) after slide switch OFF and then ON to reset speaker, the STATUS LED will be flashing blue fast again (8x/sec.), and
- Then you repeat steps as in above a) to e).

**Call-pick function**

When speaker Bluetooth connected, during incoming call ring, you can press the [>II] button once on the speakers to pick up and use it as speaker phone. Press button again will end the call. (If you want to switch the call from speaker phone to hand phone)

**Other Controls****Play/Pause [>II]**

During music playback, press play/pause [>II] button once will pause playback; press once again will resume play.
(for microSD (BTS-802) card play mode, press [>II] button once will play the first track, or 'last playback memory track'; pause/resume play same as above)

Adjust volume [+] [-]

During music playback or call, press & hold [+] to increase speaker volume, or [-] to reduce speaker volume. ('press & hold' until adjust volume to desire level)

Next/Previous [+] [-]

During music playback, press [+] will forward to play Next track; press [-] will backward to Previous track. You can press once or multiple times until go to start at desired track.

Battery low > recharge

There will be some beeping alert sound during playback. Then charge the speaker as mentioned steps in above section.

(You can play music / use speaker phone at the same time while charging...)

Specifications:

dimensions:
product weight:

Dia. 74 x H 40 mm
~270g

Bluetooth wireless connection

support multiple pairing:

driver:

driver max. output :

signal to noise ratio:

operation voltage

built-in 3.7V Li-polymer rechargeable battery

battery recharging voltage

battery recharging current

battery charging time

drain current (power on, no input)

playback time

standby time

v3.0 +EDR; class II; typ. 8M visible distance; max. 10M
up to 4 devices**
dia. 40mm (with D53mm woofer ring built-in)
5W (3W nominal)
>=85db (THD+N<1% 1W F=1KHz)
min. 3V; max. 4.2V DC
typ. 5V; max. 5.5V DC (via. USB port)
500mA max.
3 hours.
<=40mA
up to 4 hours (fully charged, volume at 1/3 level)
up to 12 hours

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

and any use of such marks by Manova International Limited is under license. Other trademarks and trade names are those of their respective owners.

*Design and specifications are subject to change per technical needs, without prior notice

**This speaker supports pairing 'records' up to 4 devices, but NOT 'connection' to 4 devices at the same time

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

● This device may not cause harmful interference.

● This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.