

A diagram of a portable music player with two external speakers. The main unit is a grey rectangular box with a large circular speaker grille in the center. On top, there is a carrying handle (1) and a control panel (2) with five buttons: a play/pause button (3), a previous track button (4), a stop button (5), a next track button (6), and a power button (7). Two external speakers (8) are connected to the main unit via cables (9). Each speaker has a volume knob (10) and a power switch (11). The bottom of the main unit has a port for a USB drive (12), a port for a CD (13), and a port for a memory card (14).

LEXIBOOK®
BTC050_10series

ENGLISH

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

1. Read this Instruction Manual before you attempt to connect or operate the appliance.
2. Keep these instructions in good condition. Heed all warnings. Follow all instructions.
3. Save this Instruction Manual for future reference.
4. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
5. Naked flame source, such as candles, should be placed on the product.
6. Ventilation should not be impeded by covering the ventilation openings.
7. Only use accessories, which are specified by the manufacturer.
8. Use replacement parts, which are specified by the manufacturer.

- WARNING:** All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this product and should be discarded.

The Wireless speaker with microphones operates with the USB-C charging cable (included) or with a USB type adaptor (not included)
5.0V $\overline{\text{---}}$ 0.5A. Input: 100-240V~50/60Hz

1. Check that the unit is switched off.
2. Insert the small end of the USB-C cable (included) into the USB-C charging port on the side of the unit.
3. Connect the other end of the USB-C cable into the USB port of your powered computer or USB type power adaptor and connect it to a wall socket. The LED in the front of the unit lights up in red when the device is charging.
4. Once loading is complete the LED light will turn off.

Note: Please note that the USB-C cable can be used for battery charging only and not for data transfer.
The USB-C cable can be used for charging during playback.

- Danger of explosion if battery is incorrectly replaced. Please only replace it with the same or equivalent battery. (For service instructions only; battery is not intended to be replaced by the user).
- The battery should not be exposed to high temperatures, such as sunlight, fire or anything similar.
- Significant electromagnetic interference or electrostatic discharges may cause the device to malfunction or lose data. If the device is not functioning correctly, switch it off and then on again, or unplug the USB cable. In case the function could not resume, please use the product in other location.

1. Handle	8. Speaker
2. PLAY/PAUSE button	9. Microphones
3. Backward button/VOL -	10. AUX IN / MIC Jack
4. Forward button/VOL +	11. USB-C port for audio playback
5. MODE button	12. TF card slot
6. Button to activate the karaoke function	13. Charging USB port
7. Button to activate the magic sound function	14. On/Off button

MODES

Your Wireless speaker with microphones includes 4 modes: Wireless, USB, TF and Aux-in.

For the **USB and TF card modes**, power on the unit and insert a USB Flash Drive or a TF card (not included) into the port. The player will automatically start playing music.

In **Aux-in mode**, the PLAY/PAUSE, PREVIOUS and NEXT buttons on the speaker are disabled. Please use the control buttons on your music player to get the best control experience of the music.

- Press on the button 5 to select the desired mode.
- In Wireless, USB and TF modes, press **▶** for playback or pause the music.
- In Wireless, USB and TF modes, press **◀▶** to go to the previous or next track.
- In all modes, long press **◀▶** to decrease / increase the volume.
- **Karaoke** : Press the button 6 to activate the karaoke function, turn down the singer's voice and sing like a real star. To deactivate the karaoke function, press again the same button
- With your Wireless speaker with microphones you can sing the songs by connecting one or two microphones (included) to the unit under wireless, USB or TF card mode

CAUTION: Too high volume can damage your hearing. For this reason, please turn the volume down.

Input power USB DC 5.0V 0.5A
Battery Lithium battery 3.7V 1200mAh
Frequency range 2402-2480MHz
Transmission power -1.78dBm
The Maximum transmitted power is less than 20mW.

We, Lexibook® S.A. Bât 11., 6 avenue des Andes 91940 Les Ulis - France	Lexibook UK PO Box 423, UMBERLEIGH EX32 2JW, United Kingdom
--	---

Kind of product: Wireless speaker with microphones
Type designation: BTC050_10series

Hereby, Lexibook Limited declares that the radio equipment type BTC050_10 is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017. The full text of the EU declaration of conformity is available at the following internet address:
http://www.lexibook.com/doc/btc050/btc050_1.pdf

Yiu Wai Man
Product Development Manager
Hong Kong

To prevent fire or shock hazard, disconnect your unit from the power source when cleaning. Use a soft, clean cloth moistened with plain, lukewarm water to clean the exterior of the unit.

NOTE: Please keep this instruction manual, it contains important information.

 This product is not a toy.

United Kingdom & Ireland
For after-sales service, please contact us at savcomfr@lexibook.com.

www.lexibook.com

Environmental Protection
Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

Correct disposal of batteries in this product
(Applicable in countries with separate collection systems) This symbol means that the product contains a built-in battery which is covered by European Directive 2013/56/EEC, which cannot be disposed of with normal household waste. All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or a local authority. The proper disposal of this product is the responsibility of the user. To prevent potential negative consequences for the environment, animal and human health, we strongly advise you to use an official collection system. If you do not have access to one, to have a professional remove the rechargeable battery, inform yourself about the local separate collection system for electrical and electronic products or rechargeable batteries. Do not dispose of the product and its rechargeable battery with normal household waste.

For the complete and full instruction manual, please refer to our website www.lexibook.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirements in portable exposure condition without restriction.