



1. External Photograph of EUT

Brand Name: Zebra / Model Name: MC330K

SKU 4



Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K

SKU 5





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K

SKU 6





Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K



**2. Photograph of Accessory****Brand Name: Zebra / Model Name: MC330K**

Specification of Accessory		
AC Adapter 1	Brand Name	Zebra
	Part Number	PWR-BGA12V108W0WW
AC Adapter 2	Brand Name	Zebra
	Part Number	PWR-WUA5V12W0US
MC32 1X Battery	Brand Name	Symbol
	Model Name	82-000011-01
MC32 2X Battery	Brand Name	Symbol
	Model Name	82-000012-02
Sentry 1X Battery	Brand Name	Zebra
	Part Number	BT-000338-01
Sentry 2X Battery	Brand Name	Zebra
	Part Number	BT-000337-01
U cable	Brand Name	N/A
	Model Name	N/A

Remark: For accessories equipped with this EUT, please refer to the following photos.



Brand Name: Zebra / Model Name: MC330K

A collection of Zebra hardware components is displayed on a white surface. On the left is a coiled black USB cable with a standard USB-A connector and a custom Zebra connector. Next to it is a black handheld scanner with a trigger button. In the center is a large, black, rectangular device, possibly a dock or a large battery pack. To its right is a small, black, square device. Below the large rectangular device is a small, black, rectangular device. To the right of the small square device are four small, black, rectangular devices arranged in a row. A Zebra handheld scanner is positioned on the right side of the image. A ruler is placed horizontally at the bottom of the image for scale.



Brand Name: Zebra / Model Name: MC330K

SKU 5





Brand Name: Zebra / Model Name: MC330K

SKU 6





Brand Name: Zebra / Model Name: MC330K

Adapter 1



Brand Name: Zebra / Model Name: MC330K




Brand Name: Zebra / Model Name: MC330K




Brand Name: Zebra / Model Name: MC330K

Adapter 2

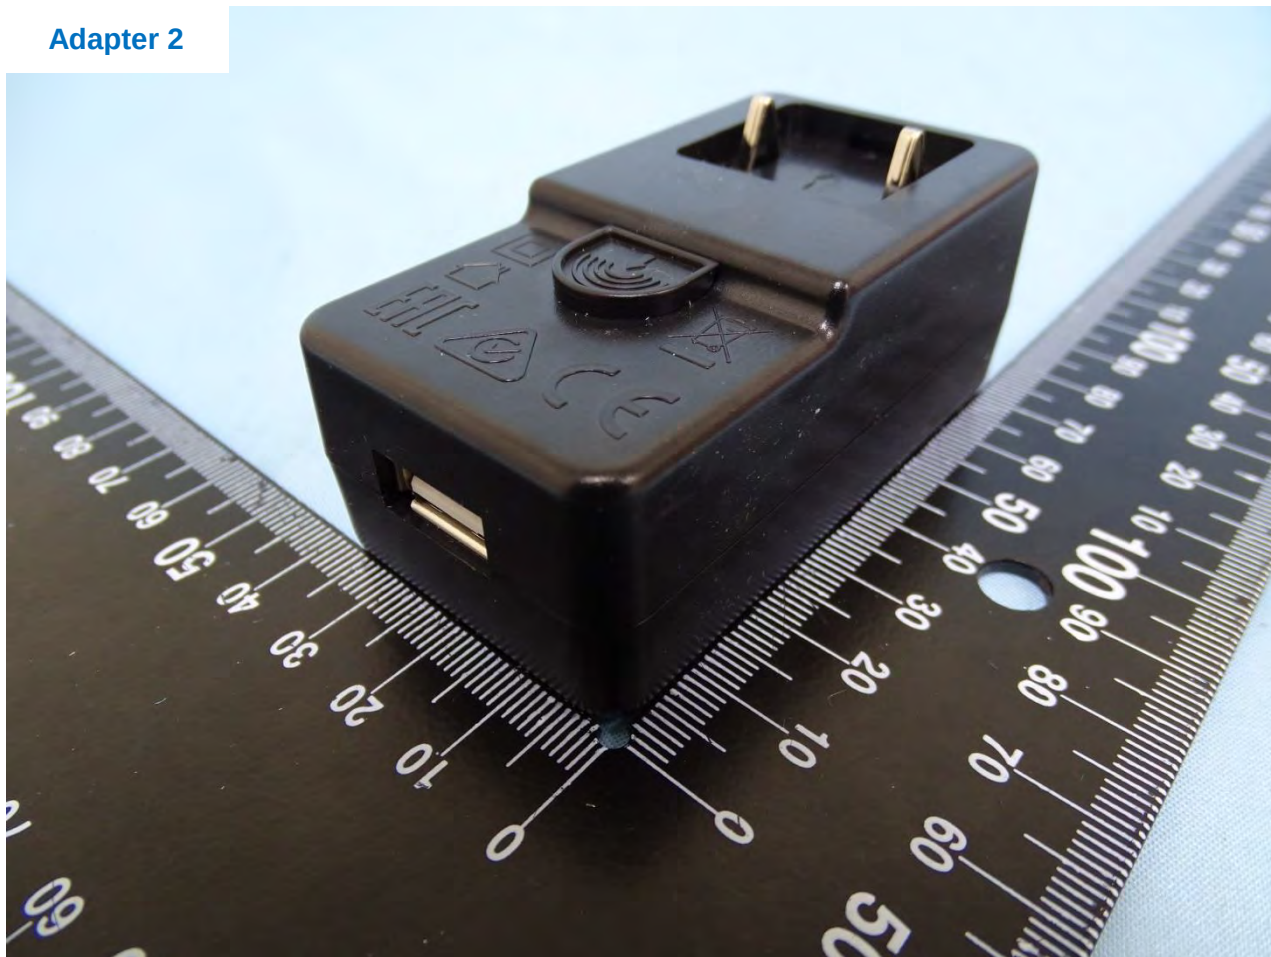

Brand Name: Zebra / Model Name: MC330K

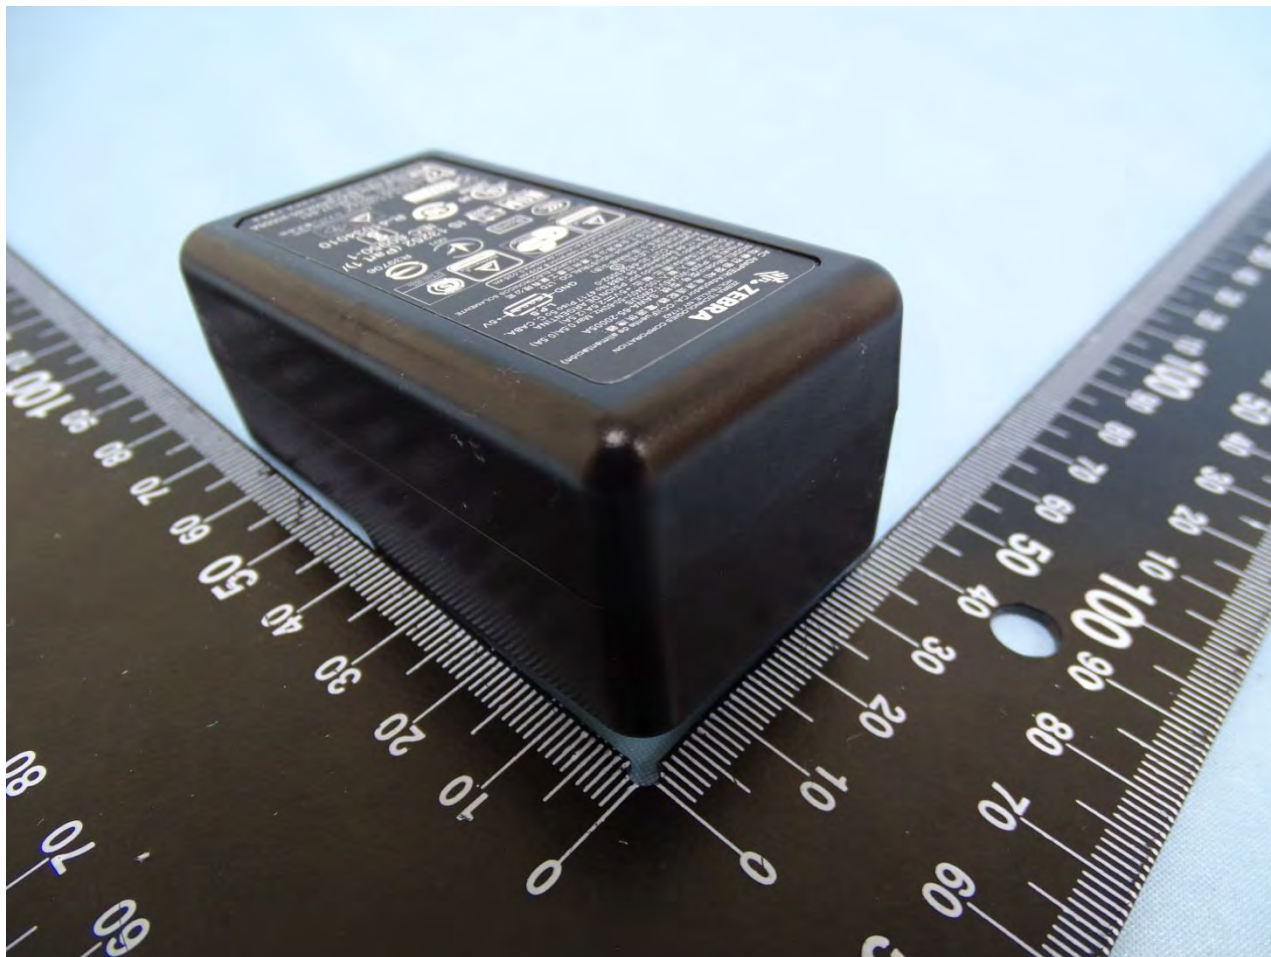


Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K

MC32 1X Battery

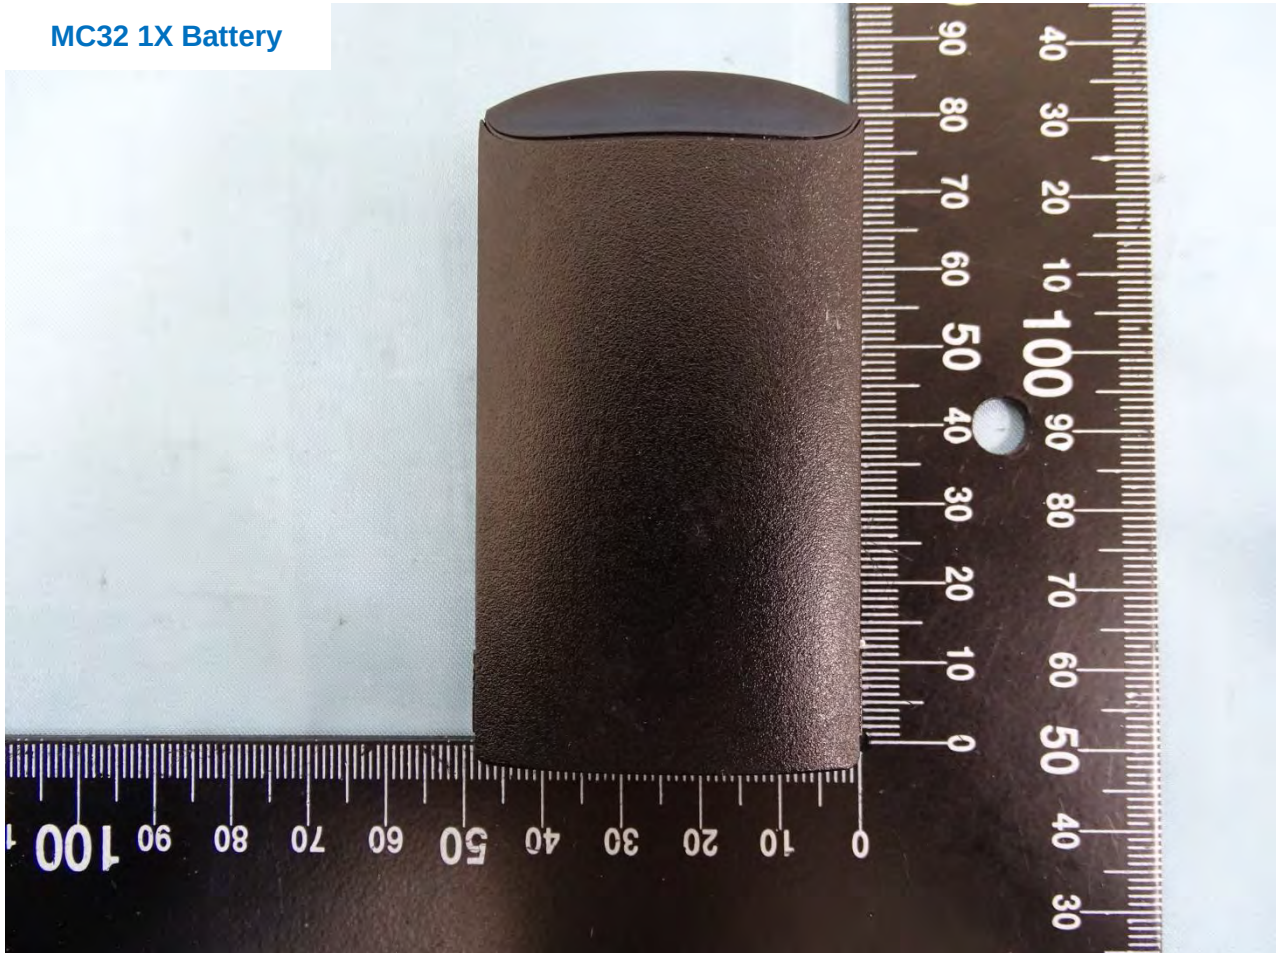

Brand Name: Zebra / Model Name: MC330K




Brand Name: Zebra / Model Name: MC330K




Brand Name: Zebra / Model Name: MC330K

MC32 2X Battery

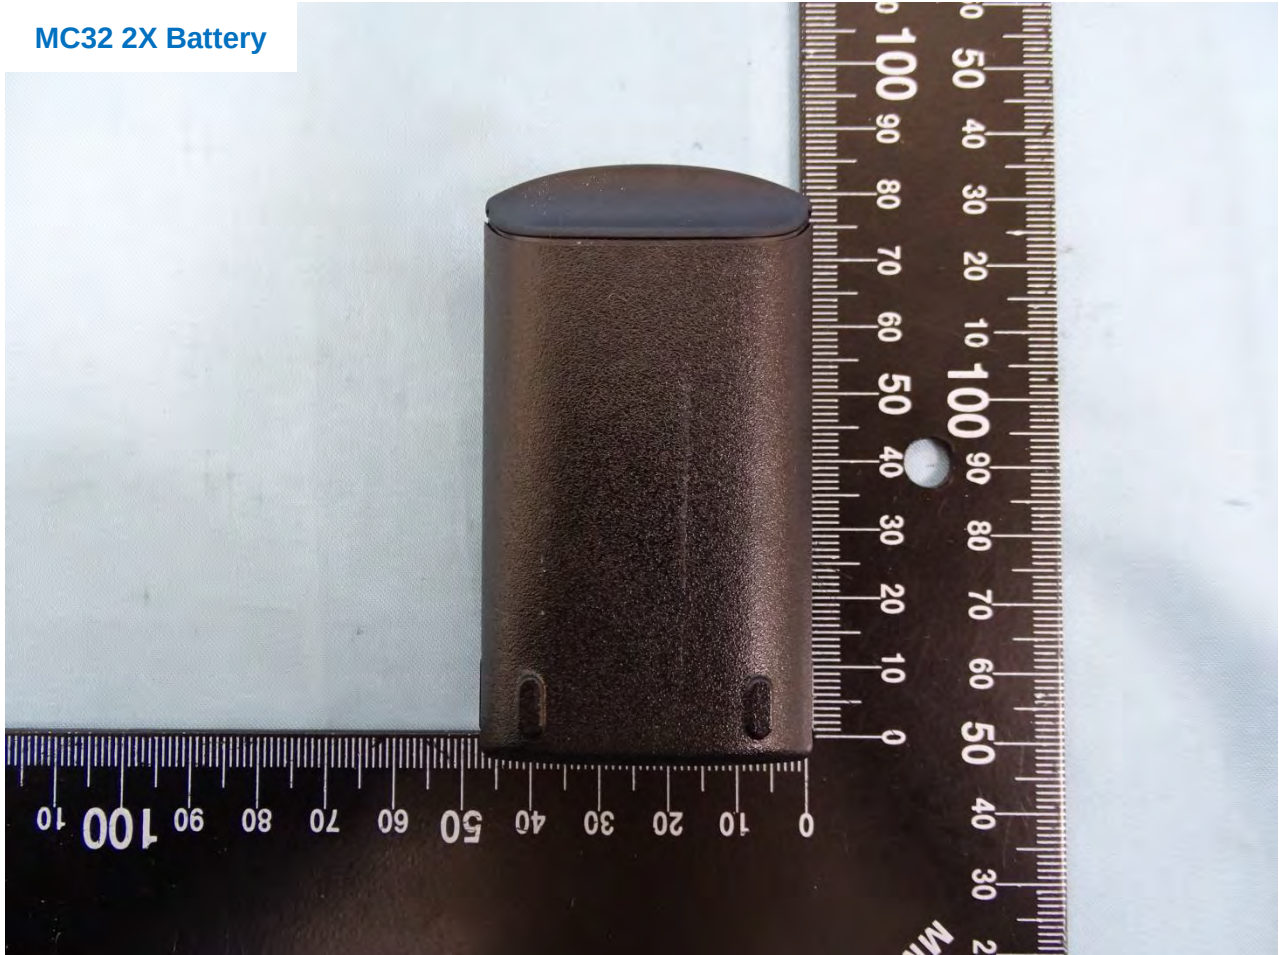

Brand Name: Zebra / Model Name: MC330K

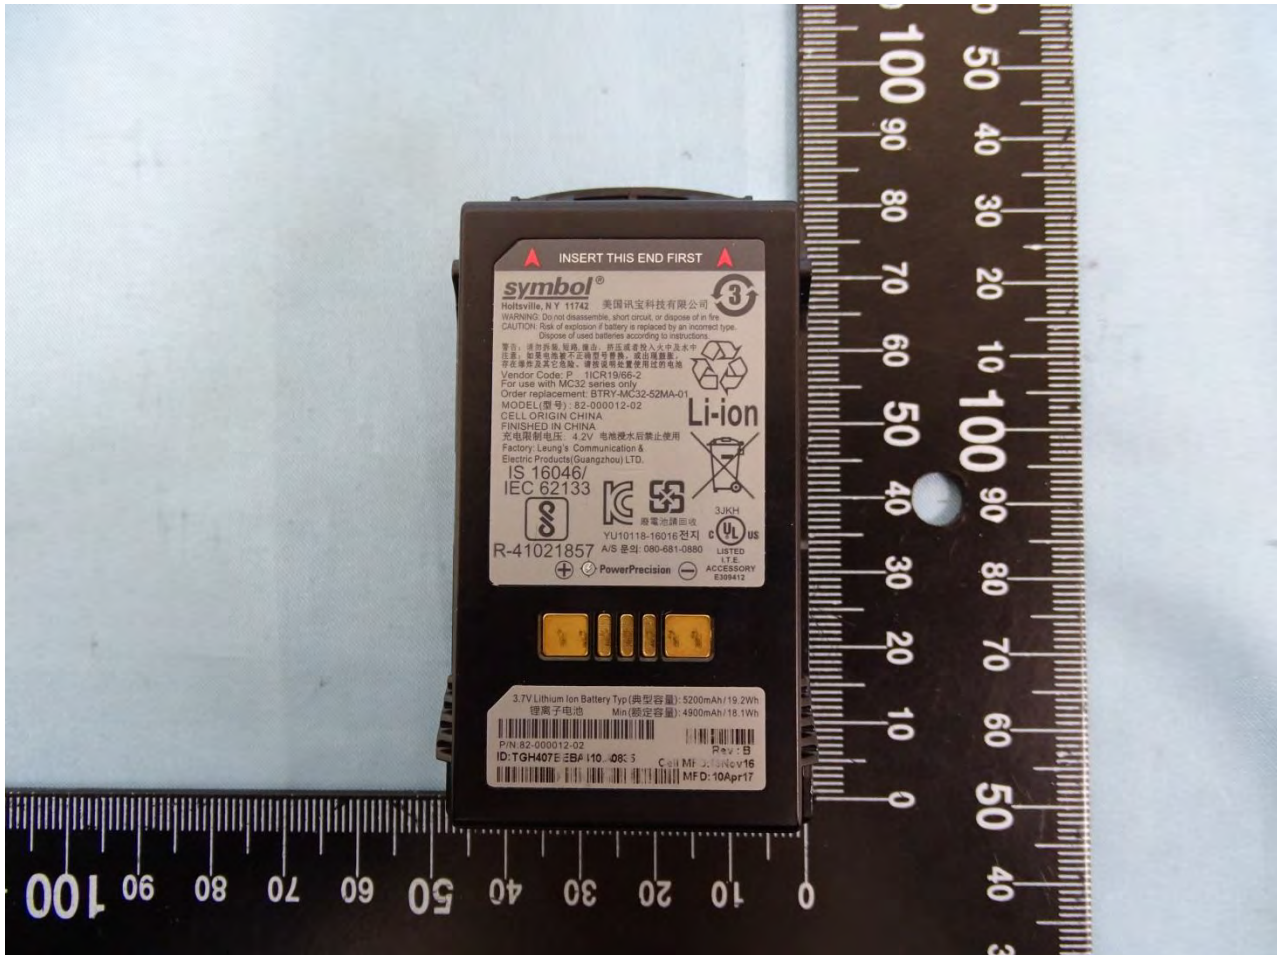

Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K

Sentry 1X Battery



Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K





Brand Name: Zebra / Model Name: MC330K

Sentry 2X Battery



Brand Name: Zebra / Model Name: MC330K



Brand Name: Zebra / Model Name: MC330K

