

Tenda

Quick Installation Guide

3MP Security Pan/Tilt Camera
CP3/CP3V3

Video and More Info

Scan the QR code or visit www.tenda.com for installation videos, technical specifications, user guides, Symbols on Products and Materials, and more information.
You can see the product name and model on the product label.
The label can be found on the device body.
<https://www.tenda.com/product/help/cp3-v32>

 


Australia Cyber Security SoC
Australia Cyber Security SoC is available at the following internet address: <https://www.tenda.com/au/page/CyberSecuritySoC>




Technical Support
Shenzhen Tenda Technology Co., Ltd.
Floors 6-8, Tower E3, No.1001, Zhongshanyuan Road, Nanshan District, Shenzhen, China, 518052
Website: www.tenda.com
E-mail: tendasecurity@tenda.cn
support.usa@tenda.cn (North America)
support.uk@tenda.cn (United Kingdom)

Copyright © 2026 Shenzhen Tenda Technology Co., Ltd. All rights reserved.
Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.


V1.0 Keep for future reference.

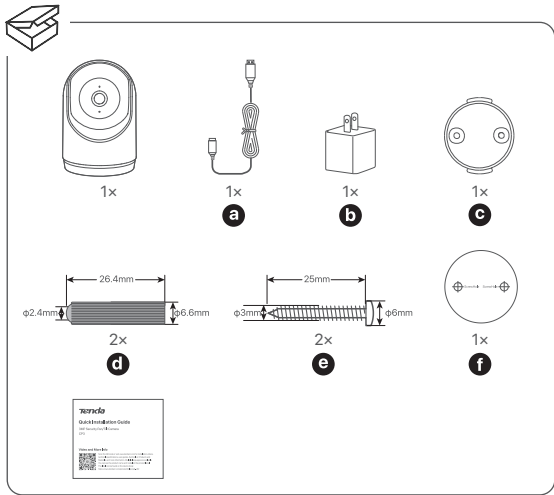

   - 1** Tips:
- Before adding the camera, make sure the router is successfully connected to the internet and that internet access filtering and authentication functions are disabled.
 - When adding the camera, ensure your phone is connected to the router's 2.4 GHz Wi-Fi.

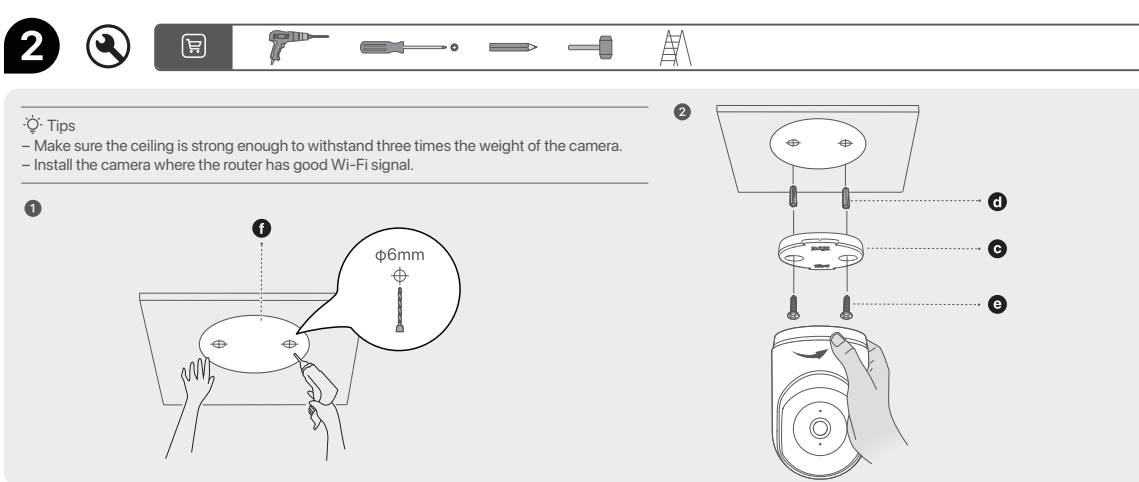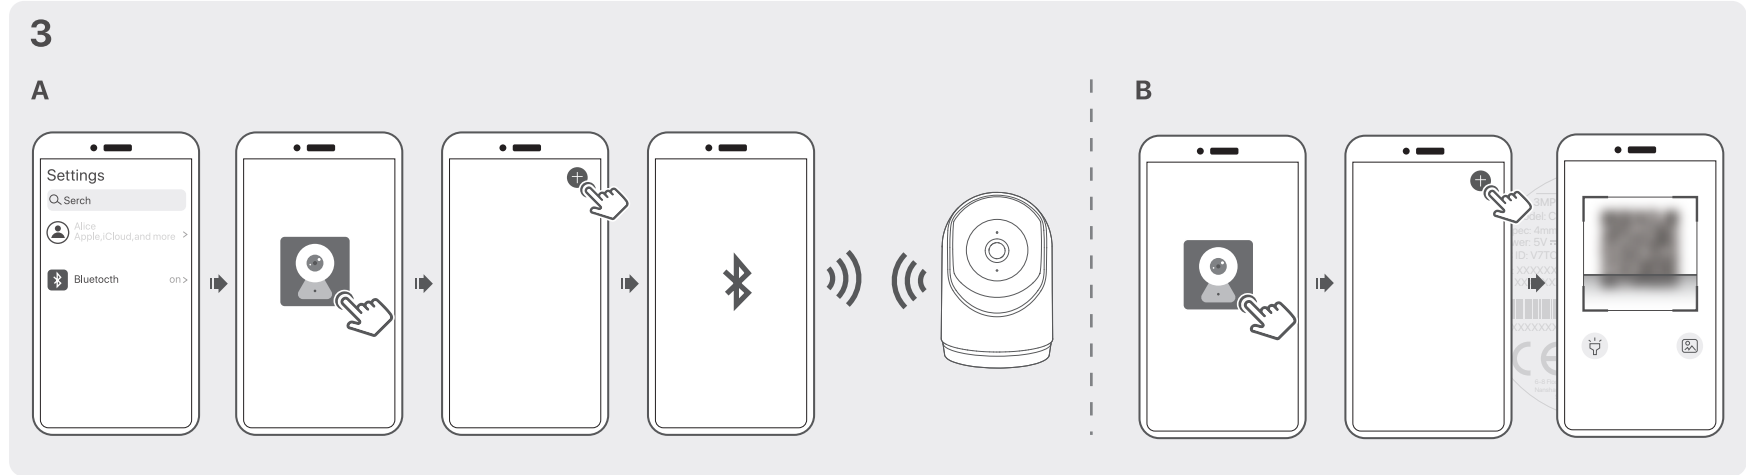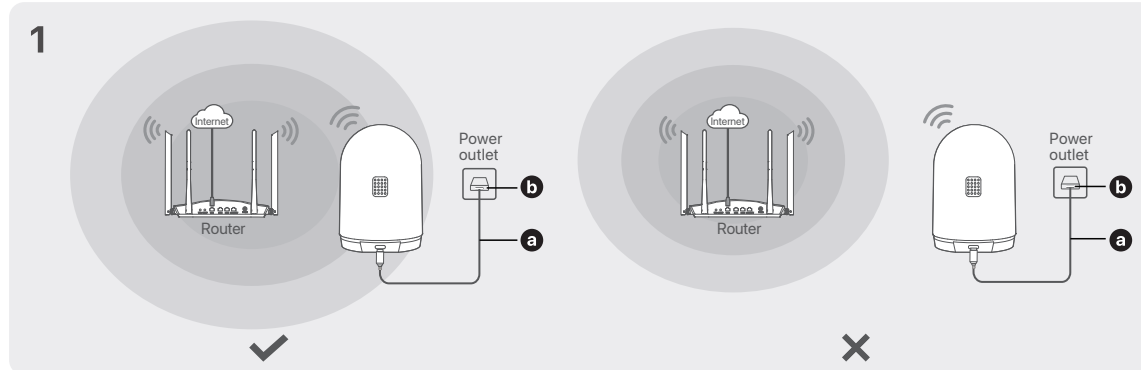

Appearance

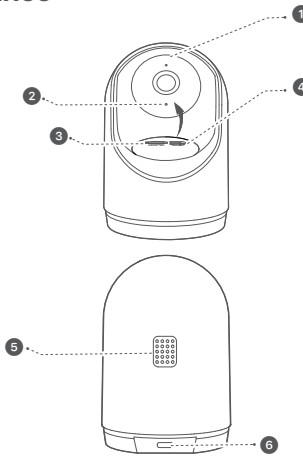 

Indicator	Solid red: Initializing and starting. Blinking red slowly: Disconnected from the network. Blinking red quickly: Connecting to the network. Solid blue: Connected to the network. Blinking blue slowly: Upgrading. Blinking blue quickly: Waiting to connect to the network.
Microphone	
Micro SD card slot	Insert the Micro SD card to store the monitoring videos.
Reset button	Reset method: Hold down the reset button for about 5 seconds and release it after the indicator blinks blue quickly or you hear a prompt tone. The camera is reset to factory settings successfully.
Speaker	
Type C power jack	Used to connect to the included power adapter and power cord.

Safety Precautions

Before operating, read and follow these precautions to prevent accidents.

- For desktop mounting, the camera must be horizontally mounted for safe use.
- For ceiling mounting, the camera is suitable for mounting at heights >2m.
- Do not use the device in a place where wireless devices are not allowed.
- Use the included power adapter and power cord.
- The mains plug is used as the disconnect device, and shall remain readily operable.
- The power socket shall be installed near the device and easily accessible.
- Operating temperature: -10°C ~ +45°C (14°F to 113°F). Power adapter operating temperature: 0°C ~ 40°C (32°F ~ 104°F).
- Keep the device away from water, fire, high electric field, high magnetic field, and inflammable and explosive items.
- Keep this device out of reach of children to prevent children from using it as a toy and causing personal injury.
- Unplug this device and disconnect all cables during lightning storms or when the device is unused for long periods.
- Do not use the power adapter if its plug or cord is damaged.
- If such phenomena as smoke, abnormal sound or smell appear when you use the device, immediately stop using it and disconnect its power supply, unplug all connected cables, and contact the after-sales service personnel.
- Disassembling or modifying the device or its accessories without authorization voids the warranty, and might cause safety hazards.
- Refer all servicing to qualified service personnel.
- Disconnect the power source during servicing.

For the latest safety precautions, see **Safety and Regulatory Information** on www.tenda.com.

CE Mark Warning

This is a Class B product.
In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.
This equipment should be installed and operated with a maximum distance 20cm between the device and your body.
NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.
Declaration of Conformity
Hendry SHENZHEN TENDA TECHNOLOGY CO., LTD declares that the device (Camera) is in compliance with Directive 2014/53/EU.
The full text of the EU Declaration of Conformity is available at the following internet address: <https://www.tenda.com/download/dcl-9.html>
Operating Frequency/Max Output Power

English: Operating Frequency/Max Output Power
Deutsch: Betriebsfrequenz/Max. Ausgangsleistung
Italiane: Frequenza operativa/Potenza di uscita massima
Español: Frecuencia de operación/Potencia de salida máxima
Português: Frequência de Funcionamento/Potência Máxima de Saída
Français: Fréquence de fonctionnement/Puissance de sortie maximale
Nederlands: Bedrijfsfrequentie/Maximale uitgangsvermogen
Svenska: Driftfrekvens/Max. Utgångseffekt
Suomi: Toimintataajuus/Maksimilähtöteho
Magyar: Működési frekvencia/Maximális kimeneti teljesítmény
Polski: Częstotliwość pracy/Maksymalna moc wyjściowa
2412MHz~2472MHz/20dBm

Čeština: Provozní frekvence/Maximální výstupní výkon
Ελληνικά: Συχνότητα λειτουργίας/Μαξίμη ισχύς Εξόδου
Bosanski: Frekvencija funkcije/Maksimalna izlazna moć
Български: Работна честота/Максимална изходна мощност
Eesti: Toimivusajavaheldus/Võimsus
Slovenščina: Delovna frekvenca/Največja izhodna moč
Slovenčina: Pracovná frekvencia/Maximálna výstupná moc
Hrvatski: Radna frekvencija/Maksimalna izlazna snaga
Lietuvių: Operacinė dažnis/Maksimali išėjimo galia
Latviešu: Darbības dažnība/Maksimālā izlāzes jauda
Türkçe: Çalışma Frekansı/Max. Çıkış Gücü
Українська: Робоча частота/Максимальна вихідна потужність
عربي: تردد التشغيل / الحد الأقصى لمخرج الطاقة
2412MHz~2472MHz/20dBm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Manage the Camera

After the camera works properly, you can manage the camera through TDSEE App or web UI. (Scan the QR code of **Video and More Info** in this guide to obtain the related user guide.)

To log in to the web UI:

- After the camera connects to the router via Wi-Fi, connect your computer to the router with an Ethernet cable or via Wi-Fi.
- Set the computer's IP address to the same subnet as the camera (but not identical). Usually, the computer is set to **Obtain an IP address automatically**, which allows it to acquire an IP address in the same subnet without manual configuration. After adding the camera to the TDSEE App, tap the top-right settings icon (⚙️) of the App, and go to **Device Info > IP Address** to view its IP. You can also download the **Tenda Security Search Tool** from www.tenda.com, and use it to discover the device and obtain the camera's IP address.
- Start a browser and enter the camera's IP address in the address bar to access the login page. The default username is **admin**, and the default password is printed on the label; if not available, the universal default password is **admin123456**.

Note:
For initial setup or after a reset, set new login password for privacy and security (The longer the password, the stronger the protection). The character limit and composition rules for passwords are subject to software user interface prompts.

FAQ

Q1: What should I do if I failed to add the camera to the TDSEE App?

- Ensure that the router is connected to the internet.
- The camera supports 2.4 GHz Wi-Fi only. Connect your phone to a 2.4 GHz Wi-Fi when adding the camera.
- Do not hide the router's Wi-Fi when adding the camera (You may hide it after the camera is added).
- Before adding the camera, make sure the indicator is blinking blue quickly. If not, reset the camera and try again.

Q2: What should I do when the video preview is not smooth?

- Ensure that the router's Wi-Fi is smooth.
- Take the router closer to the camera.
- When previewing video over cellular data, ensure the smartphone has a stable internet connection.
- Video preview supports **Fluent** and **HD**. Adjust the video quality based on network conditions: open the **TDSEE** App, select the camera, and tap the image-quality switch in the upper-right corner of the live view.

Q3: How to store the videos?

Method 1: Install a Micro SD card in the camera. Recording modes include Alarm Recording and All-Day Recording (Default: Alarm Recording). You can change the mode as required. When installing a Micro SD card for the first time, format it as prompted by the app.
Method 2: Subscribe to the **Cloud Storage Service** in TDSEE App. Open the app, select the camera on the homepage, and tap **Cloud Storage** in the lower-left corner.
Method 3: Connect the camera to an NVR for recording. The camera supports ONVIF and can be added to the NVR via a wired or wireless connection. The default username is **admin**, and the default password is printed on the label; if not available, the universal default password is **admin123456**.

For more FAQs, please scan the QR code in the **Video and More Info** section.

— Consult the dealer or an experienced radio/TV technician for help.
Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

This transmitter must not be co-located or operating in conjunction with any other antennas or transmitter.
This equipment should be installed and operated with minimum distance 20cm between the device and your body.

Caution:
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
Operating frequency: 2412-2462MHz
The device is for indoor usage only.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.



RECYCLING
This product bears the selective sorting symbol for Waste Electrical and Electronic Equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.