 


- Wireless router * 1
- Power adapter * 1
- Ethernet cable * 1
- Quick installation guide * 1

Method 1: Connect your WiFi-enabled device (such as a smart phone) to the router's WiFi network using the SSID labeled on the bottom of the router. There is no WiFi password by default.



1. Use the included power adapter to connect the router to a power source.
2. Connect the WAN port of the router to a LAN port of your modem or the Ethernet jack using an Ethernet cable.
The WAN LED indicator lights on.

1. Start a web browser on a device that has connected to the router, and visit **tendawifi.com**.



WiFi-enabled devices: Connect your WiFi-enabled devices to the WiFi network of the router using the WiFi name and WiFi password you set.

Wired devices: Your wired devices connected to the router can access the internet directly now.

Jack/Port/Button	Description
POWER	Power jack. Used to connect to the included power adapter.
WAN	Used to connect this router to the internet.
RST	Used to reset the router. When the SYS LED indicator blinks, hold the button down for about 8 seconds, and release it when all the LED indicators blink once.
1/2/3	They are LAN ports used to connect to wired devices such as computers or switches.

Q1: I cannot log in to the web UI of the router after entering **tendwifi.com, what should I do?**

A1: Try the following troubleshooting steps:

- Ensure that **tendwifi.com** is entered correctly in the address bar of the browser.
- If you are using a mobile phone, try to access **tendwifi.com** properly by an Ethernet network.
- If you use a WiFi-enabled device to log in to the web UI of the router, ensure that it is connected to the router's SSID, and the mobile data that is used is 4G or higher.
- If you use a computer to log in to the web UI of the router, ensure that it is connected to the router's LAN port properly by an Ethernet network.

It is best to **obtain an IP address automatically and obtain DNS server information** when logging in to the web UI of the router.

- Replace the web browser.

Q2: Reset the router.

A2: Try the following methods:

- If you are using a mobile phone, reset the router is configured properly, and the WAN LED indicator is solid on or blinking.
- Log in to the web UI of the router, and navigate to the **System Settings** page, follow the on-screen instructions to reset the router.
- If you have wired devices connected to the router:
 - Check if your IP address is **192.168.1.1**, **192.168.1.2**, or **192.168.1.3**.
 - Check if your router can access the Internet.
 - Check if you can access the Internet by using a computer.
 - Check if you can access the Internet by using a **WiFi-enabled device** automatically.
- If you use WiFi-enabled devices cannot access the Internet:
 - Check if your WiFi-enabled devices are connected to the WiFi network with the correct SSID and password.
 - Change your WiFi name and WiFi password on **Wireless Settings** page.

Q3: How to change my WiFi name and password?

A3: Log in to the web UI of the router, click **System Settings** > **WiFi-enabled device** > **Wireless Settings** > **WiFi Name and Password** page, and customize your WiFi name and password.

Q4: How to reset the router?

A4: When the **SYS** indicator lights on or blinks, hold down the **RS1** button on the router for 10 seconds until all the LED indicators blink once.

The router is reset successfully.

