

Tenda

Installation Guide

Auto-Install Wireless Nano USB Adapter

Packing List

- Wireless USB adapter *1
- Installation Guide *1

✕ If any item is incorrect, missing, or damaged, please keep the original package and contact the local reseller or distributor immediately.
This Installation Guide only provides guidance for installation. For detailed product information or more features, please access <http://www.tendacn.com>.

Technical Support

Manufacturer: SHENZHEN TENDA TECHNOLOGY CO., LTD.
Address: 4/F, First Tower E3, No. 1021, Zhongguanyuan Road, Nanshan District, Shenzhen, China 518052
Technical Support: support@tenda.com.cn
Email: sales@tenda.com.cn
Website: <http://www.tenda.com.cn>
Slogan: Tenda is 1999
Manufacturer: Tenda Technology GmbH
Address: Krumpholtz Str. 23-33, Haus 12, 22841, Hamburg
Technical Support: support@tenda.com.cn
Telephone: +49(0)40 7262819
Website: <http://www.tenda.com.cn>
Slogan: Tenda is 1999

 
Copyright
© 2017 Shenzhen Tenda Technology Co., Ltd. All rights reserved.
Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.



English

1 Install the Wireless USB Adapter

- Connect the wireless USB adapter to a USB port on your computer.

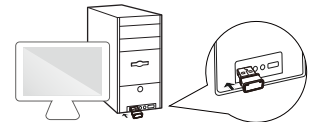

Note

This driver-free wireless USB adapter is compatible with mainstream operating systems, including Windows XP/Vista/8/10.

2 Click Run Setup.exe.



Installation begins. Please wait. When the progress bar reaches 100%, the installation wizard disappears.



Wait until the following notification appears in the lower-right corner of the desktop, and connect to a WiFi network.



Note

If installation fails, refer to Appendix.

2 Connect to a WiFi Network

You can connect to a WiFi network after successful installation of the wireless adapter.

 
- Select the WiFi network to be connected, such as Tenda_01.



- Enter the password, and click **OK**.



Connected.

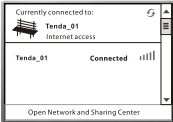

Appendix

1. If the **AutoPlay** dialog box does not appear, perform the following procedure (example: Windows 7):

 
- Double-click **Computer** on the desktop.
- Double-click **CD Drive (K:) Wireless** to start installation.
- If your computer does not recognize the CD drive, perform the following procedure (example: Windows 7):

- Click **Start** and then **Control Panel**.
- Click **Uninstall a program**.
- Uninstall the other driver-free wireless USB adapters, and reconnect this wireless USB adapter to start installation.

Português

1 Instalar o adaptador USB sem fios.


- Conecte o adaptador USB sem fios à porta USB do seu computador.

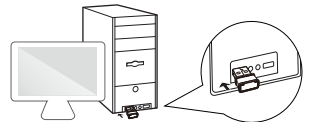

Dica

Este adaptador USB sem fios necessita de driver e é compatível com os principais sistemas operacionais, incluindo Windows XP/Vista/8/10.

 2 Clique em Executar Setup.exe.



A instalação foi iniciada. Aguarde. Quando a barra de progresso atingir 100% o assistente de instalação desaparecerá.



Aguarde até que a seguinte notificação apareça no canto inferior direito da área de trabalho, e conecte-se a uma rede WiFi.



Dica

Se a instalação falhar, consulte o Apêndice.

 
2 Conecte-se a uma rede Wi-Fi

Os passos serão demonstrados abaixo:


- Clique no seu nome de WiFi.



- Digite a senha WiFi e clique em **OK**.



Ligado.

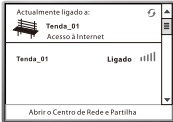 

Apêndice

1. Se a caixa de diálogo Reproduzir automaticamente não aparecer, execute o seguinte procedimento (exemplo: Windows 7):

 
- Clique duas vezes em Computador na Área de Trabalho.
- Clique duas vezes em CD Drive (K:) Wireless para iniciar a instalação.
- Se o seu computador não reconhecer o drive de CD execute o seguinte procedimento (exemplo: Windows 7):

- Clique em Start (Iniciar) e em seguida Painel de Controle.
- Clique em Desinstalar um programa.
- Desinstale os outros adaptadores USB sem fio sem necessidade de driver e reconecte esse adaptador USB sem fio para iniciar a instalação.

Italiano

1 Installare l'adattatore USB senza fili

- Collegare l'adattatore USB senza fili alla porta USB del proprio computer utilizzando il cavo di prolunga USB.

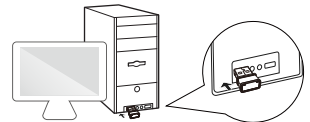

Suggerimento

Questo adattatore USB wireless senza driver è compatibile con i sistemi operativi principali, tra cui Windows XP/Vista/8/10.

2 Fare clic su Esecuzione di Setup.exe.



Avvio installazione. Attendere prego. Quando la barra di avanzamento raggiunge il 100% la procedura guidata di installazione scompare.



Attendere che la seguente notifica appaia nell'angolo in basso a destra del desktop e connettersi a una rete WiFi.

Suggerimento

Se l'installazione non riesce, fare riferimento all'Appendice.

 
2 Connettersi a una rete Wi-Fi

I passaggi sono illustrati di seguito:


- Fare clic sul nome del WiFi.



- Immettere la password del WiFi e fare clic su **OK**.



Connesso.

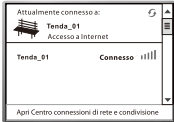 

Appendice

1. Se il finestra di dialogo AutoPlay non viene visualizzata, eseguire la seguente procedura (esempio: Windows 7):

 
- Fare doppio clic su Computer sul desktop.
- Fare doppio clic su CD Drive (K:) Wireless per avviare l'installazione.
- Se il computer non riconosce l'unità CD, procedere come segue (esempio: Windows 7):

- Fare clic su Start e quindi su Pannello di controllo.
- Fare clic su Disinstalla un programma.
- Disinstallare gli altri adattatori USB wireless senza driver e riconnettere questo adattatore USB wireless per avviare l'installazione.

Deutsch

1 Installation des drahtlosen USB-Adapters

- Schließen Sie den drahtlosen USB-Adapter mit dem USB-Verlängerungskabel an den USB-Anschluss Ihres Computers an.

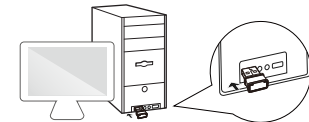

Tip

Dieser treiberlose, drahtlose USB-Adapter ist mit den gängigsten Betriebssystemen kompatibel, einschließlich Windows XP/Vista/8/10.

2 Klicken Sie auf „Setup.exe ausführen“.



Installation hat begonnen. Bitte warten Sie. Wenn die Fortschrittsleiste 100% erreicht, verschwindet der Installationsassistent.



Warten Sie bis die folgende Mitteilung in der rechten unteren Ecke des Desktops erscheint und stellen Sie dann die Verbindung mit einem WLAN-Netzwerk her.

 
Tip

Wenn die Installation fehlschlägt, lesen Sie bitte den Anhang.


2 Die Verbindung zu einem WLAN-Netzwerk herstellen.

Befolgen Sie dazu die folgenden Schritte:

- Klicken Sie auf Ihren WiFi-Namen.

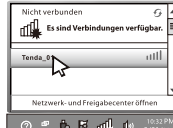

 - Geben Sie das WLAN-Passwort ein und klicken Sie auf **OK**.



Verbunden.



Anhang

1. Wenn das Dialogfenster Automatische Wiederhergabe nicht erscheint, führen Sie bitte den folgenden Prozess durch (Beispiel: Windows 7):

 
- Doppelklicken Sie Mein Arbeitsplatz auf den Desktop.
- Doppelklicken Sie CD-Laufwerk (K:) Drahtlos, um die Installation zu beginnen.
- Wenn Ihr Computer das CD-Laufwerk nicht erkennt, führen Sie bitte den folgenden Prozess durch (Beispiel: Windows 7):

- Klicken Sie auf Start und dann Kontrollleiste.
- Klicken Sie auf Ein Programm deinstallieren.
- Deinstallieren Sie die anderen treiberlosen, drahtlosen USB-Adapter und stellen Sie die Verbindung mit diesem drahtlosen USB-Adapter wieder her, um die Installation zu beginnen.

Polski

1 Instalacja bezprzewodowej karty sieciowej USB


- Połączyc bezprzewodową kartę sieciową USB do gniazda USB komputera używając kabla przedłużającego USB.

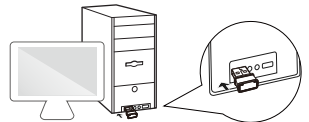

Ważność

Ten niewymagający sterowników bezprzewodowy adapter USB jest kompatybilny z głównymi systemami operacyjnymi, w tym Windows XP/Vista/8/10.

 2 Kliknąć Uruchom: Setup.exe.



Rozpoczyna się instalacja. Proszę czekać. Gdy pasek postępu osiągnie 100%, program instalacyjny zniknie.



Poczekaj, aż następujące powiadomienie pojawi się w prawym dolnym rogu pulpitu (patrz rysunek).



 
Ważność

Jeśli instalacja nie powiedzie się, zapoznaj się z załącznikiem.


2 Łączenie z siecią WiFi

Po zainstalowaniu bezprzewodowej karty USB i oprogramowania z powrotem można połączyć się z siecią bezprzewodową.


- Kliknąć nazwę sieci WiFi i kliknąć **OK**.

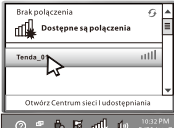

 - Wpisać hasło do sieci WiFi i kliknąć **OK**.



Połączono.

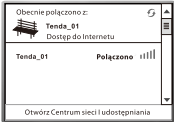 

Załącznik

1. Jeśli okno dialogowe Automatyczne Wznowienie nie pojawia się, należy wykonać następujące czynności (przykład: Windows 7):

- Kliknąć dwukrotnie Mój Komputer na pulpicie.
- Kliknąć dwukrotnie ikony napędu CD (K:) i rozpocząć instalację.
- Jeśli komputer nie rozpoznaje napędu CD, wykonać następujące czynności (przykład: Windows 7):

- Kliknąć Start i następnie Panel sterowania.
- Kliknąć Odinstaluj program.
- Odinstalować wszystkie inne bezprzewodowe adaptery USB niewymagające sterowników i ponownie połączyć ten adapter USB, aby rozpocząć instalację.

Safety and Emission Statement



CE Mark Warning
This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded BNC cable.

Declaration of Conformity
Haverly, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type W311W is in compliance with Directive 2014/53/EU.
The text of the Declaration of Conformity is available at the following internet address:
http://www.tendacn.com/en/news/download_cata_103.html
Quarant Frequency: 2.402-2.4835 GHz (CH1-CH13)
ERP Power (Max.): 1.2 WdBM
Software Version: 1.2.3.2



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a wall outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement
This device complies with FCC radio frequency exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

Caution:
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded BNC cable.

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.



RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

Use has the duty to give the product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

RECYCLING
This product bears the selective sorting