




MP3/WMA PLAYER WITH FM TRANSMITTER MP610TR (1GB) / MP620TR (2GB)

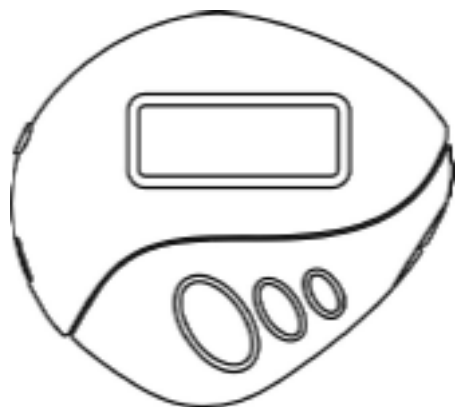

INSTRUCTION MANUAL

SAFETY INFORMATION

IMPORTANT NOTE: To reduce the risk of fire or shock hazard, do not expose this player to rain or moisture.



ATTENTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO THE QUALIFIED SERVICE PERSONNEL.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.



In full power, the continuous listening of the player may damage the user’s hearing.

Your player is a device that stores and plays multi-format digital audio files including MP3, WMA, and WAV files. Please read this manual carefully before using this product for the first time.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

FCC WARNING:

- This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

FCC DECLARATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BEFORE YOU BEGIN

After purchasing and downloading music to your PC, you are now ready to move content to your player. To transfer the music, you must use Windows Media Player or the application recommended by the online music download service.

(Note: Services and applications must be Windows Media audio-compliant and support Digital Rights Management.)

Unpacking Your Unit

When you unpack your new player, be sure you have removed all the accessories and information papers. The items below should have been packed in the box with your player.

- Player
- Installation CD-ROM
- USB cable
- Earphones
- 1 x AAA / LR03 battery

Computer System Requirements

- Pentium III 500MHz or higher recommended
- Macintosh iMac G3 or higher
- Windows 98SE, Me, 2000, or XP
- Mac OS X Version 10.1.5 or higher
- Internet Explorer 4.0 or higher
- Internet access
- 100MB free hard disk space for the software
- 64MB RAM (128 MB recommended)
- CD-ROM drive capable of digital audio extraction
- USB port (2.0 recommended)
- Sound card

Warning: Use of this product is for your personal use only. Unauthorized recording or duplication of copyrighted material may infringe upon the rights of third parties and may be contrary to copyright laws.

Note :

Make sure the tracks are encoded in mp3 or Windows Media formats and supported bitrates.

Bitrates supported by player:

mp3 - 8 to 320 kbps

wma - 5 to 192 kbps

Precautions for the Unit

- Do not use the unit immediately after transportation from a cold place to a warm place: condensation problem may result.
- Avoid shock to the unit especially during recording. Recorded data may be damaged.
- Do not store the unit near fire, places with high temperature or in direct sunlight.
- Do not operate or store unit in places with frequent static electricity or electrical noise (e.g. speaker, TV set).
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

Note: This unit may temporarily cease to function if subjected to electrostatic disturbance.

To resume normal operation, it may be necessary to cycle the power off and back on or to remove and reinstall the batteries.

Caution

- Keep product out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Do not expose to rain or moisture.

Caution While Driving

Use of headphones while operating an automobile or moving vehicle is not recommended and is unlawful in some states and areas. Be careful and attentive on the road. Stop operation of the unit if you find it disruptive or distracting while driving.

Important Battery Information

- When storing the unit, be sure to remove the batteries because they may leak and damage the unit.
- Batteries may leak electrolyte if inserted incorrectly, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries may cause skin burns or other personal injury.
- Do not charge batteries which are not intended to be recharged.
- Dispose of batteries, according to federal, state and local regulations.

Please Respect the Environment!



Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Headset Safety



Have a Blast- Just Not in Your Eardrums. Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.

- Do not play your headset at a high volume. Hearing experts warn against extended high volume play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you are unable to hear what is around you.

Insert battery into the player

1. To insert battery, open the battery door on back of unit.
2. Insert a "AAA" battery with polarities corresponding to the indications (+,-) on the compartment.
3. Close the door to the battery compartment.

Note:

Refer to the power level indicator on display for battery level. Replace with new battery when the indicator is empty.

Using Headphones

Insert phone plug into the headphones jack on the player for listening. **Have a Blast - Just Not in Your Eardrums.** Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.


Connecting the Player to your Computer

Insert the USB plug into the socket on the computer tightly. Or use the extended USB cable to connect the unit with the computer.

Note:

- Refer to the "USB Driver Installation" instruction manual for procedures in setting up USB drivers and transferring files to the player.
- You must profile your contents on your PC after file transfer in order for the new files to appear in the Navigation Menus. Refer to the "USB Driver Installation" instruction manual for profiling details.
- Secure music download files must be transferred to your player through Windows Media Player or the application recommended by the online music download service. Please visit the online music download service's website where you purchased your content from for more details on transferring secure music to your player. For more information on Windows Media Player, visit <http://www.microsoft.com/windows/windowsmedia>.

CONTROL LOCATIONS

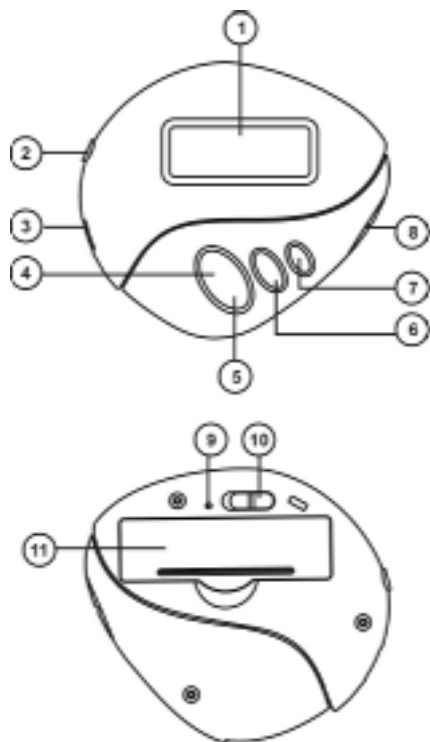

1. LCD DISPLAY
2. EARPHONE JACK
3. USB JACK
4. POWER ON/OFF/PLAY/PAUSE/STOP
5. MODE BUTTON
6. LAST BUTTON
7. NEXT BUTTON
8. VOLUME SWITCH
9. MIC
10. HOLD SWITCH
11. BATTERY COMPARTMENT

OPERATION

Turn the player ON/OFF.

Press **PLAY** button to turn the unit ON .

Press and hold **PLAY** button to turn the unit OFF.

Warning: Do not turn the unit OFF when it is playing music. Otherwise, the unsaved data will be lost.

Select Menu

1. Press **PLAY** to turn the unit ON and enter music standby mode.
2. Press and hold **MODE** to enter main menu.
3. Press **LAST** ◀◀ or **NEXT** ▶▶ to select the desired menu: Play Music, Voice, FM Tuner, Record, Delete, Settings and About (memory status).
4. Press **MODE** to confirm your selection.

Play Music

1. Press **PLAY** to turn the unit ON and enter music standby mode.
2. Press **PLAY** to start music playback. Icon “▶” appears on display.
Note: Use this knob to suspend momentarily the playing track. Icon “||” will appear on display. Press **PLAY** again to resume normal playback.
3. Press **NEXT** ▶▶ to skip forward to the next track or repeatedly to skip forward several tracks. Press **LAST** ◀◀ to skip backward to the previous track or repeatedly to skip backward several tracks. Press and hold **LAST** or **NEXT** to search quickly within a track.
4. To adjust the volume level, press **VOLUME +/-** button.
5. In playing or pause mode, press **PLAY** for two seconds to enter stop mode. Music playback stops. Press **PLAY** to resume.

Voice (Play record file)

1. Press **MODE** for 2 seconds to enter main menu.
2. Press **LAST** ◀◀ or **NEXT** ▶▶ to select “ VOICE “ mode, then press **MODE** to confirm. Press **PLAY** to start playing record file.
3. Press **LAST** ◀◀ or **NEXT** ▶▶ to search your desired record file.

Record

1. Press **MODE** for two seconds to enter main menu.
2. Press **LAST** ◀◀ or **NEXT** ▶▶ to select “**RECORD**” mode. Press **MODE** to confirm and start recording.
3. Press **PLAY** to pause recording. Press **PLAY** again to resume.
4. Press **PLAY** for two seconds to enter stop record mode. Press **MODE** button for record other message.

Delete file

1. In stop mode, press **MODE** for two seconds to enter main menu.
2. Press **LAST** ◀◀ or **NEXT** ▶▶ to select “Delete” icon. Press Mode to enter “Delete” mode.
3. Press **LAST** ◀◀ or **NEXT** ▶▶ to select the file (Voice/All Voice) you want to delete. Press **MODE**, select “yes” and press **MODE** to confirm delete; select “no” and press **MODE** to jump to the next file.

Note: “Read-only” music file can not be deleted.

Settings

1. Press **MODE** for two seconds to enter main menu.
2. Press **LAST** ◀◀ or **NEXT** ▶▶ to select “Setting” icon. Then press **MODE** to confirm and enter submenu.

• Equalizer

Press **LAST** ◀◀ or **NEXT** ▶▶ to select equalizer mode: Normal, Rock, Jazz, DDB, POP, Classic. Press **MODE** to confirm your selection.

• Play mode

Press **LAST** ◀◀ or **NEXT** ▶▶ to select desired play mode: Normal, Repeat one, Repeat All, Random, Random All.

Note:

Random: Playback will stop after all tracks have been randomly played.

Random All: Random play continuously.

• Contrast

Press **LAST** ◀◀ or **NEXT** ▶▶ to adjust LCD contrast. Press **MODE** to confirm your setting.

• Backlight

Press **LAST** ◀◀ or **NEXT** ▶▶ to select backlight time: 0 secs, 5 secs, 10 secs, 20 secs, 30 secs, 40 secs, 50 secs, 60 secs. Press **MODE** to confirm your selection.

• Auto off (Power set)

Press **LAST** ◀◀ or **NEXT** ▶▶ to select desired time of auto power-off: disable, 1 mins, 2 mins, 5 mins, 10 mins. Press **MODE** to confirm your selection.

• Records (Record set)

Press **LAST** ◀◀ or **NEXT** ▶▶ to select Sample (8000Hz or 11025Hz), “Encode” format is set IMADPCM and “Source” is set from microphone. Press **MODE** to confirm your selection.

• Language

Press **LAST** ◀◀ or **NEXT** ▶▶ to select your desired language. Press **MODE** to confirm.

Exit

Return to last menu.

About memory size

1. Press **MODE** for two seconds to enter main menu.
2. Press **LAST** ◀◀ or **NEXT** ▶▶ to select “About” icon, then press **MODE** to enter and check the total memory of the player and the available memory capacity.


• Time & Date

1. Press **MODE** for two seconds to enter main menu.
2. Press **LAST** ◀◀ or **NEXT** ▶▶ to select “Time & Date” icon, then press **MODE** to enter and check the time and date of the player.

A-B repeat (Only available in music play mode or voice mode)

To repeat a sequence between two points A and B, press **MODE** at the beginning of the sequence you want to repeat. Then press **MODE** again at the end of sequence. Then the sequence is played repeatedly until you press **MODE** to resume normal playback.

Hold

Slide " HOLD " switch to the arrowhead direction to lock player. Lock icon  appears on display. This deactivates all buttons' functions and eliminates the possibility of accidentally pressing buttons. Slide HOLD switch to opposite direction to unlock all buttons. Lock icon disappears.

Lyrics

This player supports lyrics function with MP3 playback.

Note:

1. Lyric file format should be *.LRC.
2. Lyric file name should be same as the song's name.

For example:

Song name: Jay-Sky.mp3

Lyric file name: Jay-Sky.lrc

3. Lyric file should be saved in the same folder as in the song's.

FM transmitter

In FM Mode, there are two steps to control FM transmitter, ON/OFF & Output Frequency.

1. ON/OFF - While the player is playing a music and transmitter power turned on, you may receive the signals by other FM receivers. To prevent battery loss, please turn off the transmitter unless you want to transmit the playing music.
2. Output frequency – you may set the frequency of FM transmitter between 94.0MHz to 96.0MHz. Remember FM receiver's frequency must be the same as FM transmitter.

TROUBLE SHOOTING

Symptom	Cause	Solutions
Press PLAY but no display.	<ol style="list-style-type: none">1. No battery in the compartment.2. Battery is out of power.	<ol style="list-style-type: none">1. Insert the battery.2. Replace a new battery.
No sound.	<ol style="list-style-type: none">1. Low volume or no music file inside the memory.2. Battery is out of power.3. MP3/WMA/WAV music file is damaged.	<ol style="list-style-type: none">1. Adjust the volume.2. Replace a new battery.3. Download other music files.
Can not play the MP3/WMA file that is made by user.	Player only support playback of compressed audio file in MP3/WMA format, please do not download non-standard audio file into the player.	Re- download the standard MP3/WMA file.
No function on buttons.	HOLD is switched to arrowhead direction.	Slide HOLD switch to the opposite direction to unlock.

TECHNICAL SPECIFICATION

Bit rate: 8~320Kbps

Contrast of LCD: 0-10

SN R: >80(1KHZ)

USB port: USB2.0 full speed

ID3 Tag display with Lyrics, blue backlight

Memory size: MP610TR (1GB)/MP620TR (2GB)

MP3 / WMA (DRM)

FM Transmit Frequency 94-96MHz

Operation conditions: humidity <85%, -10°C ~ 40°C

Battery life: About 7 hrs (Alkaline battery recommended), low power consumption.

WARRANTY

LIMITED WARRANTY PARTS AND LABOR STATEMENT

MAXX DIGITAL LIMITED WARRANTS THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP WITHIN THE FOLLOWING WARRANTY PERIOD, STARTING FROM DATED OF SALE TO THE ORIGINAL CONSUMER PURCHASER.

90 DAYS LABOR – 1 YEAR PARTS

IF THIS PRODUCT SHOULD PROVE DEFECTIVE WITHIN THE FIRST NINETY (90) DAYS WARRANTY PERIOD, MAXX DIGITAL LIMITED WILL REPAIR OR REPLACE (AT ITS SOLE DISCRETION) FREE OF CHARGE. ACCESSORIES ARE WARRANTED FOR NINETY (90) DAYS. SAID PRODUCT MUST BE RETURNED TO MAXX DIGITAL LIMITED OR ITS AGENT AT CONSUMER'S EXPENSE (MUST INCLUDE DATED SALES RECEIPT AS PROOF OF PURCHASE). IN ADDITION MAXX DIGITAL LIMITED WILL REPLACE ANY COVERED PART (WITH NEW OR RE-MANUFACTURED) OF THIS PRODUCT THAT PROVES DEFECTIVE DURING THE NEXT NINE (9) MONTHS AFTER THE FIRST NINETY (90) DAYS AS NOTED ABOVE.

THIS WARRANTY DOES NOT APPLY TO ANY MAXX DIGITAL LIMITED PRODUCT, WHICH IS USED FOR; COMMERCIAL, RENTAL, OR INDUSTRIAL PURPOSES. IS DAMAGED BY ACCIDENT, MISUSE, ABUSE, IMPROPER LINE VOLTAGE, WATER LIGHTENING, OR ANY ACTS OF GOD. THIS WARRANTY IS VOID IF PRODUCT IS ALTERED, MODIFIED, OR IF ANY PARTS OR SERVICE COVERED BY THIS WARRANTY ARE FURNISHED BY ANYONE OTHER THAN MAXX DIGITAL LIMITED. OR ONE OF ITS INDEPENDENT AUTHORIZED WARRANTY STATIONS. THE WARRANTY DOES NOT COVER CARTONS, CARRYING CASES, BATTERIES, COSMETIC PARTS, BROKEN OR MARRED CABINETS, COMPACT DISCS, OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT OR CONSEQUENTIAL DAMAGES DUE TO A DEFECT IN THE PRODUCT. ALL IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THIS WARRANTY.

THIS IS THE COMPLETE WARRANTY BY MAXX DIGITAL LIMITED. AND NO OTHER EXPRESSES WARRANTY IS VALID AGAINST MAXX DIGITAL LIMITED. SOME STATES (PROVINCES) DO NOT ALLOW LIMITATIONS OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

IF THIS UNIT SHOULD PROVE DEFECTIVE DURING THE NEXT NINE (9) MONTHS FOLLOWING THE FIRST NINETY (90) DAYS CONTACT MAXX DIGITAL LIMITED AT (877) 270-9585 ON REQUEST MAXX DIGITAL LIMITED (OR ITS AGENT) WILL GIVE THE NAME AND LOCATION FOR WARRANTY REPAIR. YOUR DATED SALES RECEIPT OR OTHER PROOF OF PURCHASE WILL ESTABLISH YOUR ELIGIBILITY FOR WARRANTY SERVICES. MAXX DIGITAL LIMITED WILL BE RESPONSIBLE ONLY FOR SERVICES RENDERS UNDER THIS WARRANTY AND NOT THE LOSS OF ANY UNIT DELIVERED TO AN INDEPENDENT WARRANTY STATION. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM STATE TO STATE (PROVINCE TO PROVINCE).

MAXX DIGITAL LIMITED
(877) 270-9585

KEEP YOUR SALES SLIP WITH THIS WARRANTY STATEMENT