


INSTRUCTION MANUAL

MICROWAVE OVEN

EC9P042SV-S

Please review this instruction manual before operating.

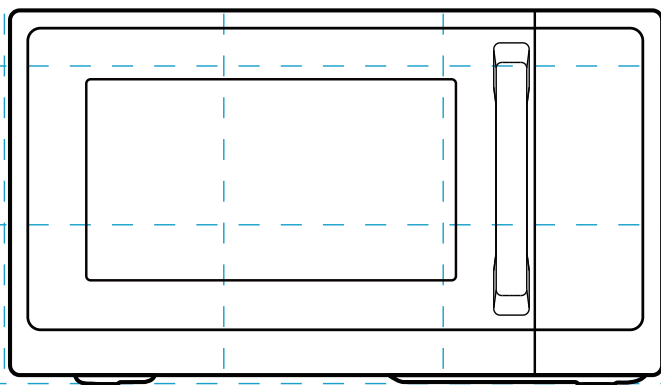

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
Grounding instructions.....	EN-07
Radio interference	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven	EN-11
Materials can not be used in microwave oven	EN-13

PRODUCT SETTING

Names of microwave oven parts and accessories	EN-14
Door opening guidance	EN-16
Turntable installation.....	EN-17
Countertop installation	EN-18
Installation	EN-18

INSTRUCTION FOR USE

Before using for the first time	EN-19
Operation	EN-20
Control panel and features	EN-20
Button function overview	EN-21
1. Setting the clock	EN-22
2. Setting the kitchen timer	EN-22
3. Microwave cooking	EN-23
4. Broiling cooking	EN-23
5. Combination cooking (microwave and convection).....	EN-24
6. Speedy cooking	EN-24

7. Air fry.....	EN-25
8. Convection cooking.....	EN-26
9. Keep warm function	EN-27
10. Defrost by time	EN-27
11. Defrost by weight	EN-28
12. Popcorn	EN-28
13. Auto menu	EN-29
14. Air fry presets menu	EN-30
15. Inquiring function	EN-31
16. Lock function for children	EN-32
17. Eco function	EN-32
18. Mute mode	EN-32

CLEANING AND MAINTENANCE

Cleaning.....	EN-33
Troubleshooting	EN-35
One year limited warranty	EN-37




BEFORE OPERATING THIS PRODUCT, READ,
UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLIST FOR FUTURE
REFERENCE.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

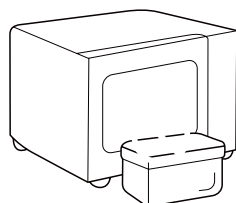

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

MODEL	EC9P042SV-S
RATED VOLTAGE/FREQUENCY	120VAC 60Hz
RATED INPUT POWER (MICROWAVE)	1500 W
RATED OUTPUT POWER (MICROWAVE)	900 W
GRILL	1500 W
CONVECTION	1500 W



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.

Read all instructions before using the appliance.

Read and follow the specific:

"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 01.

This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 07.


Install or locate this appliance only in accordance with the provided installation instructions.

HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO

USE THE MICROWAVE.

Use caution when removing hot items.

When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth. Please keep the wave guide area clean. Use soft damp cloth to clean it up when there is food splash residue on the wave guide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

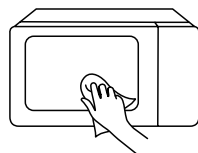

IMPORTANT SAFETY INSTRUCTIONS

Keep cord away from heated surface.


Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons:


1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow

the container to stand in the microwave oven for a short time before removing the container.

5. Use extreme care when inserting a spoon or other utensil into the container.

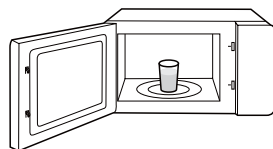

Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.

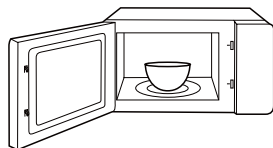


This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

IMPORTANT SAFETY INSTRUCTIONS


To reduce the risk of fire in the oven cavity:

1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

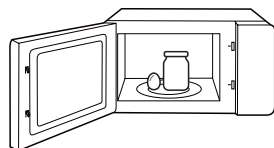

Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

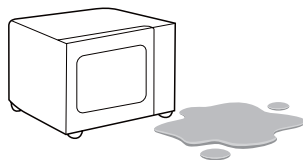

Do not immerse cord or plug in water or any other liquid.



IMPORTANT SAFETY INSTRUCTIONS

Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.

Do not cover or block any openings on the appliance.


Do not let cord hang over edge of table or counter.

Do not use paper products when appliance is operated in the toaster mode.



Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

Do not cover racks or any other part of the oven with metal foil. This will cause over-heating of the oven.

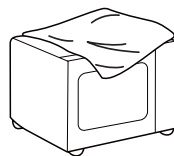

For cooking only (e.g., heating food). Do not use for other purposes.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY(NOT FOR
COMMERCIAL USE)

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS



WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.


RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
3. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 - (1) Reorient or relocate the receiving antenna.
 - (2) Increase the separation between the equipment and receiver.
 - (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - (4) Consult the dealer or an experienced radio/TV technician for help.

**This device complies
with part 18 of the FCC
Rules.**

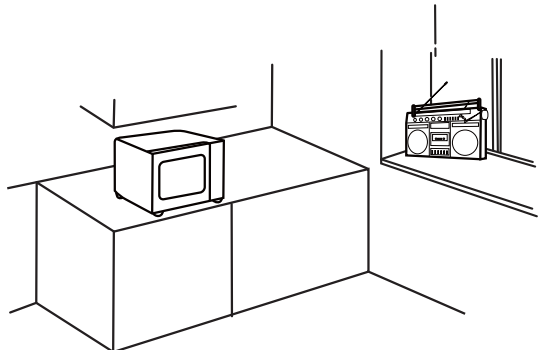

UTENSILS



Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven.**" or "**Materials can not be used in microwave oven .**"


There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

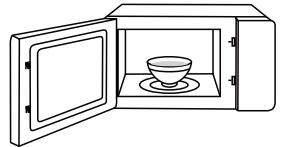

KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN

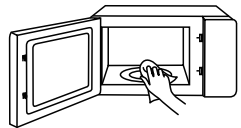



MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. (For the model with turntable.)
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.


MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
 Thermometers	Microwave-safe only (meat and candy thermometers).
 Wax paper	Use as a cover to prevent splattering and retain moisture.

  
MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
 Metal twist ties	May cause arcing and could cause a fire in the oven.
 Paper bags	May cause a fire in the oven.
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
 Wood	Wood will dry out when used in the microwave oven and may split or crack.


Remove the oven and all materials from the carton and oven cavity.

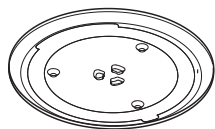


Glass Tray

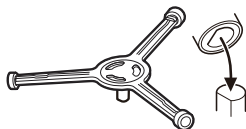

Turntable Ring Assembly

 


Instruction Manual

 


Grill Rack

(Can only be used without microwave function and must be placed on the glass turntable.)

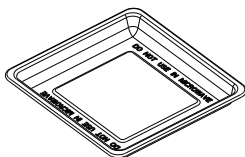

Grill Tray

(Cannot be used in conjunction with microwave function and can be placed on the grill rack.)

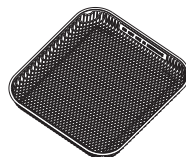

Air Fry Basket

(Can not be used in microwave and combination, it should be used for air fry.)


Observation window

Oven cavity

Glass tray

Control panel

Safety interlock system

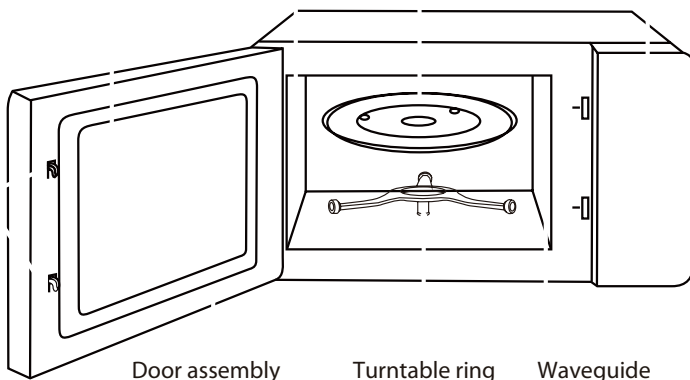

Door assembly

 
 
Turntable ring assembly

Waveguide cover



In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

Accessories reference chart


			
	Grill Rack	Grill Tray	Air Fry Basket
Microwave	×	×	×
Broil	√	√	√
Combination	×	×	×
Air Fry	√	√	√
Convection	√	√	√
Keep Warm	√	√	√
Defrost (Defrost By Time / Defrost By Weight)	×	×	×
Popcorn	×	×	×
Auto Menu: AC01~AC08, AC10	√	√	√
Auto Menu: AC09, AC11	√	×	×
Auto Menu: AC12~AC15	√	√	√
Air Fry Presets Menu	√	√	√




NOTE

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

Pull the release trigger upwards and then pull the handle to open the door.

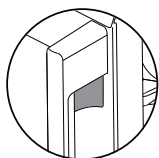

Release trigger

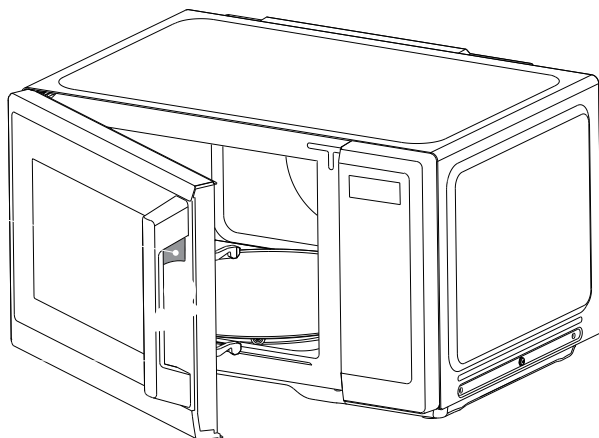

Handle



NOTE

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.


Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

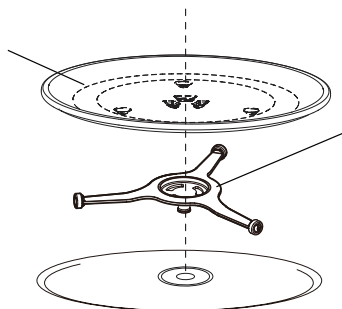

1) Glass Tray
2) Turntable Ring Assembly

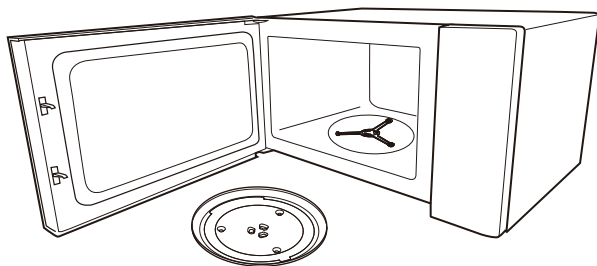


NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if the oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

1. Select a level surface that provides enough open space for the intake and/or outlet vents.
- a. The minimum installation height is 36 inches.
 - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top, and 1.0 inch on the rear.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Operation of microwave oven may cause interference to your radio or TV reception.
Please place the oven as far away from the radios and TV as possible.

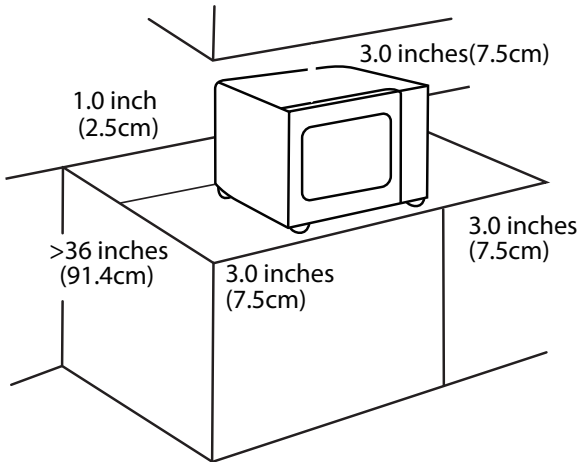


2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

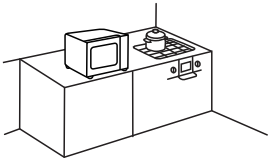

The accessible surface may be hot during operation

BEFORE USING FOR THE FIRST TIME

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.


Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

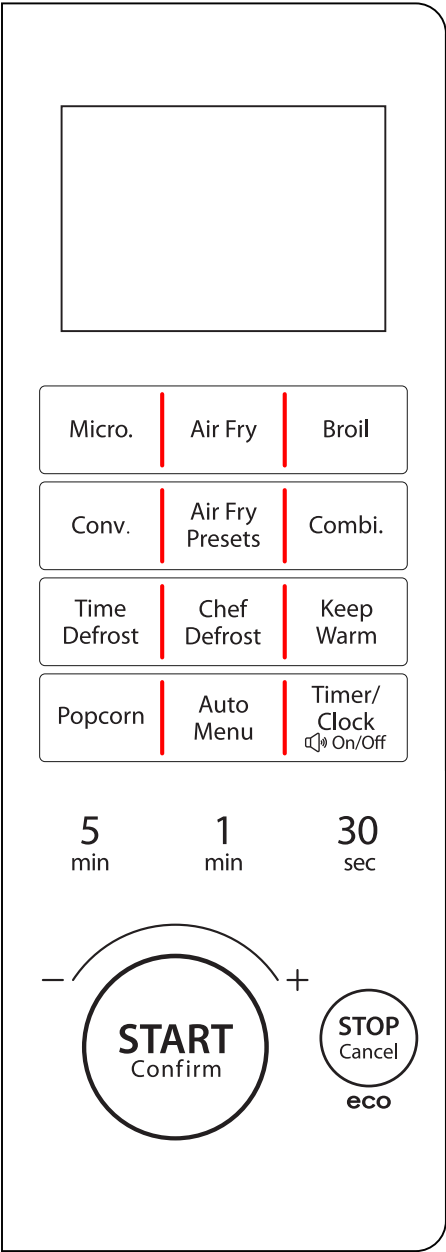


Micro.	Use microwave energy to cook
Air Fry	A cooking mode that uses the top heating element and a fan to circulate hot air rapidly, cooking food with a crispier exterior than traditional oven cooking
Broil	Use a thermal element to quickly grill/broil foods
Conv.	Cooking mode using convection heat to cook food evenly, ideal for baking cakes, pastries, or roasting dishes
Air Fry Presets	Air fry presets menu with preset programs based on weight
Combi.	Combination cooking mode: Microwave + Convection
Time Defrost	Quickly defrost frozen food by time
Chef Defrost	Quickly defrost frozen food by weight
Keep Warm	Keep the food at a constant temperature
Popcorn	Popcorn with preset programs based on weight
Auto Menu	Auto menu with preset programs based on weight
Timer/ Clock  On/Off	Cooking timer / Clock / Mute mode
5 min	Start speedy cooking for 5 minutes / Add 5 minutes
1 min	Start speedy cooking for 1 minute / Add 1 minute
30 sec	Start speedy cooking for 30 seconds / Add 30 seconds
START Confirm	Confirm input / Start operation
STOP Cancel eco	Pause active cooking status / Cancel current operation / ECO function / Lock function for children

After connecting the oven to the power, the display shows "0:00", the buzzer sounds, and the oven enters standby mode.

Press **Timer/
Clock**
On/Off twice, "00:00" will display.



 
Turn the knob to set the hour figures.



Press **START**
Confirm to confirm the hour figures.



 Turn the knob to set the minute figures.




Press **START**
Confirm to confirm. The clock is set.



NOTE

- The clock is a 12-hour display. If the clock is not set, it will not work when powered.
- To reset the clock, please repeat step a to step e.

 Press **Timer/
Clock**
On/Off once, "00:00" will display.



Turn the knob to set the desired time. The maximum time value is "99:00".



Press **START**
Confirm to confirm. The timer starts counting down.



NOTE

- The kitchen timer is a timer.
- Any other program can't be set during the kitchen timer.


The 10 power levels are available.

POWER	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
DISPLAY	P100	P90	P80	P70	P60	P50	P40	P30	P20	P10

Press **Micro.** repeatedly to choose the power level.



 Press **Micro.** once, and then turn the knob to set the power level.




The 10 power levels are available.

Press **START**
Confirm to confirm the power level.



 
Turn the knob to set the cooking time, the maximum time value is "99:00".




Press **START**
Confirm to start cooking.



 Press **Broil** once, "5:00" will display.



 Turn the knob to set the cooking time, the maximum time value is "99:00".




Press **START**
Confirm to start cooking.



Press **Combi.** once, "15:00" will display.

Combi.

 
Turn the knob to set the cooking time, the maximum time value is "99:00".




Press **START**
Confirm to start cooking.

START
Confirm

 First turn the knob left to set a cooking time at 100% power.



 Continue to turn the knob to adjust the cooking time, the maximum time value is "99:00".



Press **START**
Confirm to start cooking.

START
Confirm

Press **5**_{min} , **1**_{min} , or **30**_{sec} once to cook food at 100% power level for corresponding time. Each press on the same key can increase corresponding time and the maximum time value is "99:00".

5_{min} **1**_{min} **30**_{sec}



NOTE

 
- In the microwave, broiling, combination, air fry, convection, keep warm, and defrosting by time cooking state, each more press on **5**_{min} , **1**_{min} , or **30**_{sec} can increase the cooking time by corresponding time, or turn the knob to change the cooking time (except the defrosting by weight, preheating, air fry presets menu, popcorn, and auto menu).

Press **Air Fry** repeatedly to set the temperature.
"150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F,
425°F, 450°F" are available.

Air Fry

Press **Air Fry** once, and then turn the knob to set
the temperature. "150°F, 250°F, 275°F, 300°F, 325°F,
350°F, 375°F, 400°F, 425°F, 450°F" are available.

Air Fry



Press **START**
Confirm to confirm.

 
START
Confirm

Press **START**
Confirm again to start preheating.

When preheating is completed, the buzzer will sound.
Open the door and place the food in the oven. And then close
the oven door. (If preheating is not required, please skip this step.)

START
Confirm

Turn the knob to set the cooking time, the maximum
time value is "99:00".



Press **START**
Confirm to start cooking.

START
Confirm

 
Press **Conv.** repeatedly to set the temperature.

"100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F" are available.

Conv.

Press **Conv.** once, and then turn the knob to set the temperature. "100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F" are available.

Conv.



Press **START**
Confirm to confirm.

 
START
Confirm

Press **START**
Confirm again to start preheating.

When preheating is completed, the buzzer will sound.
Open the door and place the food in the oven. And then close the oven door. (If preheating is not required, please skip this step.)

START
Confirm

Turn the knob to set the cooking time, the maximum time value is "99:00".




Press **START**
Confirm to start cooking.

START
Confirm

Press **Keep Warm** once, "30:00" will display.

Keep Warm

 Turn the knob to set the cooking time, the maximum time value is "99:00".



Press **START** Confirm to start keeping the food warm.

START
Confirm



 
NOTE

- The keep warm function operates with convection at 150°F.

Press **Time Defrost** once, and then "5:00" will display.

Time Defrost

Turn the knob to set the desired defrosting time, the maximum time value is "99:00".



Press **START** Confirm to start defrosting.

START
Confirm



 
NOTE

- The defrost power is P30 and it cannot be changed.

Press **Chef Defrost** repeatedly to set the type of the food.
"dEF1, dEF2, dEF3, dEF4, dEF5" are available.




Press **Chef Defrost** once, and then turn the knob to set the type of the food.
"dEF1, dEF2, dEF3, dEF4, dEF5" are available.



Press **START Confirm** to confirm.



 Turn the knob to set the weight of the food.



Press **START Confirm** to start defrosting.



Defrost By Weight Chart

DISPLAY	TYPE OF FOOD	WEIGHT
dEF1	Meat	4.00-70.00 Oz
dEF2	Chicken	4.00-70.00 Oz
dEF3	Fish	4.00-70.00 Oz
dEF4	Vegetable	4.00-32.00 Oz
dEF5	Bread	4.00-24.00 Oz



NOTE

- The buzzer will sound to remind you to turn the food over during defrosting.
If no operation, the oven will continue working.

Press **Popcorn** repeatedly to set the weight of the food.
"3.50 Oz, 3.00 Oz, 1.75 Oz" are available.



 
Press **Popcorn** once, and then turn the knob to set the weight of the food. "3.50 Oz, 3.00 Oz, 1.75 Oz" are available.




Press **START Confirm** to start cooking.



In standby mode, press **Auto Menu** once or first turn the knob right, and then "AC01" will display.



 
Press **Auto Menu** repeatedly or continue to turn the knob to choose the menu you need. The 15 auto menus are available.



Press **START Confirm** to confirm.



 Turn the knob to set the weight of the food or time.



Press **START Confirm** to start cooking.



• For the single-serving menus, please skip the step d.

Menu Chart

MENU	WEIGHT/ TIME	DISPLAY	POWER LEVEL	RECOMMENDED ACCESSORIES
AC01 Beverage	1 Cup (120ml)	1	Microwave 100%	-
	2 Cups (240ml)	2		
	3 Cups (360ml)	3		
AC02 Potato	8.00 Oz	8.00 Oz	Microwave 100%	-
	16.00 Oz	16.00 Oz		
	24.00 Oz	24.00 Oz		
AC03 Dinner Plate	5.00 Oz	5.00 Oz	Microwave 100%	-
	9.00 Oz	9.00 Oz		
	16.00 Oz	16.00 Oz		
	21.00 Oz	21.00 Oz		
AC04 Pizza Reheat	4.00 Oz	4.00 Oz	Microwave 100%	-
	8.00 Oz	8.00 Oz		
	12.00 Oz	12.00 Oz		
AC05 Frozen Vegetable	6.00 Oz	6.00 Oz	Microwave 100%	-
	10.00 Oz	10.00 Oz		
	16.00 Oz	16.00 Oz		

Menu Chart

MENU	WEIGHT/ TIME	DISPLAY	POWER LEVEL	RECOMMENDED ACCESSORIES
AC06 Meat	5.00 Oz	5.00 Oz	Microwave 80%	-
	11.00 Oz	11.00 Oz		
	16.00 Oz	16.00 Oz		
	21.00 Oz	21.00 Oz		
AC07 Soup	8.00 Oz	8.00 Oz	Microwave 100%	-
	16.00 Oz	16.00 Oz		
	24.00 Oz	24.00 Oz		
AC08 Oatmeal	2.00 Oz	2.00 Oz	Microwave 100% +50%	-
	4.00 Oz	4.00 Oz		
AC09 Speed Roast Chicken Drumsticks	20.00 Oz	20.00 Oz	Combination	Grill rack
AC10 Speed Roast Whole Chicken	56.00 Oz	56.00 Oz	Combination	-
AC11 Speed Roast Potato Wedges	16.00 Oz	16.00 Oz	Combination	Grill rack
AC12 Chocolate Chip Cookies	8 pcs (1 oz/pcs)	8	Preheating 275°F+ Convection 300°F	Grill tray
AC13 Blueberry Muffins	6 pcs (1.75 oz/pcs)	6	Preheating 275°F+ Convection 275°F	Grill tray
AC14 Banana Bread	34.00 Oz	34.00 Oz	Preheating 275°F+ Convection 275°F	Grill tray
AC15 Dehydrate	Max: 10 hours (10:0H)	Current remaining time	Convection 150°F	-

Press

Air Fry Presets

repeatedly to choose the menu you need.

The 10 air fry presets menus are available.

Air Fry Presets

Press

Air Fry Presets

once, and then turn the knob to choose the menu you need.

The 10 air fry presets menus are available.

Air Fry Presets

-

+

Press

START Confirm

once to confirm, the default weight will display, and then press

START Confirm

again to start cooking.

START Confirm

Air Fry Presets Menu Chart

MENU	DISPLAY	WEIGHT/ TIME	POWER LEVEL	RECOMMENDED ACCESSORIES
Frozen French Fries	AF01	16.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Frozen Steak Fries	AF02	18.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Frozen Squid Rings	AF03	14.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Frozen Chicken Nuggets	AF04	20.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Chicken Wings	AF05	28.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Frozen Fish Sticks	AF06	16.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Frozen Fish Fillets	AF07	16.00 Oz	Convection 425°F	Grill tray+ Air fry basket
Frozen Cheese Sticks	AF08	16.00 Oz	Convection 450°F	Grill tray+ Air fry basket
Vegetable	AF09	18.00 Oz	Convection 425°F	Grill tray+ Air fry basket
Spring Rolls	AF10	16.00 Oz	Convection 450°F	Grill tray+ Air fry basket



- For the menus “AF03” to “AF10”, the buzzer will sound to remind you to turn the food over during cooking.

If the clock has been set, the current time will display for three seconds by pressing  in the cooking state.

In the microwave cooking state, press **Micro.** to inquire about the power level. It will display for three seconds.

Timer/
Clock
 On/Off

Micro.

In the air fry and convection cooking state, press **Air Fry** or **Conv.** to inquire the temperature. It will display for three seconds.

Air Fry

Conv.

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

To activate the lock:

In standby mode, press and hold **STOP Cancel eco** for three seconds.
A beep sounds and the locked icon will display.

STOP
Cancel
eco

To deactivate the lock:

In the locked state, press and hold **STOP Cancel eco** for three seconds.
A beep sounds.

STOP
Cancel
eco

To enter ECO mode:

In standby mode with the oven door closed, if the clock is not set, the screen will turn off after pressing **STOP Cancel eco** or after 5 minutes of no operation; if the clock is set, the screen will only turn off when **STOP Cancel eco** is pressed.

STOP
Cancel
eco

To cancel ECO mode:

In ECO mode, pressing any key, turning the knob, or opening the door will cancel it.

To activate the mute mode:

In standby mode, press and hold **Timer/Clock On/Off** for three seconds.
A beep will sound and "oFF" will display. When you press the key, it does not make a sound.

Timer/
Clock
On/Off

To deactivate the mute mode:

In mute mode, press and hold **Timer/Clock On/Off** for three seconds.
A beep will sound and "On" will display.

Timer/
Clock
On/Off

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven.



- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, see the information in the table. Wash new sponge or cloth thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal




Hard scouring pads or sponges



Cleaning agents with a high alcohol content


Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

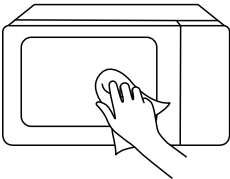


Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

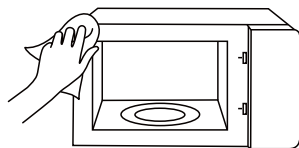**Hot soapy water or vinegar solution:**


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

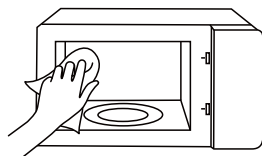**Damp cloth:**

Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

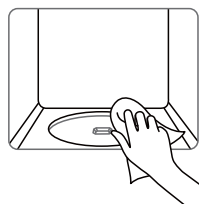**Hot soapy water:**

When placing the turntable back into its recess, it must engage properly.

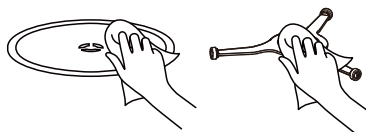**Glass cleaner:**

Clean with a dish cloth. Do not use glass scrapers.

Troubleshooting

Before calling for service

Malfunctions can occur in all electrical appliances. This does not necessarily mean there is a defect in the appliance. For this reason, please check the tables to see if you can correct the malfunction. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary repair costs. If you cannot solve it by yourself, please contact your nearest brand authorized service center.

WARNING-Risk of injury!

Improper repairs are dangerous

Repairs to the appliance should only be carried out by professional technician.

If the appliance is defective, call Customer Service.

Never try to repair a defective or suspected defective appliance by yourself.

COMMON PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
The appliance is not working.	The mains plug of the power cord is not plugged in.	Unplug, then plug again tightly.
	There has been a power cut.	Check whether the lighting in your kitchen or other appliances are working.
	The door is not fully closed.	Check whether food remains or foreign material are trapped in the door, and make sure the door is properly closed.
No heating	The door is not closed well.	Make sure the door is properly closed.
Noise	Microwave ovens make noise while working, but if the noise becomes unusually loud or unusual, it may be due to the turntable was not placed in the correct position. (For the model with turntable.)	Place the turntable in the correct position.

Troubleshooting

COMMON PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
Improper defrosting	The microwave power setting is set to lower. The food is colder than usual.	-
	Materials to be avoided were used.	Use microwave-safe cookware only.
	The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
	The food is not turned over or stirred.	Turn over or stir the food.
Unevenly cooked foods; Undercooked foods	The microwave power setting is set to lower.	-
	Materials to be avoided were used.	Use microwave-safe cookware only.
	The food is not defrosted completely.	Completely defrost food.
	The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
	The food is not turned or stirred.	Turn or stir the food from time to time during cooking.
Overcooked foods	The microwave power setting is set to higher. The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
The microwave is sparking, and arcing occurs.	Materials to be avoided were used.	Use microwave-safe cookware only.
	The oven is operated with no food in it.	It is forbidden to run the oven without any food inside. It is very dangerous.
	Spilled food remains in the cavity.	Clean the cavity with a wet towel.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of Canada.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

Midea America (Canada) Corp.
Markham, ON L3R 8V2
1-855-238-5607

Midea America (Canada) Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer's warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

Details**Matter**