



User's Guide

Digital Video Baby Monitor

Models: MBP30A, MBP30A-2, MBP30A-3, MBP30A-4

The features described in this User's Guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Digital Video Baby Monitor!

Thank you for purchasing your new Motorola Digital Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records.

For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada 1-888-331-3383

Email: support@motorolahome.com

On the Web: www.motorolastore.com/support

This User's Guide provides you with all the information you need to get the most from your product.

 
Before you use the Baby Monitor, we recommend you fully charge the batteries in the Baby Unit and Parent Unit, so that they continue to work if you disconnect them from the power supplies to carry to other locations. Please read the Safety Instructions on pages 7-9 before you install the units.

Got everything?

- 1 x Parent unit
- 1 x Baby unit (Camera)
- 1 x Rechargeable Ni-MH battery pack
- 1 x Power adapter for the Parent unit
- 1 x Power adapter for the Baby unit

In multi-camera packs, you will find one or more additional camera units with power adapter units.

Overview of the Parent Unit

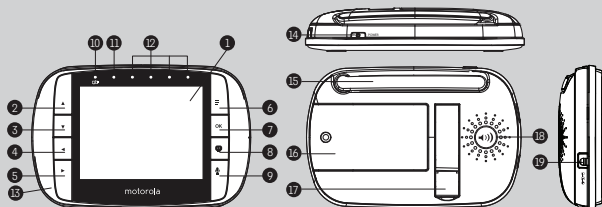


1. Display (LCD screen)
2. Up Key ▲
Normal Mode: Tilt Up
Menu Mode: Up
3. Down Key ▼
Normal Mode: Tilt Down
Menu Mode: Down
4. Left Key ◀
Normal Mode: Pan Left
Menu Mode: Left
5. Right Key ▶
Normal Mode: Pan Right
Menu Mode: Right
6. Menu Key ≡
Press to open the Menu options
7. OK KEY **OK**
Press to confirm a selection or to select the viewing mode if more than one camera is registered (Camera Number, Scan Mode or Split Screen Mode).
8. Video ON/OFF Key 
Press to turn OFF the LCD display
Press any key to turn ON the LCD display
9. Talk Key 
Press and hold to speak to your baby
10. Power Indicator LED
RED when mains adapter power on.
Flashes RED when battery low.
11. Unit ON/OFF LED (Green)
12. Audio Level LED (Green, Green, Orange, Red)
13. Microphone
14. Power Key 
Press and Hold to turn the unit ON/OFF
15. Antenna
Lift the antenna for optimal reception
16. Battery compartment cover
17. Stand
18. Speaker
19. Power adapter socket

Parent unit menu and display icons

	Signal Level (4 Levels)
	Night Vision Mode (Screen changes to Black/White)
	Talk Mode
	Battery Level Control (5 Levels)
	Pan Left
	Pan Right
	Tilt Up
	Tilt Down
	Volume Level Control (5 Levels + OFF)
	Zoom Level Control (1X, 2X)
	Brightness Level Control (5 Levels)
	Lullaby Control (5 Sound Selections)
	Alarm Setting (6h, 5h, 4h, 3h, 2h or OFF). Also appears at the top of the display when set, and in the middle of the display when the alarm time is reached.
	Temperature Alert On/Off, Limit Setting and °C/°F Selection. To give a warning if the temperature at the Baby unit is above or below the limits set
	Warning that temperature is above the maximum limit set.
	Warning that temperature is below the minimum limit set.
	To set the temperature format to °C or °F.
	To set the maximum and minimum temperature limits for the alarm. (Max: 25-37°C/77-99°F. Min: 10-24°C/50-76°F).
	To turn the alarm function On or Off.
	Camera Control (to add (+) or delete (x))
	Set Video On Timer (5 min, 30 min, 60 min or OFF)

 Overview of Your Baby Unit

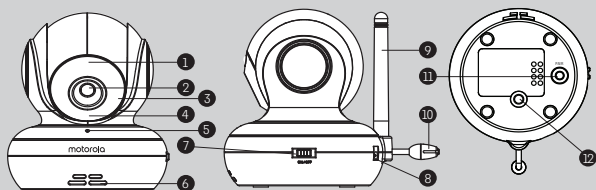

- | | |
|--|--|
| 1. Photo Sensor
(Night Vision Mode) | 8. Power Adapter Socket |
| 2. Camera Lens | 9. Antenna |
| 3. Infrared LEDs | 10. Temperature Sensor |
| 4. Power LED | 11. Pair Key |
| 5. Microphone | 12. Screw mounting hole (To install a
StarGrip accessory for flexible
mounting options.) |
| 6. Speaker | |
| 7. Power Switch ON/OFF | |

Important guidelines for installing your Baby Monitor

- To use your Video Monitor Baby and Parent Units together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try lifting up the Parent Unit Antenna, moving the Parent and/or the Baby Unit to different positions in the rooms.

Table of contents


1. Safety Instructions.....	7
2. Getting Started.....	10
2.1 Baby Unit Power Supply.....	10
2.2 Parent Unit Battery Installation.....	10
2.3 Parent Unit Power Supply.....	11
2.4 Registration (Pairing).....	12
3. Using the Baby Monitor.....	13
3.1 Setting up.....	13
3.2 Pan and Tilt.....	13
3.3 Night Vision Mode.....	13
3.4 Talk Mode.....	13
3.5 Video ON/OFF.....	13
3.6 Temperature Display.....	14
4. Parent Unit Menu Options.....	15
4.1 Volume.....	15
4.2 Brightness.....	15
4.3 Lullaby.....	15
4.4 Zoom.....	15
4.5 Alarm.....	16
4.6 Camera Control.....	16
4.6.1 Add (pair) a camera.....	16
4.6.2 Delete a camera.....	17
4.6.3 View multiple cameras on screen.....	17
4.7 Temperature Setting.....	18
4.8 Power Saving mode.....	18
5. Disposal of The Device (environment).....	19
6. Cleaning.....	20
7. Help.....	21
8. General Information.....	23

1. Safety Instructions



WARNING:

 Strangulation Hazard: Children have **STRANGLED** in cords. Keep the unit and adapter cord more than 1 metre from the cot and out of the baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

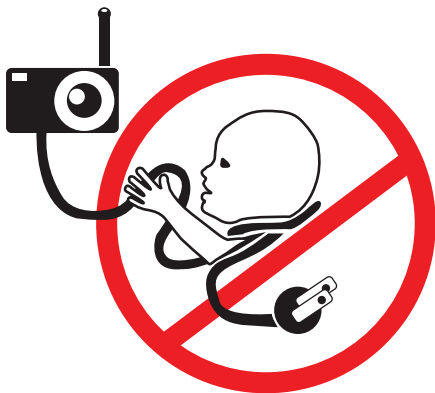

CAMERA SET UP & USE:

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her cot.
- Place the **BABY UNIT** on a flat surface, such as a dresser, bureau or shelf.
- **NEVER** place the Baby Unit or cords within the cot or within reach of the baby (the unit and cords should be more than 1 metre away).

WARNING

This digital video baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This baby monitor is not a substitute for responsible adult supervision.
- Keep this user's guide for future reference.
- Do not place the baby unit or cords in the cot or within reach of the baby (the unit and cords should be more than 1 metre away)
- Keep the cords out of reach of children.
- Do not cover the baby monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the baby monitor near water.
- Do not install the baby monitor in extreme cold or heat, direct sunlight or close to a heat source.

- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.

CAUTION

 
There is a risk of fire or explosion if the parent unit battery is replaced by an incorrect type.

Only use a Ni-MH rechargeable battery pack with rating: 3.6V, 800mAh.

Dispose of used batteries according to their instructions.

2. Getting Started

2.1 Baby Unit Power Supply

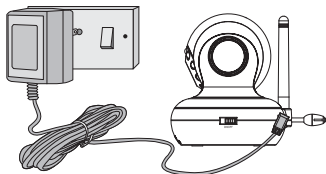


1. Connect the small plug of the power adapter to the baby unit (camera) and the other end to a suitable mains power socket.

NOTE


Only use the enclosed power adapter (6V DC / 800mA).

2. Slide the ON/OFF switch to the ON position. The power LED will light up in green.
3. Slide the ON/OFF switch to the OFF position to turn the Baby Unit off.

 2.2 Parent Unit Battery Installation

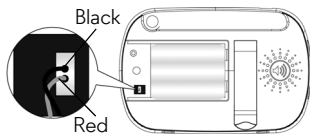


 1. Insert the wire tab of the rechargeable battery pack into the contact slot as shown above and fit the battery pack into the compartment.

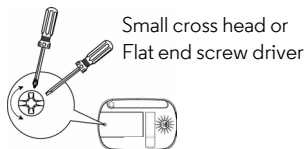

2. Replace the battery cover over the compartment and gently tighten the screw in a clockwise direction using a Small cross head or Flat end screw drivers.

 2.3 Parent Unit Power Supply

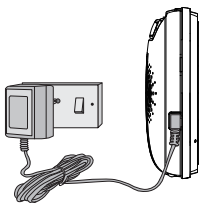

IMPORTANT

Installing the rechargeable battery pack and charging it fully before use is recommended, to allow temporary operation of the parent unit in the event of a power failure or if the parent unit is moved.

1. Connect the small plug of the power adapter to the parent unit and the other end to a suitable mains power socket. Only use the enclosed power adapter (6V DC / 500mA) with the slightly smaller DC plug.
2. Press and hold the  POWER ON/OFF button to turn ON the parent unit.
3. Once the baby and parent units are switched on, the display on the parent unit will show the video captured by the baby unit.
4. If there is no connection or you are out of range, the video display will change to the Motorola screen with a flashing  icon and the unit will beep about every 10 seconds. Move the parent unit closer to the baby unit until the link is re-established.
5. Press and hold the  POWER ON/OFF button to turn OFF the parent unit.

NOTE

The battery icon  turns RED, the Power Indicator LED flashes RED and the unit emits a beep about every 10 seconds to indicate that the battery is low and needs to be recharged. The battery pack takes about 16 hours to charge fully.

2.4 Registration (Pairing)

The Baby monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit, follow the procedure below:

1. Press the  button of the parent unit and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted and then press the **OK** button so the  Add/  Delete menu will pop up.
3. Press the  UP button or  DOWN button to select  Add, and press the **OK** button to confirm.
4.  cam 1 /  cam 2 /  cam 3 /  cam 4 will pop up, press the  UP button or  DOWN button to select the desired Camera and press the **OK** button to start searching for a camera unit. The green ON / OFF LED will flash rapidly while searching.
5. Press and hold the PAIR button underneath the baby unit until the parent unit finds the camera, beeps and the video from the camera appears.

NOTE:

You can only register a new camera to a camera number that is not already paired.

*Paired camera numbers are indicated by a *, such as cam*1.*

If the camera being paired was registered previously, it will lose the old registration when it is paired again.

3. Using the Baby Monitor

3.1 Setting up

- Place the baby unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.
- Adjust the baby unit's head angle with pan and tilt until you are satisfied with the image in the parent unit.

NOTE

Do not place the baby unit within the baby's reach! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.

3.2 Pan and Tilt

The camera can be remotely controlled from the parent unit.

1. Press the ▲ UP button or ▼ DOWN button to tilt upward or downward.
2. Press the ◀ LEFT button or ▶ RIGHT button to pan left or right.

3.3 Night Vision Mode

The baby unit has 8 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in photo sensor near the top of the unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the parent unit will display in black and white. The 🌙 icon will be displayed at the top of the screen.

3.4 Talk Mode

Press and hold the 🗣️ TALK button on the parent unit to talk to your baby through the baby unit's loudspeaker. The 🗣️ icon will be displayed at the top of the LCD screen.

3.5 Video ON/OFF

Press 📺 VIDEO ON/OFF key to turn the LCD display on or off, but still leave the audio monitor on.

3.6 Temperature Display

The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the LCD screen, or at the bottom in split screen mode.

If the temperature alarm is turned on, the Parent Unit will beep and display Temperature High  or Temperature Low  when the temperature at the Baby Unit is above or below the maximum or minimum temperature limits set for the alarm. (Max: 25-37°C/77-99°F. Min: 10-24°C/50-76°F).

4. Parent Unit Menu Options

4.1 Volume

1. Press the  button and the menu bar will appear with  highlighted.
2. Press the **OK** button to show the volume set level.
3. Press the  UP button or  DOWN button to select the desired volume level from level 0 ~ 5. (The default volume level setting is level 3.)

4.2 Brightness

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to show the brightness set level.
4. Press the  UP button or  DOWN button to select the desired brightness level from level 1 ~ 5. (The default brightness level setting is level 3.)

4.3 Lullaby

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to show the choices 1-5 or stop.
4. Press the  UP button or  DOWN button to select from the 5 sounds available. If a sound is selected it will repeat continuously until it is deselected. (The default setting is stop with the sounds off.)

4.4 Zoom

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to show the zoom set level.
4. Press the  UP button or  DOWN button to select the 1X or 2X Zoom. (The default setting is 1X.)

4.5 Alarm

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to show the alarm Off / On setting.
4. Press the  UP button or  DOWN button to select Alarm ON, then press **OK** and  UP or  DOWN to select the alarm time 6h, 5h, 4h, 3h, 2h. (The default setting is Alarm OFF.)
5. If an alarm time is selected  will appear on the display and, after the alarm time is reached, the parent unit will beep about every 10 seconds and flash the alarm icon, until any button is pressed.

4.6 Camera Control

4.6.1 Add (pair) a camera

1. Press the  button of the parent unit and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and then press **OK** for the  Add/  Delete menu to appear.
3. Press the  UP button or  DOWN button to select  Add, and press the **OK** button to confirm.
4.  cam 1 /  cam 2 /  cam 3 /  cam 4 will pop up, press the  UP button or  DOWN button to select the desired Camera and press the **OK** button to start searching for a camera unit. The green ON / OFF LED will flash rapidly while searching.
5. Press and hold the PAIR button underneath the baby unit until the parent unit finds the camera, beeps and the video from the camera appears.

NOTE

You can only register a new camera to a camera number that is not already paired.

*Paired camera numbers are indicated by a *, such as cam*1.*

If the camera being paired was registered previously, it will lose the old registration when it is paired again.

4.6.2 Delete a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to confirm.
4. The  Add /  Delete menus will pop up.
5. Press the  UP button or  DOWN button to select  Delete, and press the **OK** button to confirm.
6.  cam 1 /  cam 2 /  cam 3 /  cam 4 will pop up, press the  UP button or  DOWN button to select the Camera to delete and press the **OK** button to delete that registration.

Note:

You are not allowed to delete the camera if there is only one registered camera in the system.

4.6.3 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). While viewing a camera picture, press the **OK** button repeatedly to select **Scan mode**, **Desired Camera** or **Multi-cameras**, the icons will display on the status bar.

Scan mode

the screen will display images from different registered cameras in a loop of  cam 1 /  cam 2 /  cam 3 /  cam 4, changing about every 10 seconds.

Desired Camera

 cam 1 /  cam 2 /  cam 3 /  cam 4 - to view the picture from that camera.

Multi-cameras

you can view multiple cameras on a split screen and press the  LEFT button /  RIGHT button /  UP button /  DOWN button to switch between cameras, so you can listen to the audio from the selected one indicated by a red frame around its picture.

Note:

With multiple cameras, the parent unit will only hear the sound from the selected camera.

4.7 Temperature Setting

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to show the temperature options.
4. The temperature setting  /  /  will pop up.

Temperature Format  - to select either Centigrade **°C** or Fahrenheit **°F**.

Temperature Limit  to define the High temperature limit  (25-37°C / 77-99°F) and Low temperature limit  (10-24°C / 50-76°F).

Temperature Alert  - Turn the temperature alert ON, the Parent Unit will beep and display Temperature High  or Temperature Low  when the temperature at the Baby Unit is detected above or below the maximum or minimum temperature limits you set.

5. Press the  UP button or  DOWN button to select your setting and confirm by pressing the **OK** button.

4.8 Power Saving mode

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the **OK** button to show the power saving options.
4. Press the  UP button or  DOWN button to select for the parent unit video to turn off after 5 mins, 30 mins or 60 mins if no buttons have been pressed.
5. The audio will remain on, and you can press any button to turn the video screen back on.

Note:

If there are multiple cameras in scan mode, the audio will switch about every 30 seconds.

5. Disposal of The Device (environment)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

6. Cleaning

Clean the baby monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals -- this may cause permanent damage to the product which is not covered by the warranty.
- Keep your baby monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your baby monitor. However, if something does go wrong, please do not try to repair it yourself -- contact Customer Service for assistance.

7. Help

Display

No display

- Try recharging or replacing the battery pack.
- Reset the units. Disconnect the battery pack of the parent unit and unplug both the units' electrical power, then plug them back in.
- Is the unit turned on?
Press and hold the ON/OFF button  on the parent unit to turn it ON.
- Slide the ON/OFF switch on the Baby Unit (Camera) to ON.
- Is the correct camera selected?
Change the camera number, if necessary.
- Is the video display turned on?
Press the VIDEO ON/OFF button  to turn it on.
- If the power save mode is set, the Display will go blank after 5 minutes or 30 minutes or 60 minutes to save power (depending on video on setting).
The unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

Registration

If the Baby Unit has lost its link with the Parent Unit

- Try recharging or replacing the battery pack.
- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset the units by disconnecting them from the battery and electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronise.
- See 2.4 Registration (Pairing), if there is a need to re-register the units.

Interference

Noise interference on your parent unit

- Your baby and parent units may be too close. Move them farther apart.
- Make sure there is at least 1m to 2m (3 to 6 feet) between the 2 units to avoid audio feedback, and reduce the volume of the Parent Unit.
- If the baby unit is too far away it may be out of range, so move the baby unit closer to the parent unit.
- Make sure the baby and parent units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

8. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Contact Customer Service:
US and Canada 1-888-331-3383
Email: support@motorolastore.com

To order a replacement battery pack, contact customer service.

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY BY STATE, PROVINCE OR COUNTRY. FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada 1-888-331-3383

Email: support@motorolastore.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE authorised Repair centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

Declaration of Conformity

Trade Name : Motorola
Model : MBP30ABU, MBP30APU
Responsible party : Binatone North America Inc.,
Address : 8720 Castle Creek Parkway East Drive,
Suite 131 Indianapolis, IN 46250, United States
Telephone Number : 317-313-0581

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

WARNING

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

CC RF Radiation Exposure Statement Caution: This Transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

IC Radiation Déclaration d'exposition Attention: Cet émetteur doit être installé pour fournir une distance de séparation d'au moins 20 cm de toute personne.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Technical Specifications

BABY UNIT

Frequency Band	2400 MHz to 2483.5 MHz
Image Sensor	colour CMOS 0.3M

Operating Temperature Arange	0 °C ~ +50 °C
-------------------------------------	----------------------

Power Adapter	CS6F060080FUF (CHOUSEN) Input: 100-240V AC, 50/60Hz, 200mA; Output: 6.0V DC, 800mA
----------------------	---

WARNING

Use only with supplied power supply.

PARENT UNIT

Frequency Band	2400 MHz to 2483.5 MHz
Display	3" diagonal TFT LCD
Brightness control	5 steps
Volume control	5 steps+Off
Operating Temperature Arange	0 °C ~ +50 °C

Power Adapter**S003GU060050(Tenpao)****Input: 100-240V AC, 50/60Hz, 200mA;****Output: 6.0V DC, 500mA****WARNING***Use only with provided power supply.*

Battery**GP80AAAHC3BMXZ (GPI)****or JHAAA800P3H (JUSTHIGH)****Ni-MH AAA 3.6V 800mAh Ni-MH
rechargeable battery pack****WARNING***Do not use non-rechargeable batteries for the Parent Unit. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.*



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2019 Motorola Mobility LLC. All rights reserved.



EN_US Version 1.0
Printed in China