

AT GLANCE
the important bits, quick and easy

- Multi-Function Button (MFB)
- LED Indicator
- Microphone
- Boom open-on close-off
- Charge (Type C)
- Volume Up Button
- Volume Down Button
- Microphone

A diagram of the Type C cable, which is a black, flexible, coiled cable. It has a small, circular earpiece at one end and a larger, hook-like earhook at the other. The cable is shown in a loose, coiled state. Labels with leader lines point to different parts: 'Wear' points to the earhook, 'Earloop' points to the coiled part of the cable, 'Earpiece' points to the small circular earpiece, and 'Earhook' points to the hook-like part of the earhook.

CONNECT & GO

let's get you connected

EASYPAY™ METHOD

-  Turn on Bluetooth on your device.
-  Turn on your headset and follow the voice prompts.
-  Select "Bloom" from the smart phone Bluetooth menu.
-  When the device and headset connect, you'll hear "connected".

COMFORT

what feels best on you

Choose your most comfortable fit ear tip.

	Earhook	Right Ear	Left Ear
			
			

4

EN

4

EN

BASICS		To...	
standard features, advanced quality			
To...		pause/play	press MFB once to pause and press again to play
answer a call	short press MFB	playing mode	press MFB 6 seconds to enter into playing mode when headset is in on mode
reject a call	short press MFB	rest	press MFB and volume down 6 seconds
end a call	boom (open, on)	3-way call ongoing	
call	boom (close off)	pick incoming call, put ongoing call on hold	press MFB once
change call volume	press the volume up and volume down button	incoming call on hold	
mute or unmute a call	press volume down 2 seconds during the call and press volume up 2-3s to unmute.	continue incoming/continue ongoing	
last track	press volume down 2 seconds when headset is in music state	ongoing ongoing, press waiting call	double press MFB
next track	press volume up 2 seconds	switch calls	press MFB once
		end current call	double press MFB

Notes:

- Some features are *phonetnetwork dependent*.
- Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

STATUS LIGHT

if light shows...	your headset is...
power on	blue flashes 1 second.
power off	red flashes 2 seconds.
pairing	red & blue flashes alternately.
on standby	blue flashes once every 5 seconds.
charging	steady red.
fully-charged	steady blue.
low battery	red flashes once every 5 seconds.

ADVANCED
more clever stuff

SECOND DEVICE

Do you use two phones? Or maybe a phone and a tablet? Connect with both of them.

- 1 Put the first device with your headset as normal. Connect it (GO to page 4).
- 2 Turn off the Bluetooth® feature on the first device.
- 3 Now pair the second device with your headset as normal.

Once paired, to connect with both devices simply turn the first device on.

SETTINGS

Restore Factory Settings:
This feature erases all settings on your headset.

Default:
This feature restores all device pairing information stored on the headset.

Multipoint:
Connect your headset to two devices.

Safety instructions for use



To avoid hearing damage, keep the volume at a moderate level. Avoid listening to music at loud volume levels for prolonged periods of time, as this may cause permanent hearing damage or hearing loss. Your hearing is delicate and highly sensitive, so please listen to your music responsibly. For more information visit the Deafness Research Foundation www.drf.org.

Don't use Boom 3 when it is unsafe to do so. For example, while operating a vehicle, cycling, crossing a road, or any activity which requires your attention and ability to hear.

You should be aware of your surroundings and use Boom 3 responsibly.

10 EN EN 11

Help & more

- Email Support: support@motorolastore.com
- Live Chat: MotorolaStore-support

Notice: If you're watching video with your earbuds, your video may be slightly out of sync with your video.

Manufactured, distributed, or sold by Blainette Electronics International LTD., official licensee for this product.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Technology Holdings LLC and are used under license. Apple logo is a trademark of Apple Inc., registered in the U.S. and other countries. Apple Store is a service mark of Apple Inc.

© 2010 Motorola Mobility LLC. All rights reserved. All other trademarks are the property of their respective owners.

Product ID: IMH011
CD: VL-AM01
CD: 4022A-Motorola



General Information

Consumer Products and Accessories Limited Warranty ("Warranty")
The following describes the Motorola branded product ("Product") and its accessories ("Accessories") sold by Motorola Electronics International LTD. ("SELLER") to:

1. **Business Customers:** The Business Customer is defined by the customer's classification contained below. B1 (NATIONALLY RECOGNIZED BUSINESS), B2 (NATIONALLY RECOGNIZED BUSINESS), B3 (NATIONALLY RECOGNIZED BUSINESS) or certified accessories ("Accessory") sold to the Business Customer that is a reseller of the Product. The Business Customer is responsible for the Product for the period outlined below. This Warranty is not applicable to the Product if it is not transferred.

2. **Who is covered:** This warranty is only for the first consumer who purchases the Product.

What does this warranty cover?

What does this warranty NOT cover?

1. The Product is sold to the authorized distributor in its region and within a commercially reasonable time, will be at charge for repair or replacement, if any, provided that the Product is not damaged by accident, misuse, or other causes, and is not equivalent replacement (repaired/replaced)/ self-owned or new Products. Accessories are not covered.

[illegible][illegible][illegible]

--	--