

## Waterproofness

**F-01A is waterproof to IPX5 (former JIS protection code 5)\*<sup>1</sup> and IPX7 (former JIS protection code 7)\*<sup>2</sup> standards if the external connection jack cap is strictly closed as well as the back cover is mounted and locked.**

\*1 IPX5 means that F-01A phone keeps functioning after directly applying a jet flow of 12.5 L/min. for at least 3 minutes from a distance of 2.5-3 m on a rotating turntable.

\*2 IPX7 means that F-01A phone keeps functioning after it is slowly submerged to depth of 1 m in static tap water at room temperature, left there for 30 minutes and then taken out.

### Advantages in actual operation


- You can talk or watch 1Seg programs without using an umbrella in the rain (for rainfall of 20 mm or less per hour).
  - \* When your hands or FOMA terminal are wet, avoid installing/removing the back cover or opening/closing the external connection jack cap.
- You can wash the FOMA terminal by submerging and moving it forth and back in still water in a basin etc.
  - \* When washing, use only your hands, not a brush or sponge, with FOMA terminal locked, the back cover installed and the external connection jack cap held in position.
- You can use the FOMA terminal in a poolside area. Do not put the terminal in the water of a swimming pool.
  - \* If FOMA terminal gets wet with water from the swimming pool, wash it as described above.
  - \* Do not use FOMA terminal underwater. May cause malfunction.
- You can use FOMA terminal in a bathroom. Do not put the terminal in the bathtub.
  - \* Never put FOMA terminal in hot spring water or water containing soap, detergent or bath powder.
  - \* Do not use FOMA terminal underwater. May cause malfunction.

## Important precautions

To keep the FOMA terminal waterproof, be sure to observe the points below.


- Securely close the external connection jack cap and back cover.
- Make sure that the cap and back cover are completely closed without floating.
- Before using, make sure that the back cover lever is at the LOCK position.

### Closing external connection jack cap

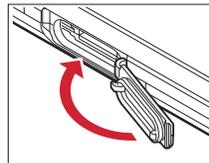


### Installing back cover

- ① Align 8 tabs of the back cover with concaves of FOMA terminal. While pressing the back cover in the direction of ① so that there is no gap between FOMA terminal and back cover, slide the back cover in the direction of ② to install.

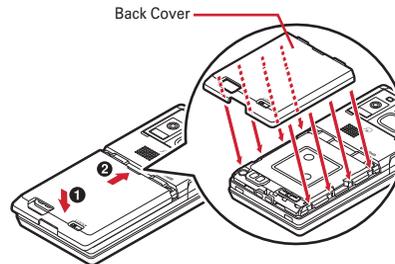


- ② Lock the back cover by sliding its lever in the direction of the arrow.

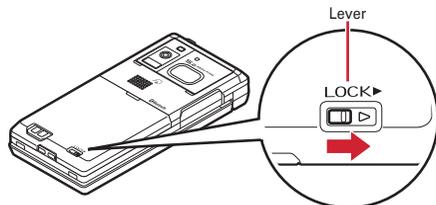

- Do not use FOMA terminal underwater (including opening/closing and keypad operations).
- Do not let FOMA terminal get wet with liquids other than water at room temperature.

<Example>

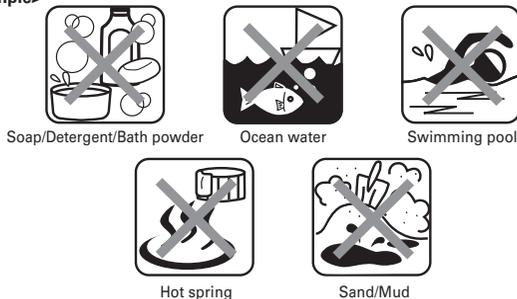

To keep the FOMA terminal waterproof, replacement of parts is required every 2 years regardless of whether FOMA terminal appears normal or abnormal. DOCOMO replaces the parts as a chargeable service. Bring FOMA terminal to a sales outlet such as a DOCOMO Shop.

## ◆ Precautions

- Securely lock the back cover and firmly close the external connection jack cap. Even a fine obstacle (one hair, one grain of sand, tiny fiber, etc.) put between contact surfaces may allow water to enter.
- If FOMA terminal gets wet with water or other liquids with the external connection jack cap or back cover open, the liquid may get inside the terminal causing electric shocks or malfunction. Stop using FOMA terminal, turn the power OFF, remove the battery pack and contact a DOCOMO-specified repair office.
- The external connection jack cap and the rubber packing of the inner lid play an important role for keeping waterproof. Do not remove or scratch them. Also, prevent dust from adhering to them.
- Do not leave water on FOMA terminal. In a cold region, water may freeze causing malfunction.
- Do not apply water flow stronger than allowed (e.g., such water flow that gives you pain when applied to your skin directly from a faucet or shower). May cause malfunction though F-01A provides waterproof performance of IPX5.
- Do not wash FOMA terminal in a washing machine etc.
- Accessories and optional devices are not waterproof.
- When watching 1Seg etc. with FOMA terminal installed in the desktop holder, do not use it in a bath room, shower room, kitchen or lavatory even if it is not connected to the AC adapter.
- Do not put FOMA terminal in hot water, use it in a sauna or apply hot airflow (from a hair dryer etc.) to it.
- Never try to charge the battery pack when FOMA terminal is wet.
- Do not poke the microphone, earpiece or speaker with a swab or sharp object. May damage the waterproof performance.
- Do not leave FOMA terminal wet. May short-circuit the power jacks.
- FOMA terminal does not float on water.
- Do not let FOMA terminal fall. It may become scratched causing the waterproof performance to degrade.
- If the back cover is damaged, replace it. Water may enter inside from a damaged section causing troubles such as electric shocks or corrosion of the battery.
- Do not leave water on the microphone, earpiece or speaker. Such water may interfere with talking.

DOCOMO does not guarantee actual operations under all states. Malfunctions deemed to be caused by inappropriate operation by the customer are not covered by the warranty.


### ◆ Draining water when FOMA terminal gets wet

When FOMA terminal is wet, water may flow out after wiping it off; drain the water following the steps below.


- ① Wipe FOMA terminal surface with dry, clean cloth etc.



- ② Shake FOMA terminal approximately 20 times, firmly holding its hinge section, until there is no more water splattering.

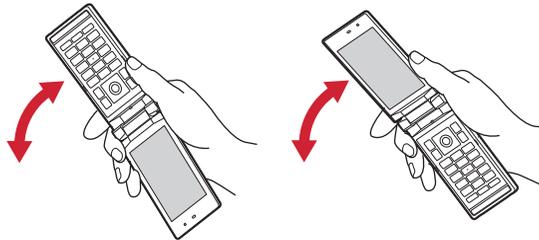


To drain water off the speaker, shake FOMA terminal with the speaker upward

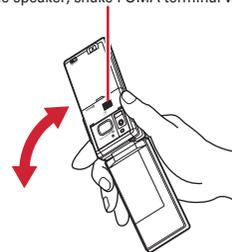

\* When draining water from periphery of the back cover, shake FOMA terminal keeping its back cover side upward.


- ③ **Softly press dry, clean cloth etc., against FOMA terminal to wipe off water remaining in the microphone, earpiece, speaker, keys or hinges.**

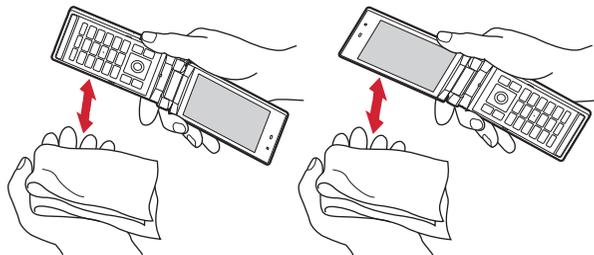

- ④ **Remove the back cover and wipe off any drops of water around the inner lid and the rear side of the back cover. After wiping off the water, install and lock the back cover.**

Removing back cover → P48 ■ Installing ① in "Installing/Removing battery pack"

\* Never open the inner lid.

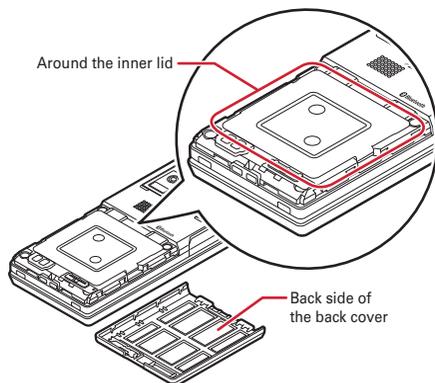

- ⑤ **Wipe off water drained from FOMA terminal with dry, clean cloth etc.**

\* Water, if any, remaining in FOMA terminal may ooze up after wiping off.

\* Do not wipe off water remaining in concaves directly with a cotton swab etc.

## ◆ Charging

Accessories and optional devices are not waterproof. Check the following before and after charging.

- Check that FOMA terminal is not wet. If wet, adequately drain FOMA terminal and wipe off water with dry, clean cloth etc. before connecting a desktop holder or opening the external connection jack cap.
- When charging the battery after FOMA terminal is wet, adequately drain it and wipe off water with a dry, clean cloth etc., before connecting a desktop holder or opening the external connection jack cap.
- When the external connection jack cap is opened for charging, close the cap firmly after charging.

It is recommended that the desktop holder be used for charging to prevent water from seeping inside from the external connection jack.

\* Never try to charge the battery pack when FOMA terminal is wet.

\* Do not touch the AC adapter or desktop holder with wet hands. May cause electric shock.

\* Do not use the AC adapter or desktop holder in a place subject to water. May cause fire or electric shock.

\* Do not use the AC adapter or desktop holder in a bathroom, kitchen, lavatory or other highly humid area. May cause fire or electric shock.

## Basic package and optional accessories

### <Basic package>

**F-01A**  
(including Back Cover F33  
and the written warranty)



**Battery Pack F10**



**Instruction manual**



\* Quick Manual is appended  
on PXXX.

**CD-ROM for F-01A**




\* The PDF version of "Manual for PC Connection" and  
"Kuten Code List" are contained in the CD-ROM.


**Other optional accessories → P442**

### <Optional accessories>

**FOMA AC Adapter 01/02**  
(including written warranty and  
operation manual)

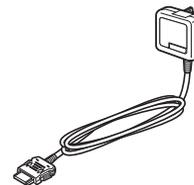


**Desktop Holder F27**  
(including operation manual)

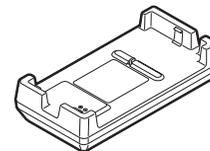

# Before Using the Handset

Names and functions of parts .....	26
Available FOMA terminal usage styles .....	29
Display overview .....	30
Sub-display/Light overview .....	33
Selecting functions from menu .....	36
Selecting function in flip style .....	<b>Touch panel</b> 39
Pointing operation using fingerprint sensor .....	<b>Pointing device</b> 44
Using motion sensor .....	45
Using UIM (FOMA card) .....	46
Installing/Removing battery pack .....	48
Charging .....	50
Checking remaining battery level .....	<b>Remaining battery level</b> 53
Turning power ON/OFF .....	<b>Power ON/OFF</b> 53
Switching to English .....	<b>Select language</b> 55
Setting date and time .....	<b>Date &amp; time</b> 55
Notifying your phone number to the other party .....	<b>Caller ID notification</b> 56
Checking your own phone number .....	<b>User information</b> 56

## Names and functions of parts

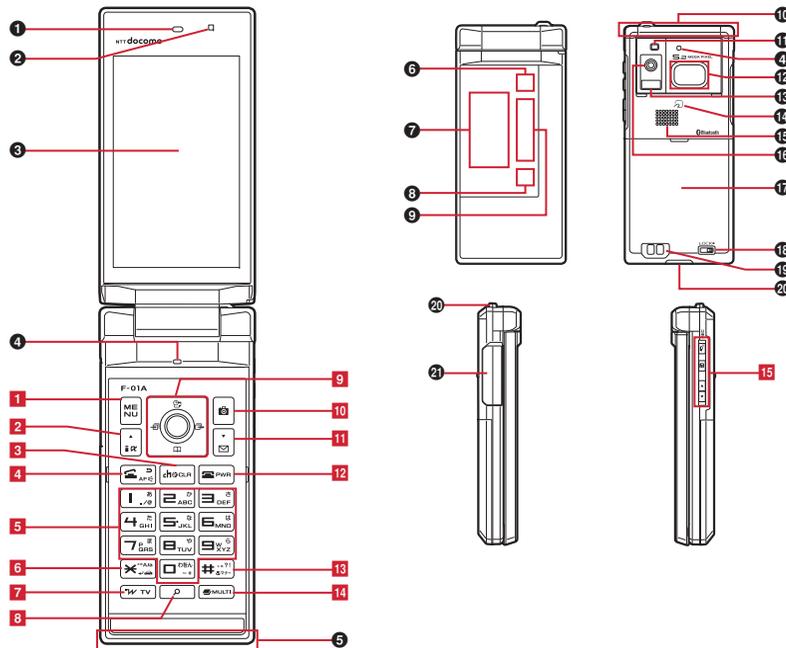

### <Functions of parts>

#### 1 Earpiece

Hear other party's voice from here.

#### 2 Light sensor

Sense the ambient luminance (automatic adjustment of the brightness of the display).

\* Blocking the light sensor may disable correct adjustment of the brightness.

#### 3 Display → P30

#### 4 Microphone

Send your voice from here.

\* Do not cover with your finger while talking or recording sound.

\* The rear microphone is used for reducing noise. It does not pick up your voice.

#### 5 1Seg antenna → P231

\* The terminal has a built-in 1Seg antenna. For better signal reception, do not cover the antenna with your hand.

#### 6 Call light → P35

#### 7 Sub-display → P33

#### 8 Mail light → P35

#### 9 FOMA → P112

Turn on or blink when activating Lock on close, shooting an image, recording a movie, operating Music&Video Channel player or Music player operate according to the settings of Indicator light or Light alert.

#### 10 FOMA Built-in antenna

\* The terminal has a built-in FOMA antenna. For better voice quality, do not cover the antenna with your hand.

#### 11 Light/Shooting indication light → P75, 218, 355

Camera light for videophone calls, still image shooting, movie recording, simple light, or it turns on or blinks for still image shooting or movie recording.

**12 Fingerprint sensor → P44, 118**

Operation of pointing device, register/authenticate fingerprint

**13 Infrared data port → P333, 337**

Infrared communication, Infrared remote control.

**14 FeliCa mark → P282, 333**

Installation of IC card

\* You can use Osaifu-Keitai by placing it over IC card reader or send/receive data by iC transmission. The IC card cannot be detached.

**15 Speaker**

Hear ring alert or voice of the caller using the speakerphone etc. from here.

**16 Camera**

Shoot still images or movies, send images over a videophone call.

**17 Back cover**

\* Remove the back cover and the battery pack to access microSD card slot. →P321

**18 Back cover lever → P48****19 Charging jack****20 Strap opening (2 openings)****21 External connection jack**

Connecting Earphone/Microphone with Switch → P364

**<Functions of keys>**

The functions available by pressing keys are as below.

● : Press   ■ : Press for 1 second or more

**1**  **MENU key**

- Display menus, perform the operation shown at the upper left of the guide area.
- Start/Cancel side key hold.

**2**  **i-mode/i-appli/▲ (scroll)/Character**

- Display i-mode Menu.
- Scroll upward the mail screen or site/website display by pages.
- Perform the operation shown in the lower-left corner of the guide area, switch character entry modes.
- Display i-appli folder list.

**3**  **ch/α/Clear key**

- Display i-Channel list, switch i-appli stand-by display and i-appli activation.
- Delete characters or return to previous screen.
- Start/Cancel Self mode.

**4**  **Start a voice call/S/Speakerphone/AF key**

- Make/Receive a voice call, return to the previous character while entering characters.
- Switching the speakerphone function, start/cancel auto-focus.
- Make a voice call using the speakerphone function.
- Restore the character string to its previous state.

**5 Keypads**

- Enter phone numbers (1-9) or characters, select menu/items.
- Perform the function registered in Custom menu.
- 
- Enter phone number (0) or characters, select menu/items.
- Use Auto switch of Int'l call assist when making international calls.

**6**  **\* /A/a/Line feed/Public mode (Drive mode) key**

- Enter " \* ", " " ", " " ", etc., switch upper/lower case.
- Line feed while entering characters, select menu/items.
- Switch display/hide of guide area when shooting a still image.
- Switch horizontal and vertical displays while playing movie/i-motion.
- Start/Cancel Public mode.

**7**  **i-Widget/TV key**

- Activate i-Widget.
- Watch 1Seg or switch Multi window.

**8**  **Search key → P345**

- Enter the target word, place or name and search.

**9 Multi-cursor key**

- Enter key
- Perform the operation, activate Focus mode.
- Start i-appli registered for one-key shortcut.
-  Schedule/ ↑ key
- Display Scheduler.
- Adjust volume, move the cursor upward.
- Display alarm list.
-  Phonebook/ ↓ key
- Display phonebook.
- Adjust volume, move the cursor downward.
- Add to the phonebook.
-  Received calls/← (previous) key
- Display Received calls, switch displays, move the cursor leftward.
- Start/Cancel privacy mode when "Activate/ Deactivate" of Activation option is set to "Hold L-cursor key".
-  Redial/ →(next) key
- Display Redial, switch displays, move the cursor rightward.
- Start/Cancel IC card lock.

\* May be described as   .



## Available FOMA terminal usage styles

With this FOMA terminal, in addition to "Normal style" in which the terminal is open, you can use "Flip style" in which the display is rotated out.

• This guide uses "Normal style" to describe operations unless especially noted.

### ■ Folded


You can obtain information from the sub-display or the light.

• Carry FOMA terminal in this status.



### ■ Normal style

This basic style is suitable for all functions.

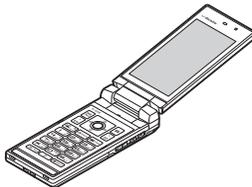


\* You can talk over a videophone call looking at the other party's image after rotating the display clockwise 180 degrees to face the camera toward you in normal style. →P76

### ■ Flip style

You can use FOMA terminal with the display rotated out.

• Operations in flip style →P39

① Open FOMA terminal and rotate the display clockwise 180 degrees until it stops

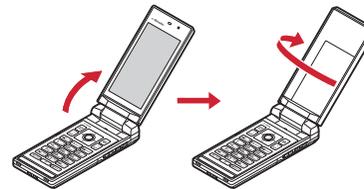


② Fold the display forward



\* To restore normal style, raise the display and rotate it counterclockwise 180 degrees until it stops.

### ✓INFORMATION


• To switch to flip style, do not rotate the display counterclockwise or rotate beyond 180 degrees. Also, do not allow a corner of the display to touch the terminal or keys. Doing so may scratch or damage them.

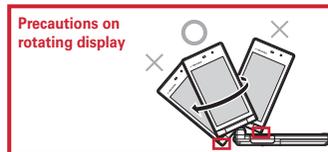

• Take care to avoid catching your fingers when switching to flip style.

## Display overview

The current state can be checked by the icon appearing on the screen.

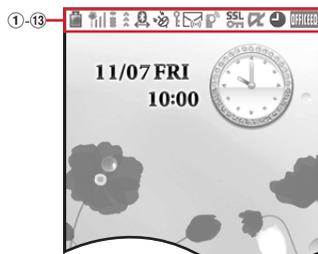

Normal style (Stand-by display)



Flip style (Folder list screen)

- ① : Battery icon→P53
- ② : Signal level icon→P53
  - 圏外 : Out of service area→P53
  - SELF : Self mode ON→P123
- ③ : Data transfer mode ON\*1→P129, 321, 333, 369
- ④ : In i-mode (during i-mode connection)/(during packet communication)→P180
- ④ : In infrared communication→P333
  - : Infrared remote control in operation→P337
  - (blue)/ (gray) : Bluetooth power ON/Power saving mode activated
  - ¥ : The total calls cost exceeds the limit→P359
- <sup>\*\*</sup>⑤ : Bluetooth connection established→P367
  - : Communication using handsfree-compatible device in progress→P369
  - : Communication using a Bluetooth handsfree device in progress→P369
  - : Communication using a Bluetooth headset in progress→P61
  - : Speakerphone function in use→P61
  - : Power saving mode activated→P107
  - (blue)/ (red)/ (blue) / (red) / (blue) / (red) / (blue) : Network in use→P398
- <sup>\*\*</sup>⑥ : Positioning with GPS→P292
  - (blue)/ (gray) : Location request setting with GPS/Out of permission period→P301
- ⑦ : A phonebook entry or schedule has secret attribute→P93, 352
- <sup>\*\*</sup>⑧ Unread Area Mail, unread mail, information of i-concier or MessageR/F state→P151, 169, 171, 174, 200
  - : Unread Area Mail

- : Unread i-mode mail and SMS storage space is full on UIM
- : Unread i-mode mail and SMS storage space is full
- : SMS storage space is full on UIM
- : Unread i-mode mail and SMS exist
- : Unread i-mode mail exists
- : Unread SMS exists
- : There is information about unread i-concier
- (red)/ (blue) : Unread MessageR storage space is full or unread MessageR exists
- : There is unread mail and information about unread i-concier
- (red)/ (green) : Unread MessageF storage space is full or unread MessageF exists
- <sup>\*\*</sup>⑨ PushTalk state or storage state in i-mode Center→P79, 151, 169
  - : During PushTalk session
  - : Downloading phonebook page on the network
  - : i-mode mail and MessageR/F storage are full or one of these spaces is full and unreceived mails exist in Data Center
  - / (blue) / (red) / (blue) : i-mode mail or MessageR/F storage space is full in Data Center
  - : Unreceived i-mode mail and MessageR/F exist in Data Center
  - / (blue) / (red) / (blue) : Unreceived i-mode mail, MessageR or MessageF exists in Data Center
- <sup>\*\*</sup>⑩ : Displaying SSL page/Executing SSL session with i-appli or using i-appli downloaded from SSL page→P181
  - : Displaying an SSL/TLS page→P202
  - : Mail failed to Auto-send exists→P150

- : Auto-send mail exists→P150
- : Music&Video Channel program obtaining reservation exists→P247
- ⑪ : i-appli/i-appliDX state→P261, 276
- : During i-appli operation
- (gray) : i-appli stand-by display ON
- (orange) : i-appli is being started from the i-appli stand-by display
- : i-appliDX is running
- (gray) : i-appliDX stand-by display ON
- (orange) : i-appli is being started from the i-appliDX stand-by display
- : i-appli call received while i-appli is running
- (gray) : i-appli call received while displaying i-appli stand-by display
- (orange) : i-appli call received while i-appli is being started from i-appli stand-by display
- (orange) : i-appli call received while i-appli is being started from i-appliDX stand-by display
- : i-appli call received
- <sup>\*3</sup> ⑫ : Alarm clock ON→P347
- : 1Seg watching/recording reservation, schedule reminder ON→P239, 349
- : Schedule reminder or 1Seg watching/recording reservation and alarm clock are simultaneously ON→P239, 347, 349
- <sup>\*1</sup> When data transfer mode is activated, the terminal is in the same state as out of service area and Multitask becomes unavailable.
- <sup>\*2</sup> The current highest-priority item is displayed. These icons are listed in descending order of the priority from the top.
- <sup>\*3</sup> Time appears on a screen other than the stand-by display.
- <sup>\*3</sup> ⑬ : Inside OFFICEED area→P394
- ⑭ : Arrival information→P39
- : Shortcut icons→P353
- ⑮ : Silent mode ON→P101
- : Personalized silent mode ON→P101
- ⑯ : Call alert volume is Silent→P98
- : Vibrator for voice call ON→P99
- : Call alert volume is Silent and vibrator for voice call ON→P99
- ⑰ : In Public mode (Drive mode)→P72
- ⑱ : Answer machine ON/recorded messages full→P73
- <sup>\*2</sup> ⑲ : Keypad dial lock ON→P125
- : Side key hold ON→P130
- <sup>\*2</sup> ⑳ : Location request of GPS success/failure/end as unanswered→P300
- : Personal data lock ON→P124
- : Music&Video Channel obtaining failure/success→P247
- : 1Seg recording reservation completed/failed→P241
- <sup>\*2</sup> ㉑ : Reading UIM→P46, 53
- (key is yellow) : IC card lock ON→P288
- : Individual IC card lock→P289
- ㉒ : Displaying available multi-cursor key in Focus mode→P39
- : Lock on close ON→P131
- : Remote control in progress
- ㉓ : Performing 1Seg recording reservation/1Seg recording (only watching stopped)→P238, 241
- : i-appli Auto start failed→P274
- ㉔ State of USB mode settings and microSD card→P321, 328
- : microSD card installed during Communication mode
- (blue) / (gray) : microSD card installed or not during microSD mode
- (blue) / (gray) : microSD card installed or not during MTP mode
- <sup>\*2</sup> ㉕ : Connected to external device using USB cable→P78, 328
- <sup>\*2</sup> : Pedometer ON→P363
- <sup>\*2</sup> ㉖ : Software update notice→P455
- : Software update pre-specified→P456
- : Update notification icon→P455
- : Auto-update of the latest pattern definition failed/succeeded→P458

### ✓INFORMATION

- Depending on the displayed function, an icon may be displayed at a different position, or some or all icons may not be displayed.

## ◆ Task area

The icon indicating the function (task) in progress appears in the task area. During Multiaccess or Multitasks, the icons show which functions are running.



## ◆ Icons indicated on the task area

- : Voice call
- : Received calls
- : Redial
- : Answer machine/Voice memo
- : Videophone call
- : Videophone using an external device
- : Call (switching)
- : Call (disconnecting)
- : PushTalk
- : FOMA terminal phonebook
- : Contact setting of Privacy mode
- : Kisekae Tool
- : Still camera
- : Movie camera
- : Bar code reader
- : i-mode
- : i-mode Bookmark/Go to location/Browser history/Screen memo/two-touch site
- : i-concier
- : Mail/MessageR/F
- : Area Mail
- : Receiving i-mode mail
- : Inquiring for i-mode mail/SMS
- : Sent msg log/Received msg log
- : Receiving SMS
- : i-appli
- : ToruCa
- : Position location of GPS
- : Location request of GPS


- : Notify location of GPS
- : Location history (GPS)
- : Full Browser
- : 1Seg
- : My Picture
- : Movie/i-motion
- : Chara-den
- : Melody
- : (blue)/ (gray) : Accessing microSD card/Standing by for accessing
- : Activating Music&Video Channel
- : Music&Video Channel program obtaining
- : Music player
- : Sound recorder
- : My Document (PDF data)
- : Other (Word, Excel, PowerPoint file)
- : Adjusting volume by Multitask
- : Countdown timer
- : Alarm clock
- : Scheduler/Schedule reminder ringing (including activation notification of 1Seg)
- : Fake call
- : User information
- : Calculator
- : Pedometer
- : Search engine
- : Notepad
- : Dictionaries
- : Bluetooth
- : Packet transmission or communication/Sending or receiving packets in progress via Bluetooth
- : 64K data communication via Bluetooth
- : Accessing Data Center
- : Displaying synchronization log
- : Network services set
- : Calling or communicating packets via USB/Sending or receiving packets via USB
- : 64K data communication
- : Accessing external data
- : Updating software/Software update notified

: Updating pattern definition/Displaying version

/ (gray) : Each function set or on hold


### ◆ Guide area

Operations that can be performed by pressing , , and are displayed in the guide area. Displayed operations vary by the screen. Display locations and keys correspond as shown in the figure.

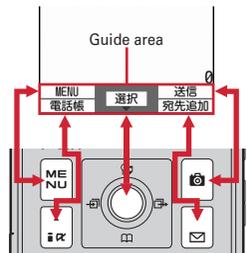

- on the guide area corresponds to multi-cursor keys (It may be different depending on the function you are using or how the site or website is made).

### ◆ List screen

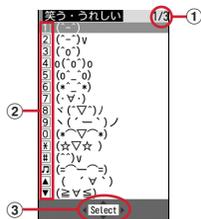

- ① When a list extends to multiple pages, the currently displayed page number and the total number of pages appear.

- ② Pressing the keypads corresponding to the item number or pressing the keys below allows you to select an item.



- ③ indicates that there are items that can be selected above and below the cursor position. Press to move the cursor. When is pressed on the last item of the page, the next page appears, when is pressed on the first item of the page, the previous page appears.  
 indicates that there are items that can be selected over the multiple pages. Press to change the page. Some screens such as an icon selection screen cannot be switched.

## Sub-display/Light overview

With sub-display or light of FOMA terminal, various information or states can be checked.

### ◆ Displaying sub-display

When FOMA terminal is folded, the sub-display shows icons or messages. Selecting a menu item or displaying detail information of a missed call or unread message is also available.

- When a missed call or unread mail exists, animation that notifies you of accumulated information appears when folding FOMA terminal. The clock appears after the animation stops or by pressing or while the animation is displayed.  
Design of animation differs according to the setting of "Clock style" of Clock & alert image.
- In All lock, Omakase Lock or Side key hold, pressing one of , or shows a message indicating the lock is set, and after a period of time, the display is switched to the clock display screen.
- When FOMA terminal is folded, sub-display light turns on. If no operation is performed for approximately 15 seconds, light turns off, but it turns on again if one of , or is pressed. When Auto light on of Sub-display is set to "ON", picking up or tilting FOMA terminal turns light on.
- When opening FOMA terminal with information displayed on the sub-display, the display disappears.

- By pressing **[F]** while watching/recording 1Seg, playing video or activating Music player or Music&Video Channel player, you can display clock.

### ❖ Displayed icon or state



Icon and date/time



State display (e.g. : While Alarm clock is emitting)

- ① : Battery icon
  - ② : Signal level icon
  - ③ : Out of service area
  - ④ : Self mode ON
  - ⑤ : In data transfer mode
  - ⑥ : In i-mode communication (connected to i-mode site)/(packet communication)
  - ⑦ : Silent mode ON
  - ⑧ : Personalized silent mode ON
  - ⑨ : While playing Music player
  - ⑩ : While watching 1Seg
  - ⑪ : Location request setting with GPS/Out of permission period
  - ⑫ : Bluetooth power ON (blinks during communication)
  - ⑬ : Bluetooth power saving ON
  - ⑭ : IC card lock ON
  - ⑮ : i-appli call
  - ⑯ : Auto-send mail exists/Failed auto-send mail exists
  - ⑰ : Information about unread i-concier exists
  - ⑱ : i-mode mail or MessageR/F exists in the Center/Storage space is full
  - ⑲ : Missed calls/Recorded messages/Voice messages in Voice Mail service exist
  - ⑳ : Unread Area Mail exists/Unread i-mode mail and SMS exist/Storage space is full
  - ㉑ : Unread MessageR exists or unread MessageR storage space is full
  - ㉒ : Unread MessageF exists or unread MessageF storage space is full
- Displayed in smaller size when unread i-mode mail or SMS exists.
- ⑳ The clock is displayed according to the settings of "Clock style" of Clock & alert image.

- When pedometer is activated, the number of steps and walked distance for the day appear.
- ⑮ The states below are notified by message or image.
- State display of voice call, videophone call (including Chaku-moji and voice messages in Voice Mail service), PushTalk, recorded message
  - While i-mode mail, SMS or Message R/F is being checked for or received, Area Mail or i-concier is being received
  - State display of Position location, Location request, Notify location function of GPS
  - While watching /recording 1Seg, playing video, playing melody, activating Music&Video Channel player, activating Music player or using microSD card
  - While alarm clock or schedule reminder (including activation notification of 1Seg) is sounding, Countdown timer is operating/sounding
  - Status display of packet, 64K, USB, infrared or Bluetooth communication

### ✓ INFORMATION -----

- Because of the characteristics of surface panel, sub-display may not be seen clearly at places in the sunlight. In this case, check the display in the shade, or make a shadow with your hand to check the display.

### ❖ Selecting functions from the menu of sub-display

You can select from 7 functions : Activate/End Music player, Lock/Unlock IC card, Silent mode ON/OFF, Check new msg, Quick light, Fake call and Bluetooth ON/OFF.

- While IC appli is activated, you cannot perform IC card Lock/Unlock.

<Example> Performing i-mode inquiry

- 1 While clock is displayed,  ► Using , move the cursor to "Check new msg" ► 



- While the menu is displayed, press  to return to clock display or state display of running function.
- Authentication is required when "Unlock IC card" is selected.

### ❖ Displaying missed call or unread mail

When missed calls, recorded messages, unread messages, unread MessageR/F or voice messages in Voice Mail service exist, turn on the sub-display light and press  to check the number of these items. Pressing [] while checking the number of items displays the detail information for approximately 5 seconds (except voice messages in Voice Mail service).

- Up to 10 detail information can be checked by pressing .

<Example> Switching to detail information of missed calls

- 1  while confirming the number of items

The number of items, total number of items, receive date/time, and the caller information are scroll-displayed.

### ◆ Displaying call light and mail light

Call light and mail light on sub-display blink in the cases below.

 (Call light) : When unchecked missed call exists

 (Mail light) : When unread message exists

- Effective when Indicator light is set to "ON".
- Checking missed call or arrival information stops blinking.

### ◆ Displaying light

- Turn on or blink in the cases below.

- When receiving a call, mail/f-concier information, calling, obtaining ToruCa or accessing IC card
- When opening/closing FOMA terminal or GPS positioning (Position location, Notify location and Location request)
- When activating Lock on close, shooting still image or movie, operating Music&Video Channel player or Music player
- When alarm clock, schedule reminder or countdown timer is sounding
- During iC transmission

- For some functions, operation is performed according to Light alert setting.

## Selecting functions from menu

### ◆ Menu screen and switching method

#### ❖ Menu screen

The menu screen below is available.

**Kisekæ menu** : A menu that you can change the design using Kisekæ tool.

In addition to menus compatible with movies, "拡大メニュー (AdvancedMode)" that is easy to view with large font and "Simple Menu" are available. A Kisekæ menu matched with the color of FOMA terminal is set by default.

- Some Kisekæ menu changes the menu structure according to usage frequency. In the Kisekæ Tool stored by default, "ダイレクトメニュー (Direct menu)" in the "Preinstalled" folder supports this function.
- Some Kisekæ menu does not support English display when setting Select language to "English".


**Basic menu** : A basic menu that the menu structure and menu numbers are fixed.

- Menu icons or background design can be changed by customizing Kisekæ Tool or menu.→P108, 111
- The font size of the menu changes synchronized with Kisekæ Tool.

**Custom menu** : A menu that menu items can be freely registered.→P354

#### ❖ To switch the menu screen temporarily

In each menu screen, you can temporarily switch to a different menu screen by the operations below. You can also set which menu to display when pressing **[ME]** on the stand-by display.→P108

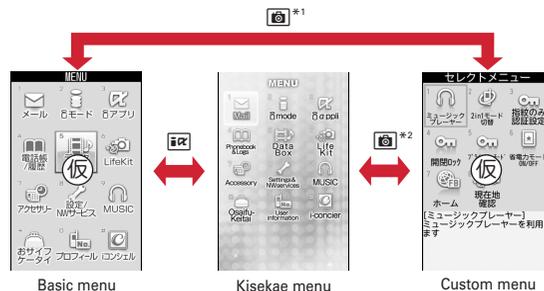

\*1 Cannot be switched when Kisekæ menu or Shortcut menu is set as Select startup menu.

\*2 Cannot be switched when Basic menu is set as Select startup menu.

#### ✓INFORMATION

- Some types of Kisekæ menus change the menu structure according to usage frequency. Also, the number assigned to menu item (item number) may not be applied.

#### ◆ Selecting a function

Press **[ME]** in stand-by and select and perform the functions from the menu displayed.

There are 2 ways. One method involves using the keypad corresponding to the menu items (Shortcut operation). In the other method, the multi-cursor key is used to select from among the menu items.

- If any function is restricted by lock functions or no UIM is installed, **[L]** icon appears or the font color changes indicating that the function is disabled. Note that the display does not change for Kisekæ menu or Basic menu. When a function is selected, the reason that the function cannot be performed etc. is displayed.

- Function description about the menu item at the cursor position may appear for some types or levels of the menu. The current setting may also displayed in some menu items.


### ❖ Selecting menu items by keypad (Shortcut operations)

When numbers (item number) are assigned to menu items, a menu item can be selected by pressing the corresponding keypad (**1**-**9**, **0**, **<>**, **≡**).

- Press the item number displayed with the preferred menu item.
- Item numbers differ when "Simple Menu" is set by Kisekai Tool.
- Item number of the menu → P412

#### <Example> Selecting "Calculator"


1 **ME** **ND** **7** **4**

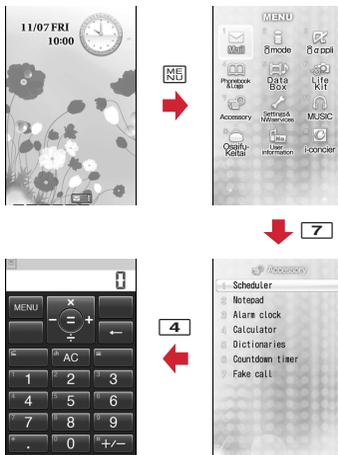

### ❖ Selecting menu items by multi-cursor key

#### <Example> Selecting "Calculator"

1 **ME** **ND** ▶ Move the cursor to "Accessory" ▶ **OK**

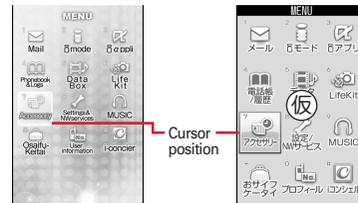

- If you press **<>** to move the cursor, the color and/or design of the cursor position change. Moving by **<>** is unavailable for some menus.
- When setting "Simple Menu" for Kisekai menu, you can select menu (to the second layer) also by placing the cursor and pressing **<>**.

#### 2 Move the cursor to "Calculator" ▶ **OK**

### ❖ To return to stand-by display or previous menu

After selecting a menu item, you can return to the stand-by display or previous menu by pressing the keys below.

**ME** **ND** : Return to the stand-by display.


**CLR** : Return to the previous menu. Depending on the menu, you can return to the previous menu also by pressing **<>**.

## ◆ Selecting method of submenu

When "MENU" is displayed at upper-left of the guide area, various operations can be performed with submenus.

### <Example> Selecting the redial submenu

**1** On the redial list screen, **[NE]** **▶** Press a keypad for the submenu item number

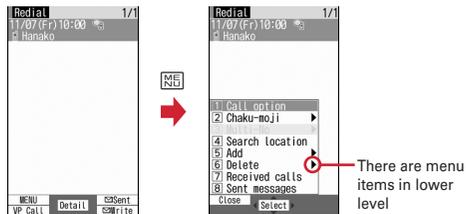


- You can also select an item by moving the cursor to and pressing **[OK]** or **[C]**.
- Item numbers of the submenu with the same functions may vary by the operating screen.
- Pressing **[ME]** or **[CLR]** closes the submenu.

## ◆ Operating procedure of each item

### ■ Selection of an item

When numbers or **[X]** **[#]** **[▲]** **[▼]** is displayed, press the corresponding keys. You can also select an item by moving the cursor with **[X]** and press **[OK]**. When moving the cursor, item at the cursor position may be framed or change in color.

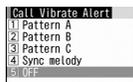

- Depending on the function, you can check vibration pattern of the vibrator, color or lighting pattern of light alert, the color scheme of screen settings or brightness of the display by moving the cursor to an item.

### ■ Pulldown menu operation

Move the cursor to the item to set and press **[OK]**, and then press the keypads corresponding to the item number.



- You can also select an item by moving the cursor to it and pressing **[OK]**.

### ■ Check box operation

Press the keypads corresponding to the item number.



- You can also select an item by moving the cursor to it and pressing **[OK]**.
- Pressing keypad for the item number or pressing **[OK]** after placing the cursor, the check box switches  (Select) and  (Cancel).
- For some functions, you can select or cancel all items by pressing **[ME]**.

### ■ Confirmation screen operation

If a confirmation screen for performing functions appears while deleting, setting data, etc., move the cursor to "Yes" or "No" and press **[OK]**.



- For some functions, items other than "Yes" or "No" may appear.

## ◆ Displaying information quickly <Focus mode>

When  is pressed on the stand-by display with arrival information icon or i-concier information displayed, or with Info/calendar layout or Shortcut icons set, the display is changed to Focus mode that allows you to quickly display the related information.

- i-concier information → P200
- Shortcut icons → P353
- When i-concier information is displayed with Info/calendar layout set, the cursor cannot be moved to Info/calendar layout.

### 1 ▶ Move the cursor to an icon ▶



An icon at the cursor position is surrounded with a red frame.

The direction is indicated that it can be moved to by using multi-cursor key.

- A screen matched for the selected icon appears.

  (Missed calls) : Received call list appears. With 2in1 set to Dual mode,

  appears when there is a missed call only to Number B and   appears when there are missed calls to both Number A and B.

  (Recorded messages) : The recorded message list appears.

  (Voice messages in Voice Mail service) : A confirmation screen for playing message appears. With 2in1 set to Dual mode,   appears when there is a message only to Number B and   appears when there are messages to both Number A and B.

  (Unread messages) : The folder list of Inbox appears.

  (Unread ToruCa) : The ToruCa list of the folder containing the latest unread ToruCa appears.

  (i-appli call) : i-appli call log appears.

- You can perform the same operations when the next icon appears.
  -  : Connect to external device using USB cable
  -  /  : Software update advance notice/notification
  -  /  : Auto-update of latest pattern definition success/failure
  -  /  /  : Location request success/failure/end as unanswered
  -  /  : Music&Video Channel program obtaining success/failure
  -  /  : 1Seg recording reservation completion/failure
  -  : Performing 1Seg recording reservation/1Seg recording (only watching stopped)
  -  : Pedometer

Canceling Focus mode :  or 

### ✓INFORMATION

- When moving the cursor to the icon for arrival information and press  for 1 second or more, the icon disappears temporarily. For a voice message icon of Voice Mail service, a confirmation screen appears asking you to delete the display. Select "Yes" to delete the display. It reappears when the number of items is changed by accumulating new information or viewing existing information.
- In Focus mode, you cannot display the menu by pressing .

## Touch panel


### Selecting function in flip style

In flip style, you can activate Still camera, Movie camera, Full Browser, 1Seg image/video, Activate 1Seg, My Picture, i-motion, My Document (PDF data) and Other Document (other documents) from flip menu. You can also view mail, answer a call or PushTalk call, stop alarms, perform Location request or Notify location, etc. You can select a function by touching the display with your finger (touch operation) or using side keys.

- The display is used horizontally all the time.
- You can also operate functions or view mail that can be activated from flip menu after changing the style from normal to flip style during the operation.
- Images, movies/i-motion, PDF files and other files (Word, Excel or PowerPoint) are always displayed in Full screen in flip style.
- If message indicating that function you attempted to use is not available in flip style appears, return the terminal to normal style.
- Pointing device, motion sensor (except the change in Flash graphics or scrolling the Full Browser screen) and operations set in Side key shortcut do not work in flip style.

## ◆ Touch operation

- Touch operation is enabled in the range below. Touch the display with the ball of your finger.

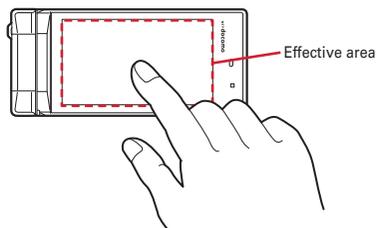

- Types of touch operations are as described below. Required operation varies depending on functions or screens.
  - Touch** : Touch the display lightly and release the finger.
  - Double-touch** : Touch the display lightly twice and release the finger.
  - Slide** : Keep touching the display, move your finger up, down, right or left and release the finger.
  - Slide quickly** : Touch the display slightly and flick your finger up, down, right or left.
- Touch operation may be disabled except for MENU or selecting items depending on screens. On Full-screen display, touch operation on some part of the screen may also be disabled depending on functions used.

## ❖ Notes for touch operations


- Touch operations do not work in the cases below.
  - Operations with a glove, 2 or more fingers, finger nail, pen, ball-point pen or pencil
  - Operations with a foreign object placed on the display
- Note that the actions below may cause malfunction.
  - Hitting the display with a metal object or jewelry
  - Allowing water drops or dust to get on the display, allowing the display to get wet or dirty, or touching the display with a sweaty finger
  - Moving a finger too quickly
  - Attaching protect sheet or label on the display
- Do not use excessive force. It may cause injury or damage.

- Do not scrape with your finger or use a pointed object such as a pen on the display. Doing so may cause scratches on the display or malfunction of the sensor.

## ◆ Flip menu

### ❖ Displaying flip menu

If changing style from normal to flip while stand-by display or a menu screen is displayed, flip menu appears. Flip menu also appears if the running function is terminated while in flip style.

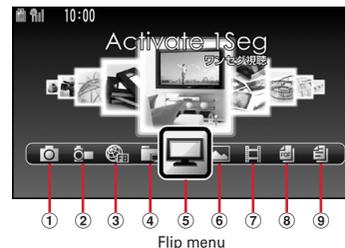

- ① **Still camera**  
Activate Still camera.
- ② **Movie camera**  
Activate Movie camera.
- ③ **Full Browser**  
Display Full Browser screen from "Home", "Bookmark" or "Browser history".
  - The menu has 2 levels.
- ④ **1Seg image/video**  
Display "1Seg" in Data Box.
- ⑤ **Activate 1Seg**  
Start Activate 1Seg.
- ⑥ **My Picture**  
Display "My Picture" in Data Box.
- ⑦ **i-motion**  
Display "i-motion" in Data Box.
- ⑧ **My Document**  
Display "My Document" in Data Box.