 
 
 


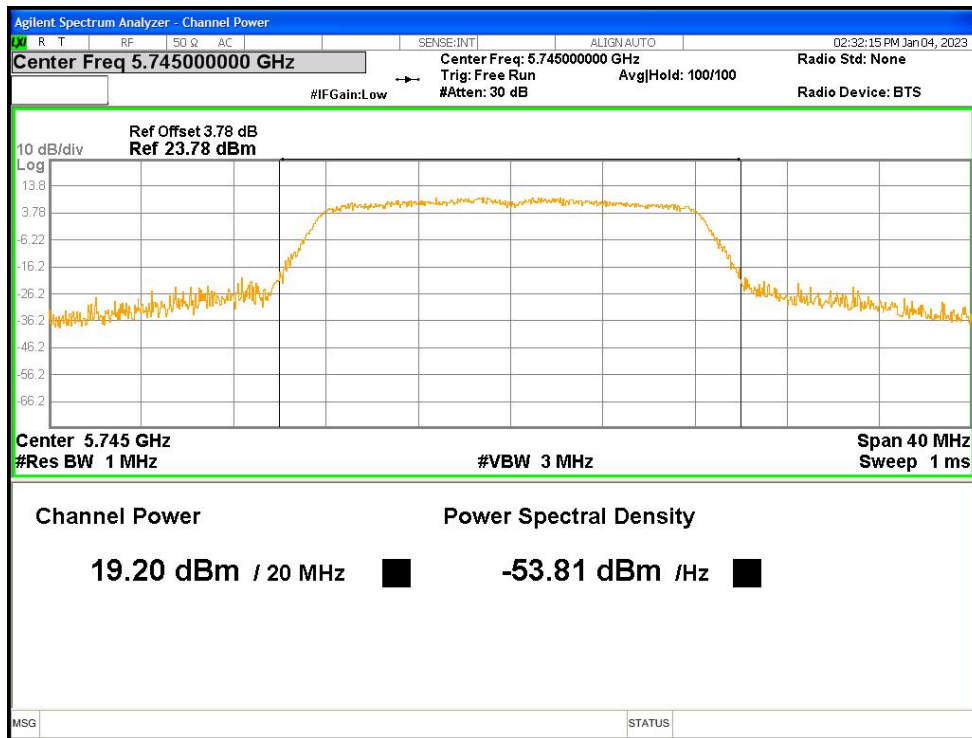


Power NVNT a 5785MHz Ant1

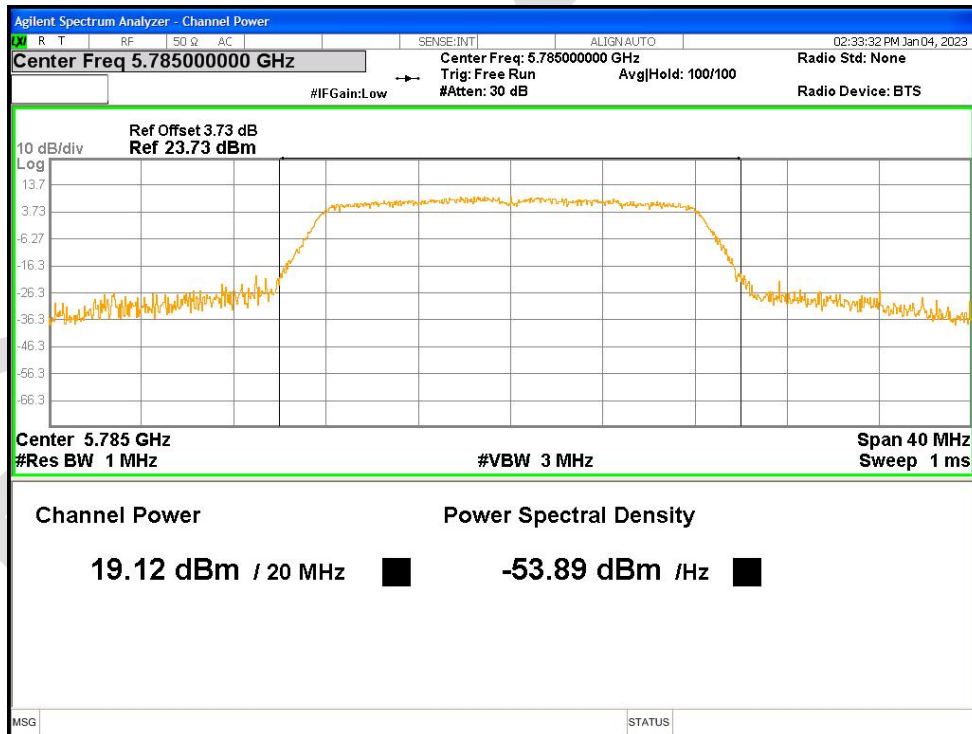


Power NVNT a 5825MHz Ant1

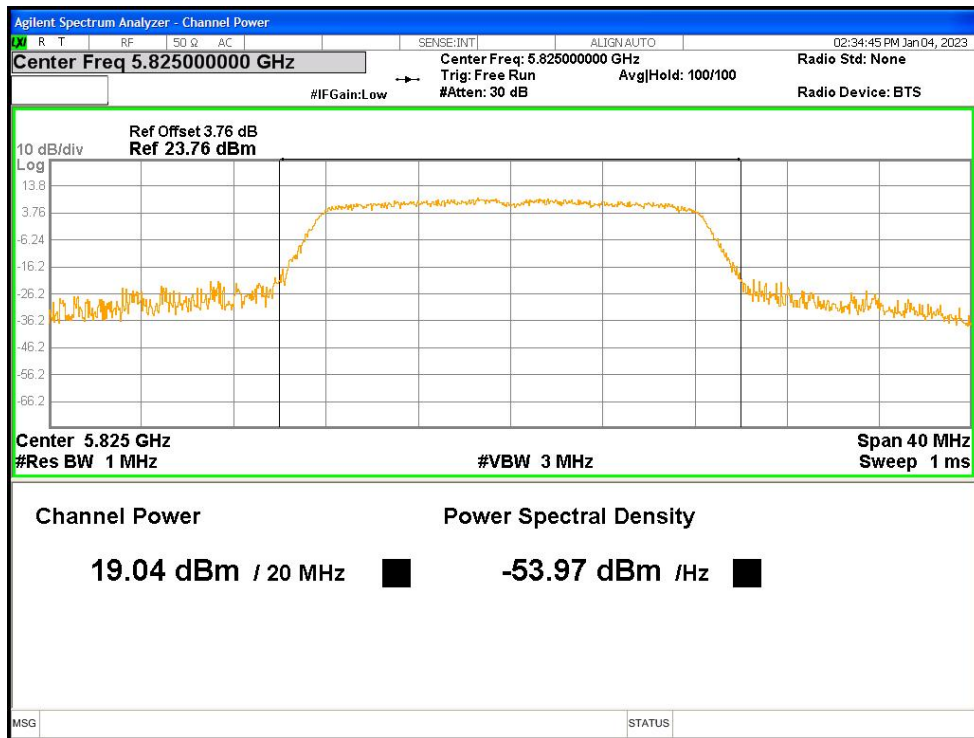

 
Power NVNT a 5180MHz Ant2

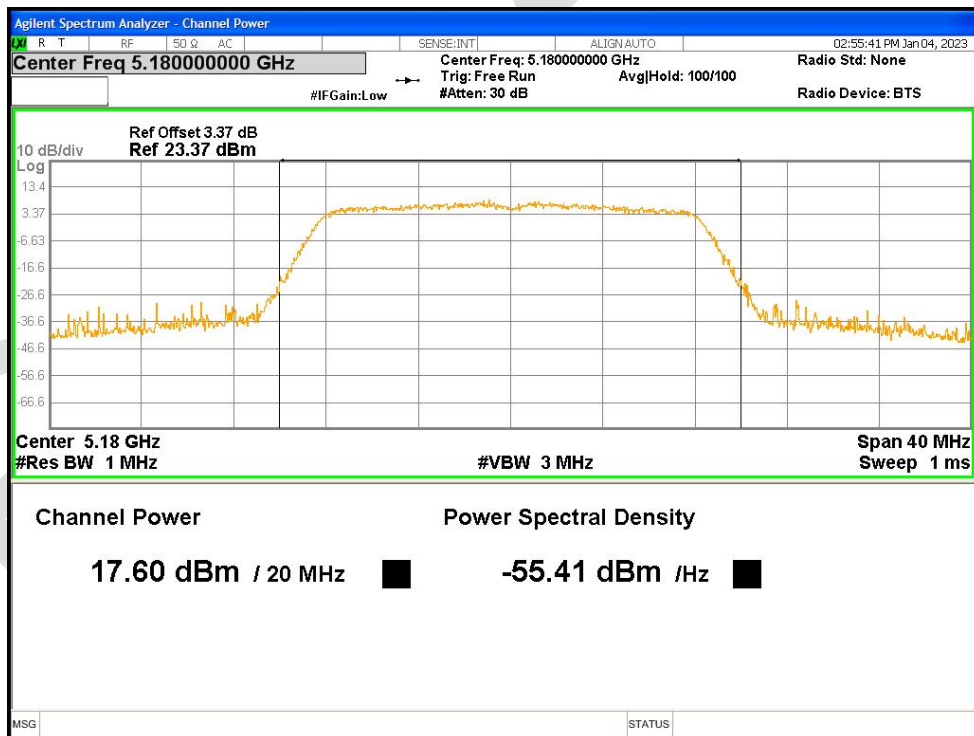


Power NVNT a 5200MHz Ant2

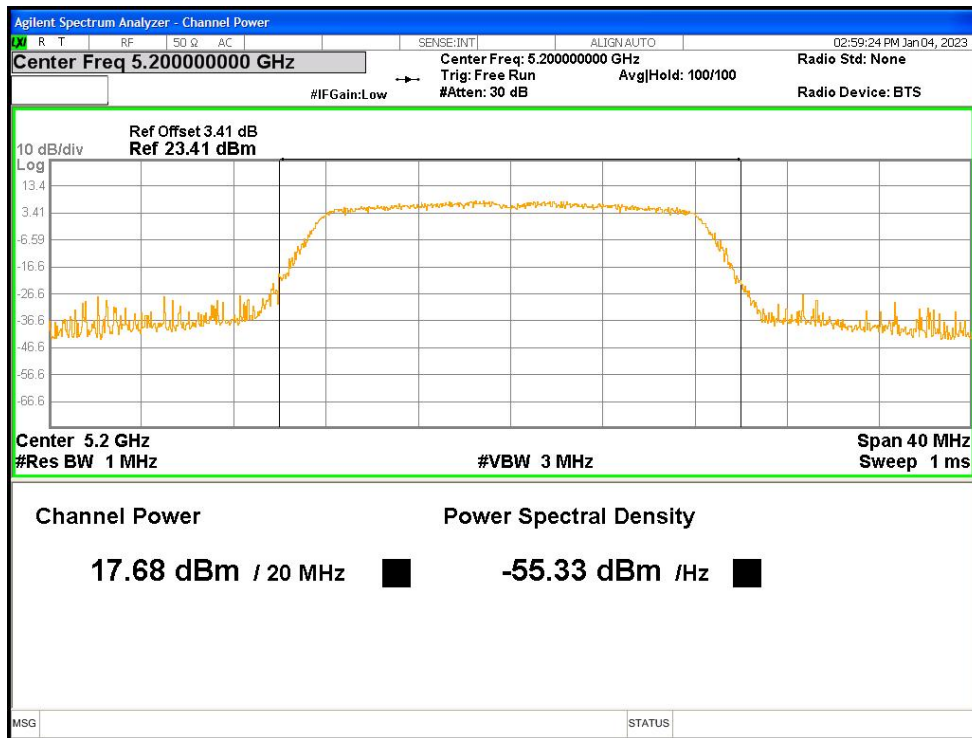 


Power NVNT a 5240MHz Ant2

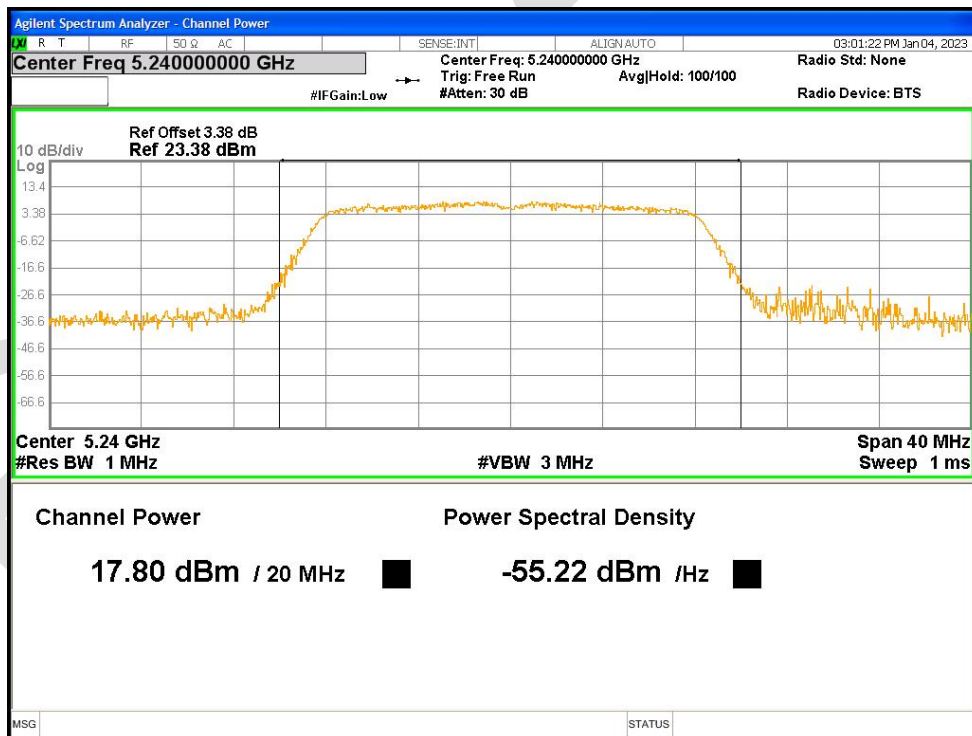 


Power NVNT a 5260MHz Ant2

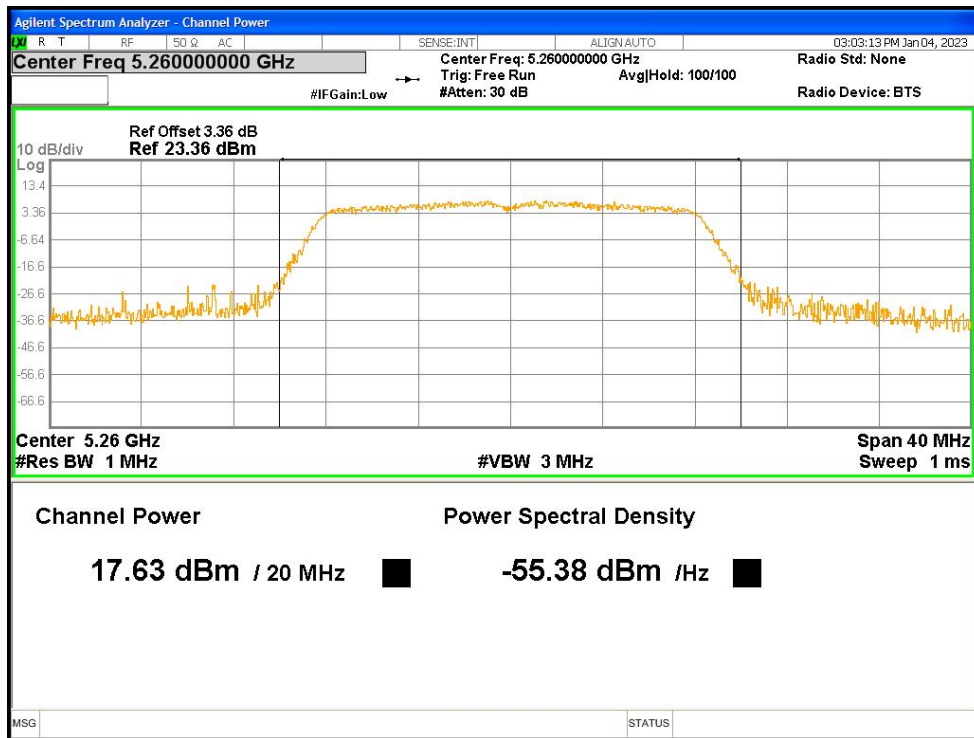 


Power NVNT a 5280MHz Ant2

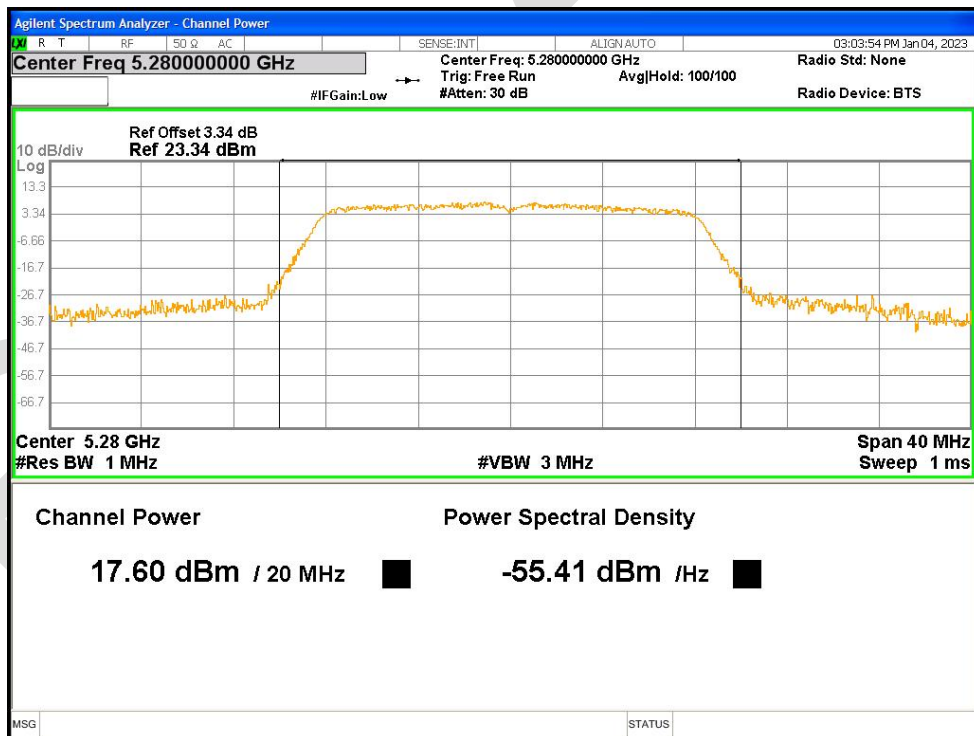 


Power NVNT a 5320MHz Ant2

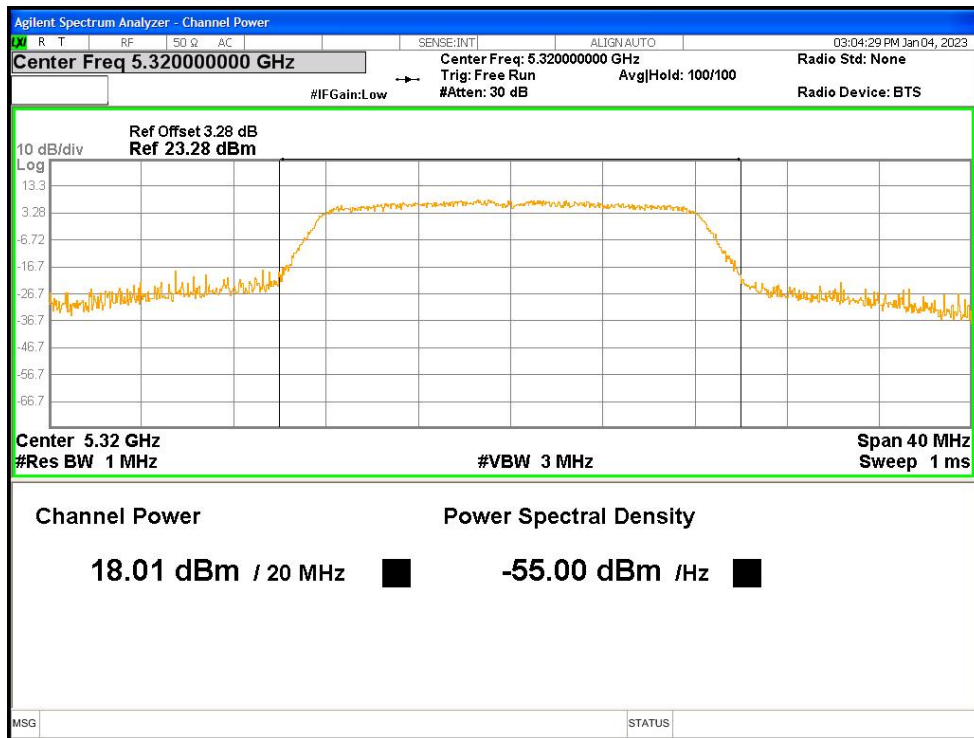 


Power NVNT a 5745MHz Ant2

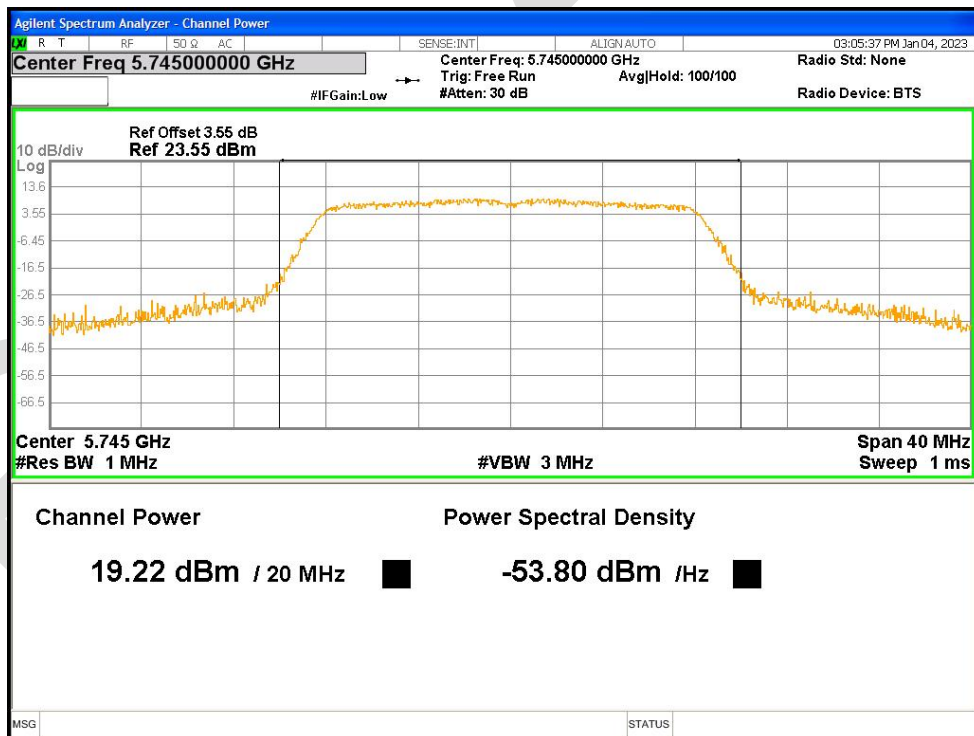 


Power NVNT a 5785MHz Ant2

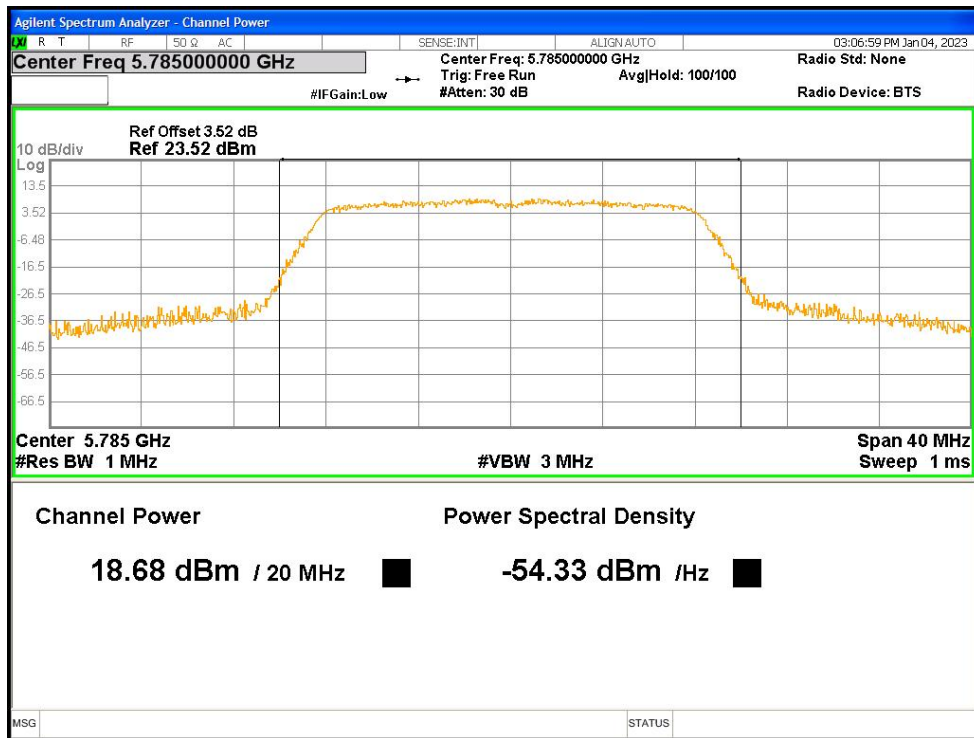 


Power NVNT a 5825MHz Ant2

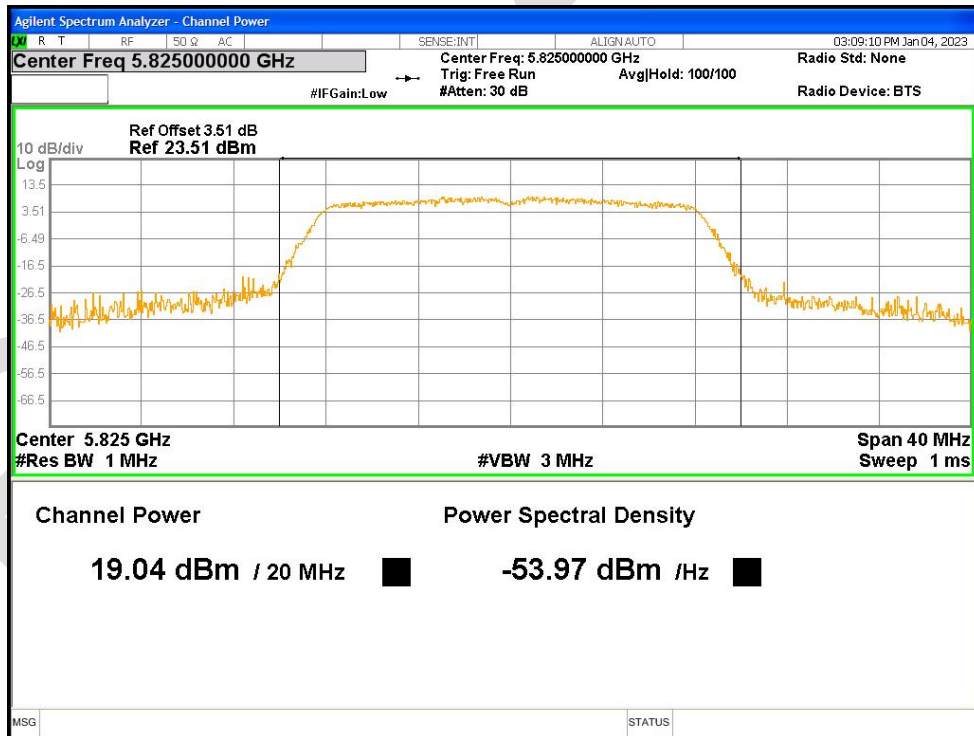 


Power NVNT ac20 5180MHz Ant1

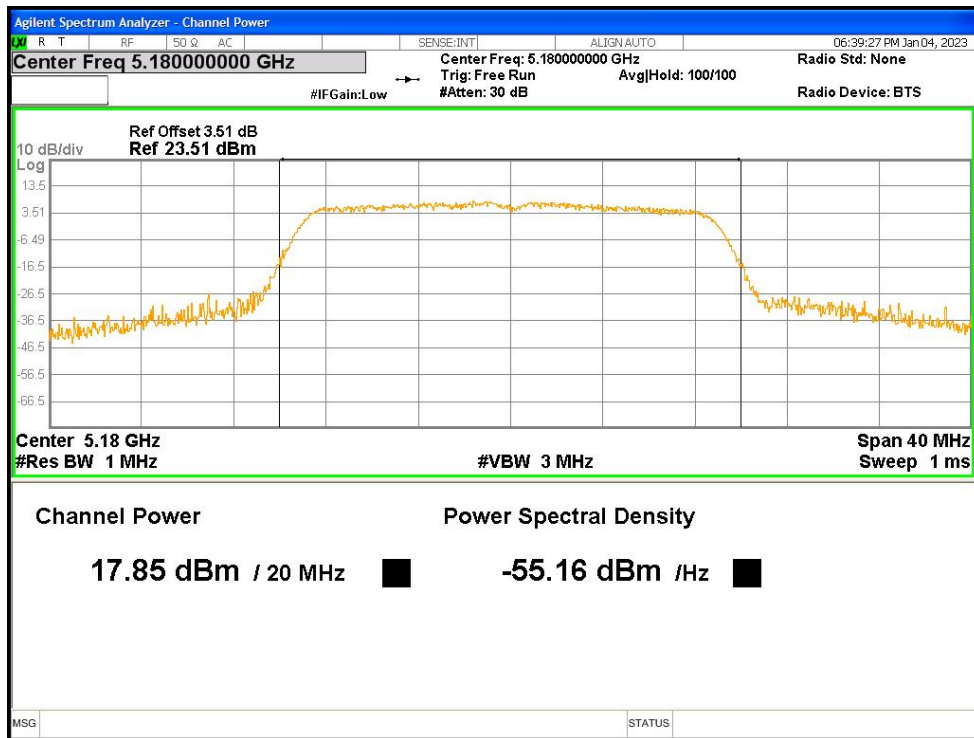 


Power NVNT ac20 5200MHz Ant1

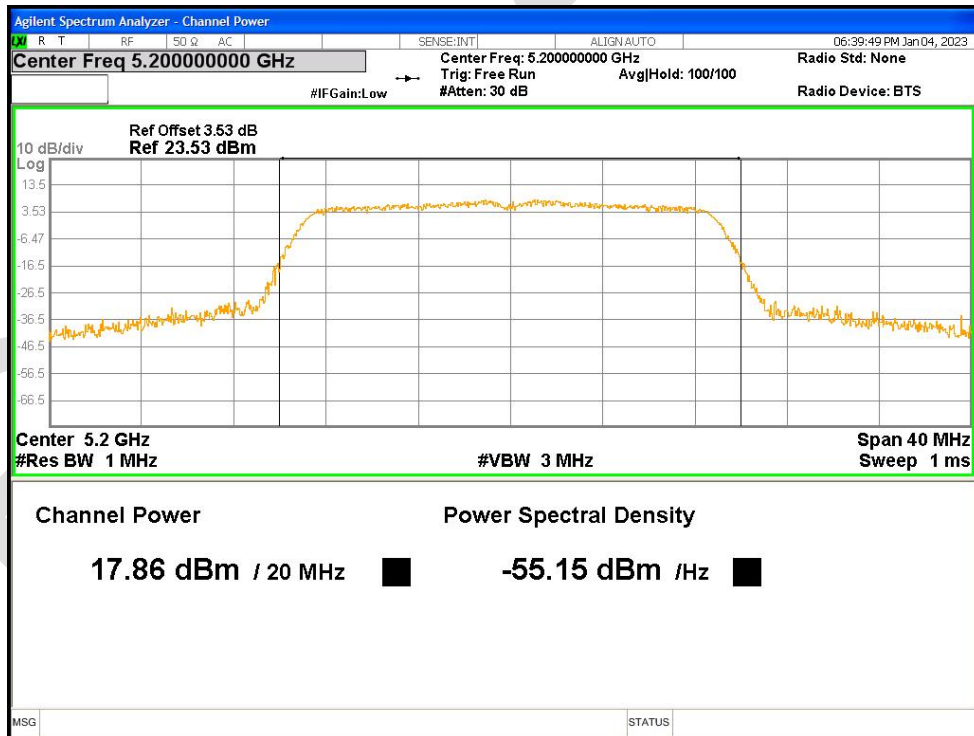 


Power NVNT ac20 5240MHz Ant1

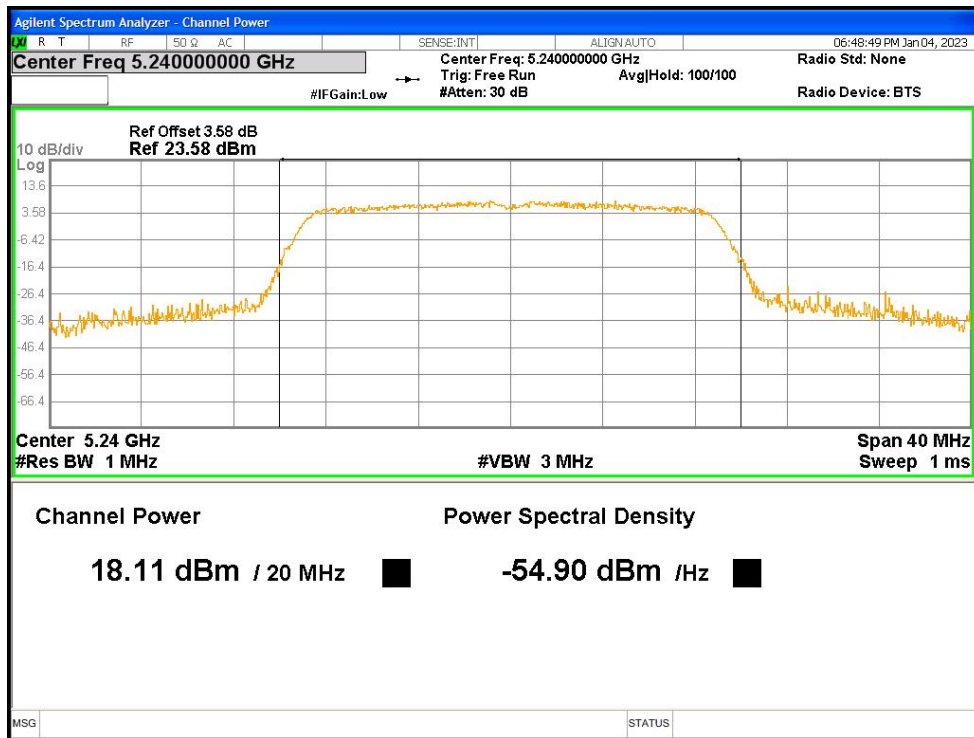 


Power NVNT ac20 5260MHz Ant1

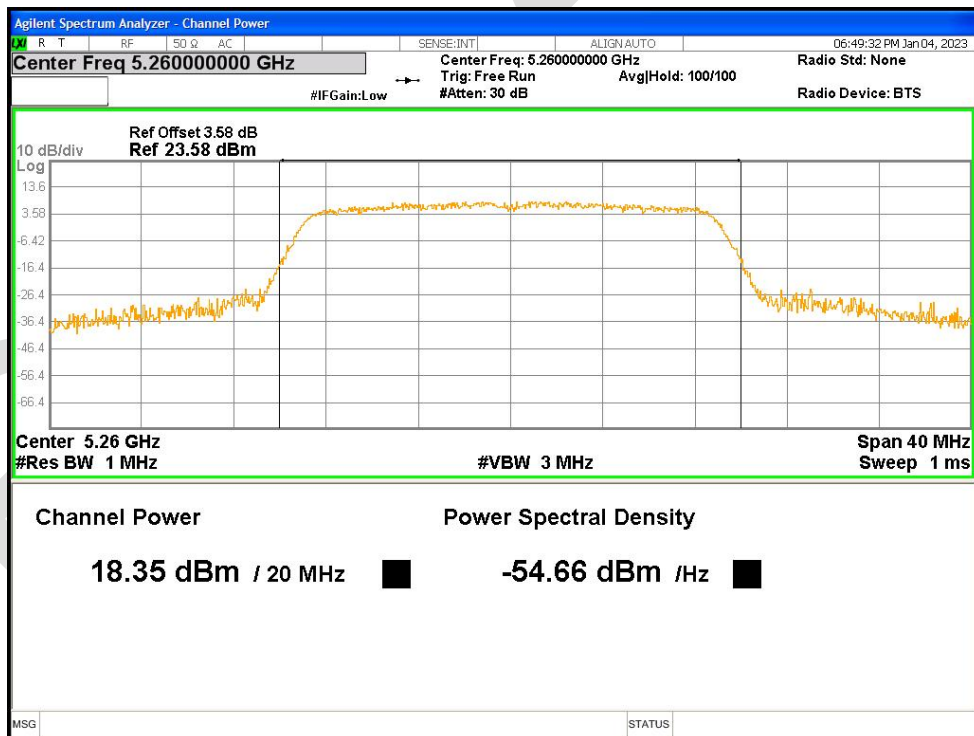 


Power NVNT ac20 5280MHz Ant1

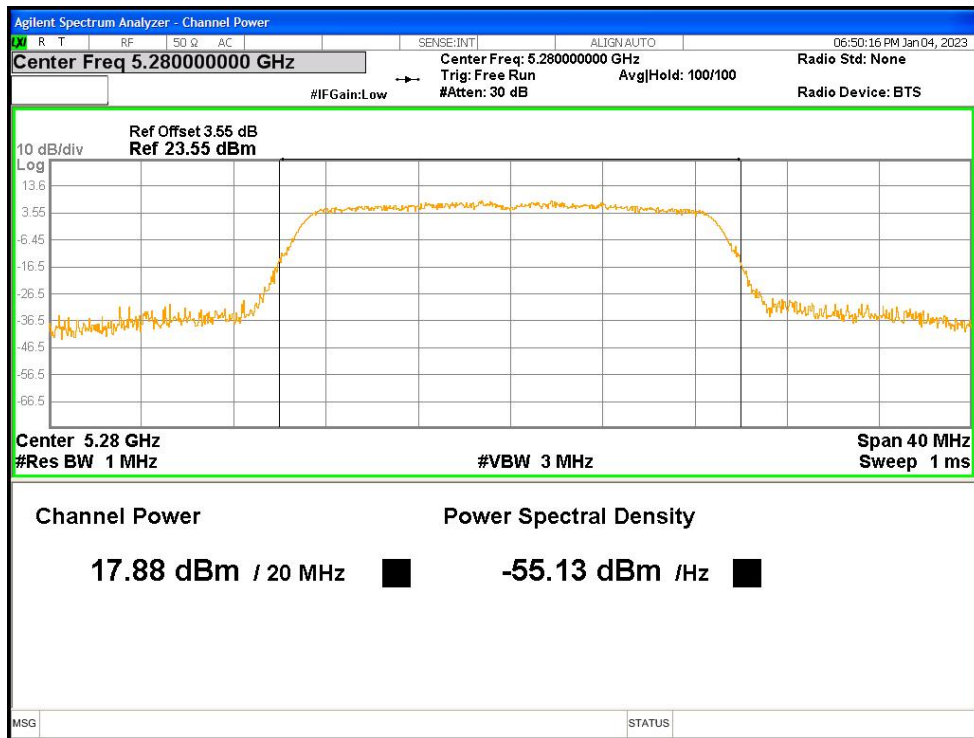 


Power NVNT ac20 5320MHz Ant1

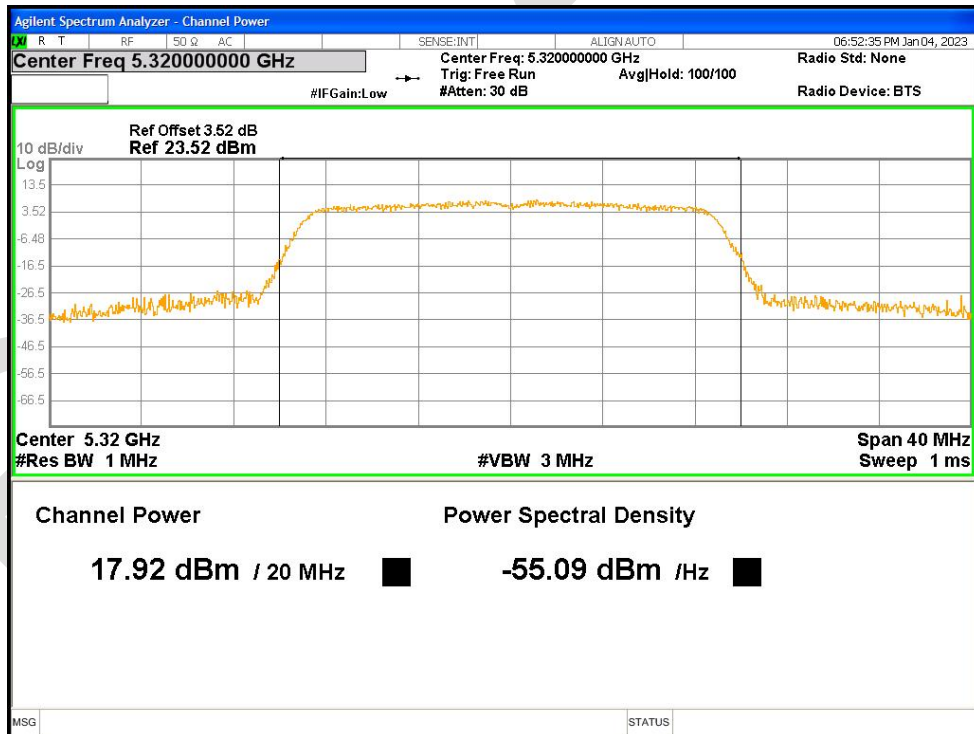 


Power NVNT ac20 5745MHz Ant1

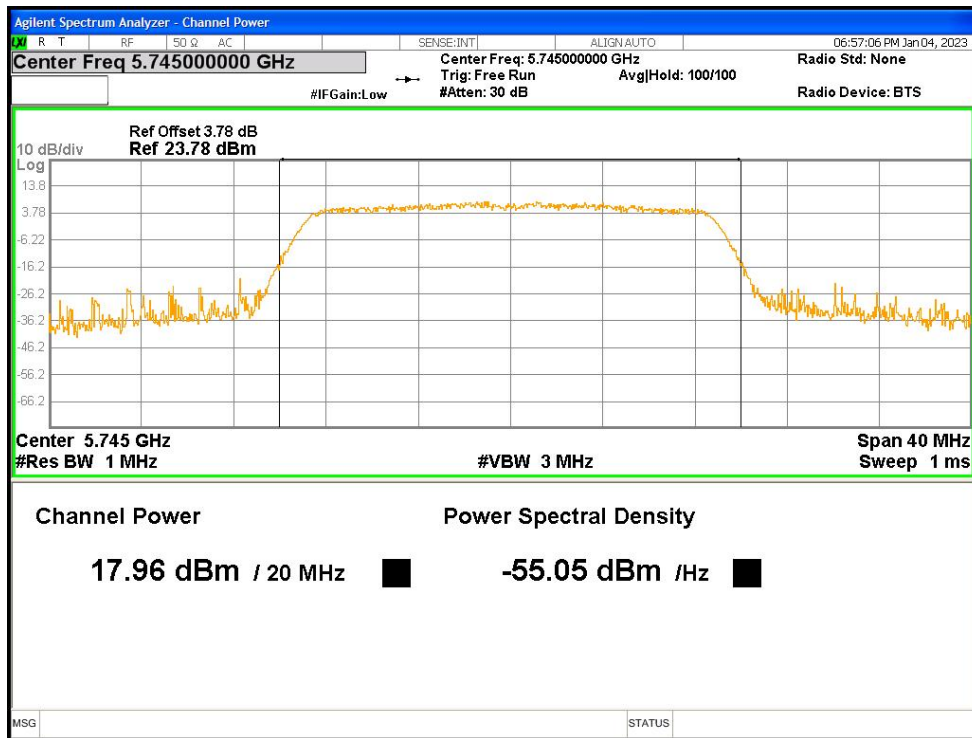 


Power NVNT ac20 5785MHz Ant1

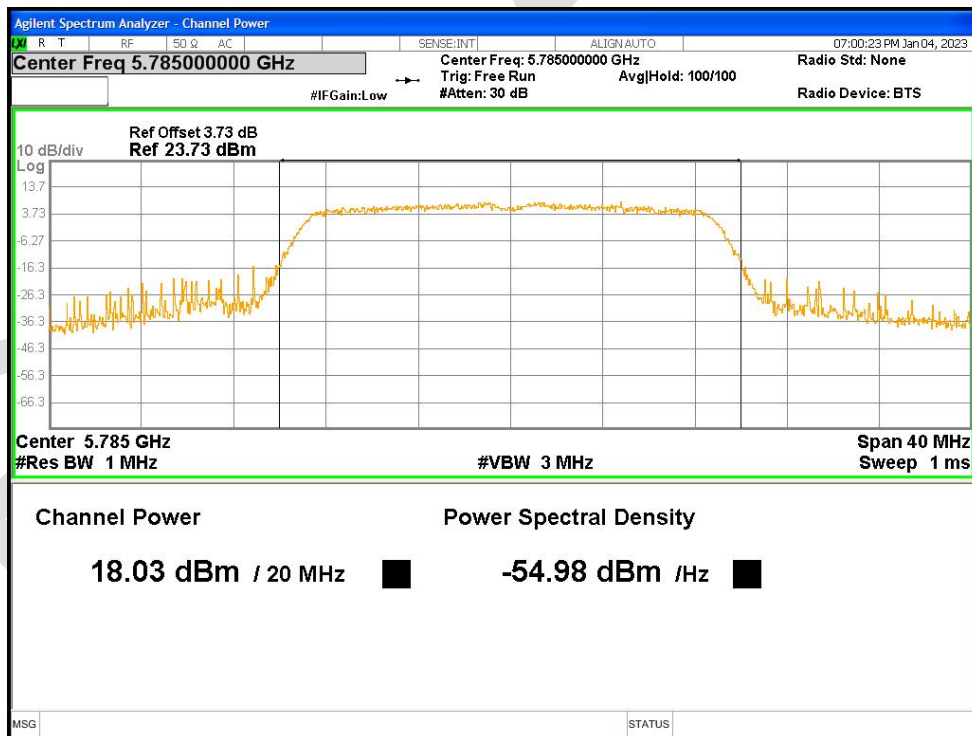 


Power NVNT ac20 5825MHz Ant1

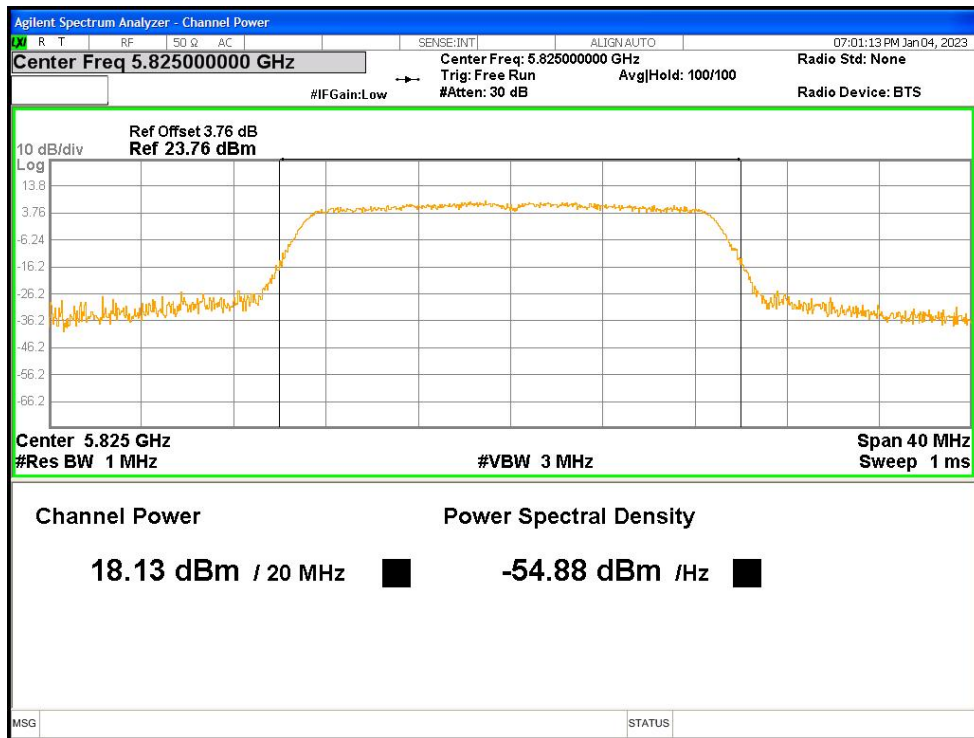 


Power NVNT ac20 5180MHz Ant2

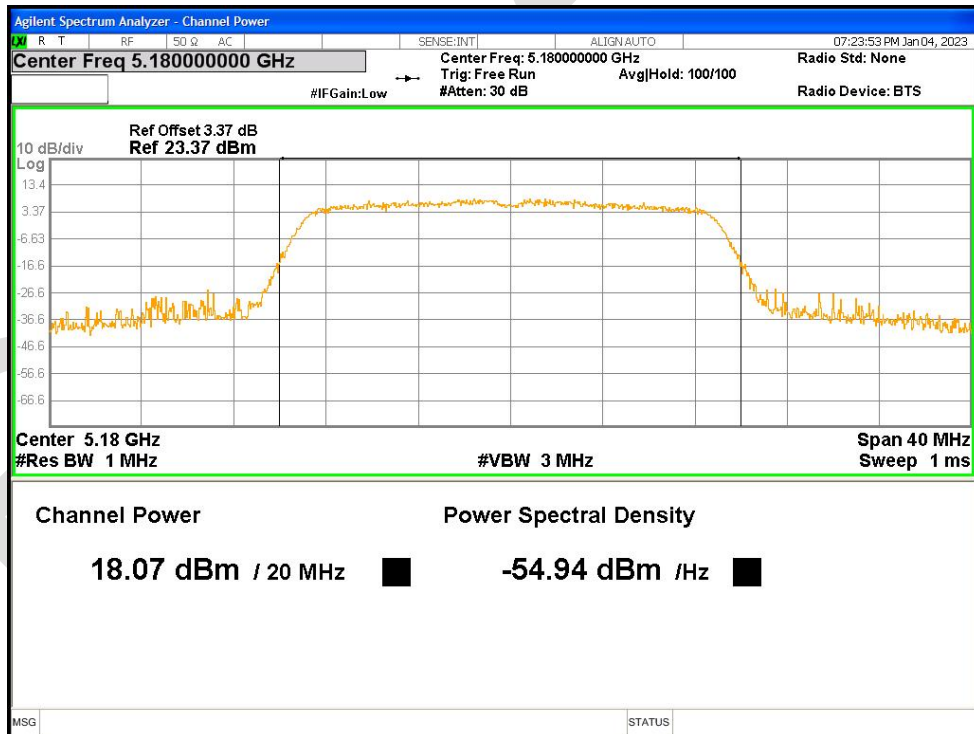 


Power NVNT ac20 5200MHz Ant2

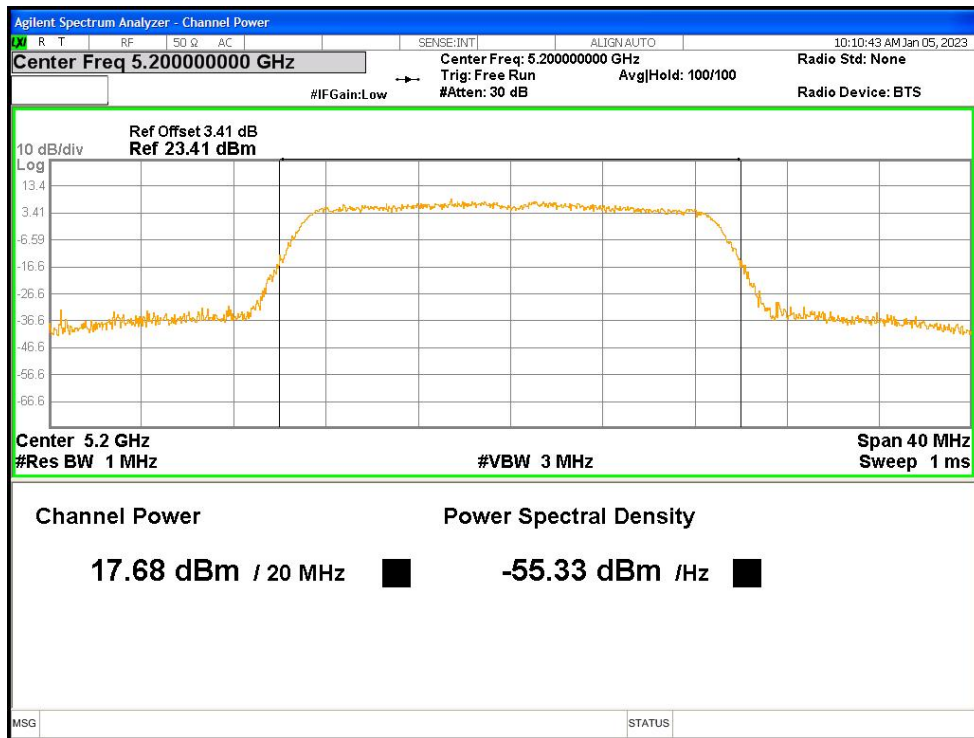 


Power NVNT ac20 5240MHz Ant2

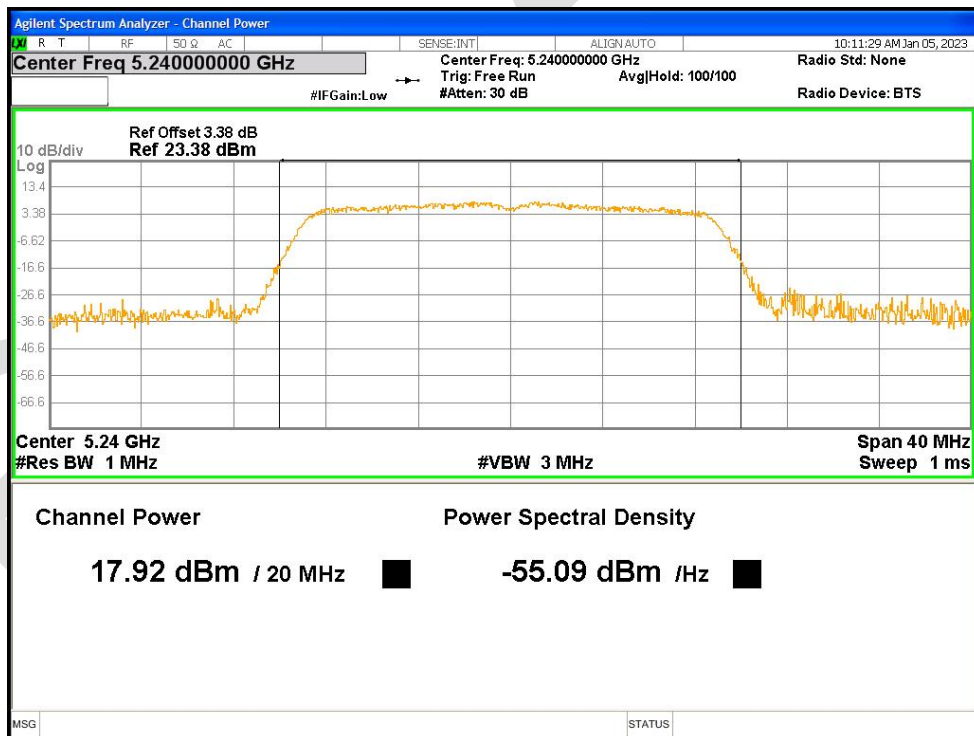 


Power NVNT ac20 5260MHz Ant2

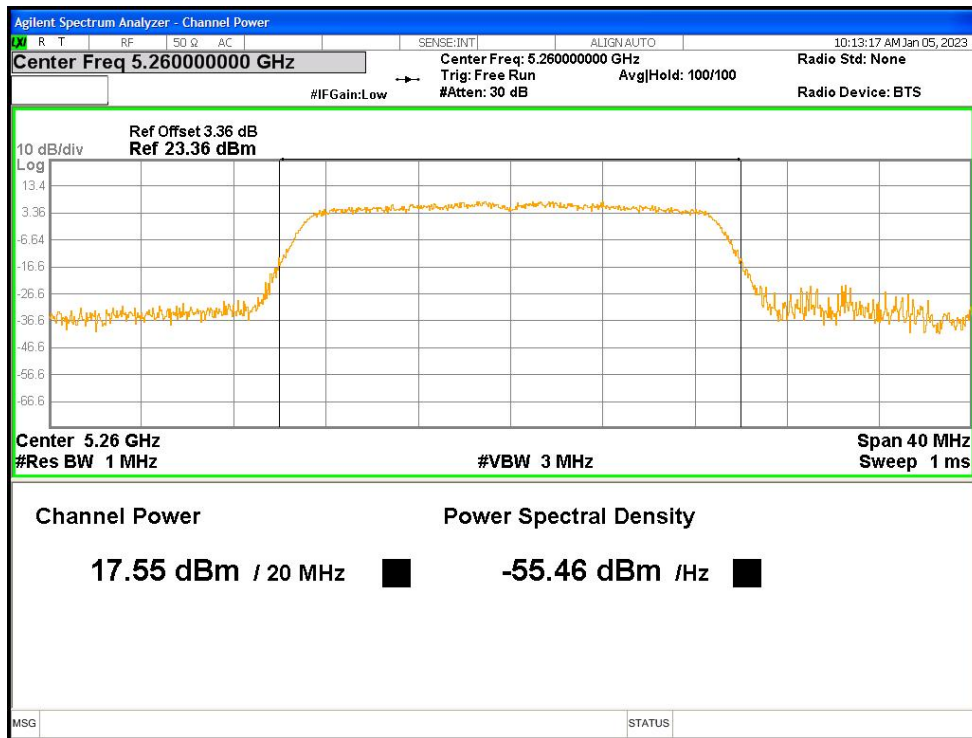 


Power NVNT ac20 5280MHz Ant2

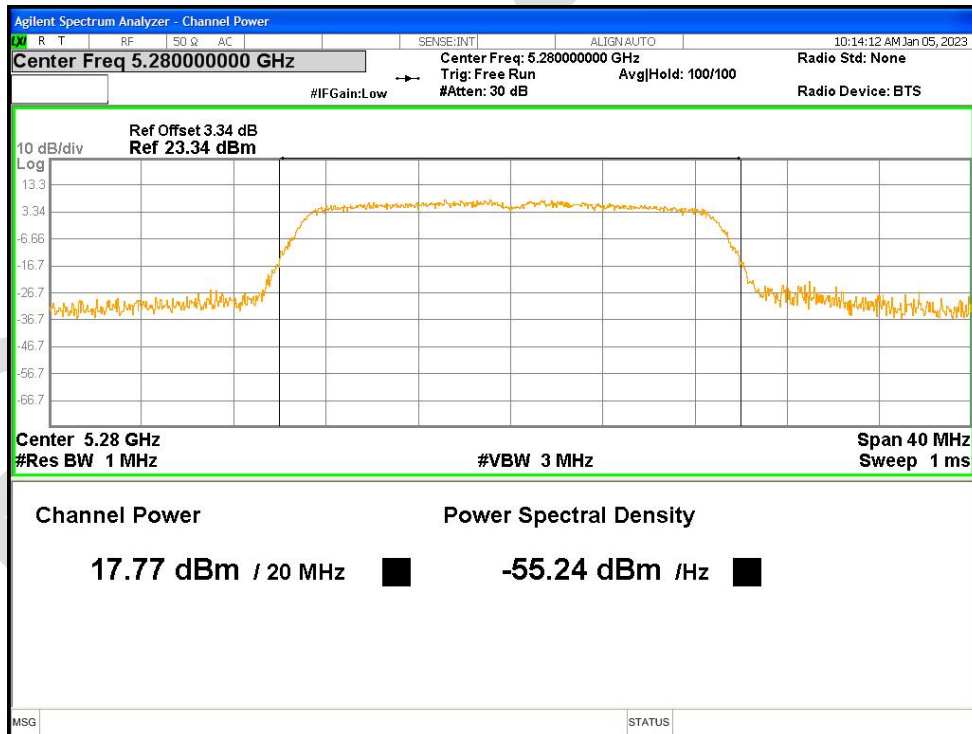 


Power NVNT ac20 5320MHz Ant2

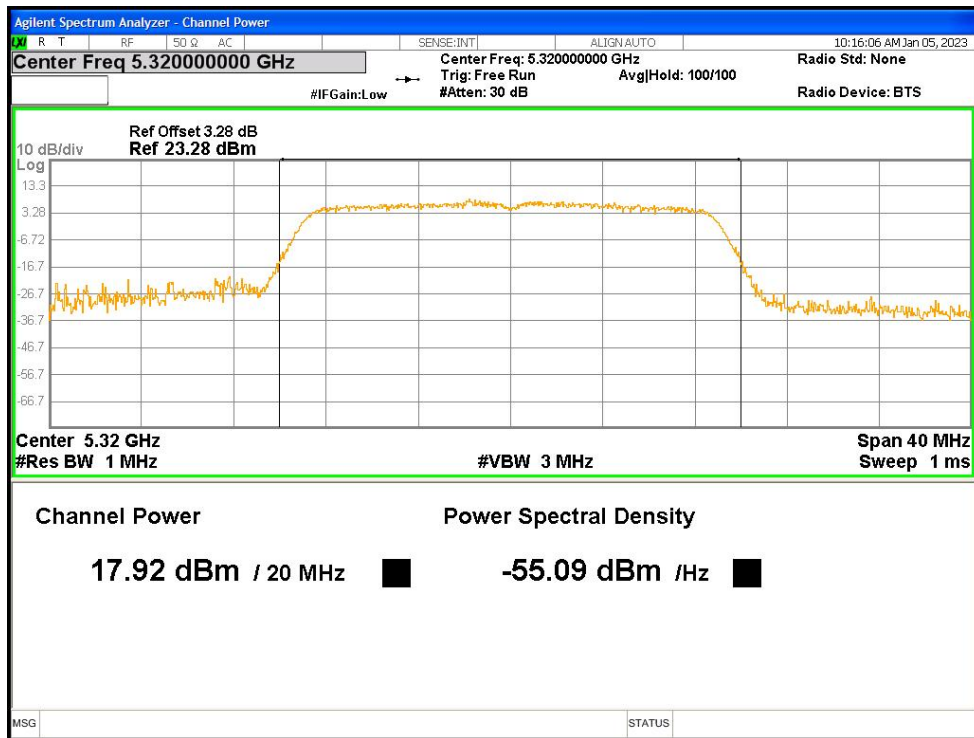 


Power NVNT ac20 5745MHz Ant2

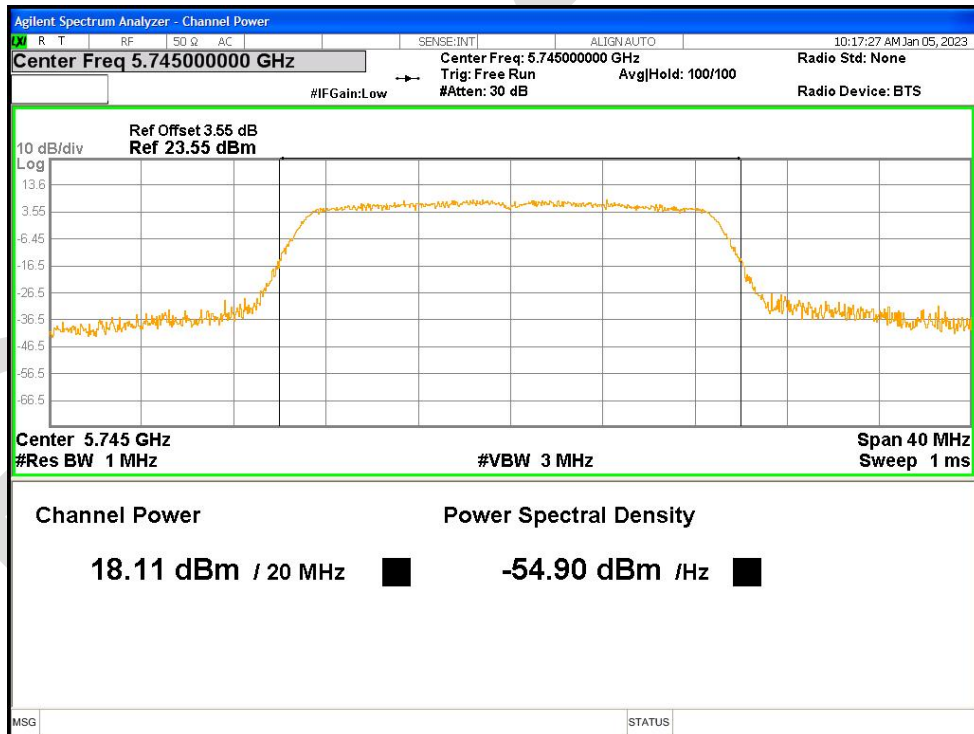 


Power NVNT ac20 5785MHz Ant2

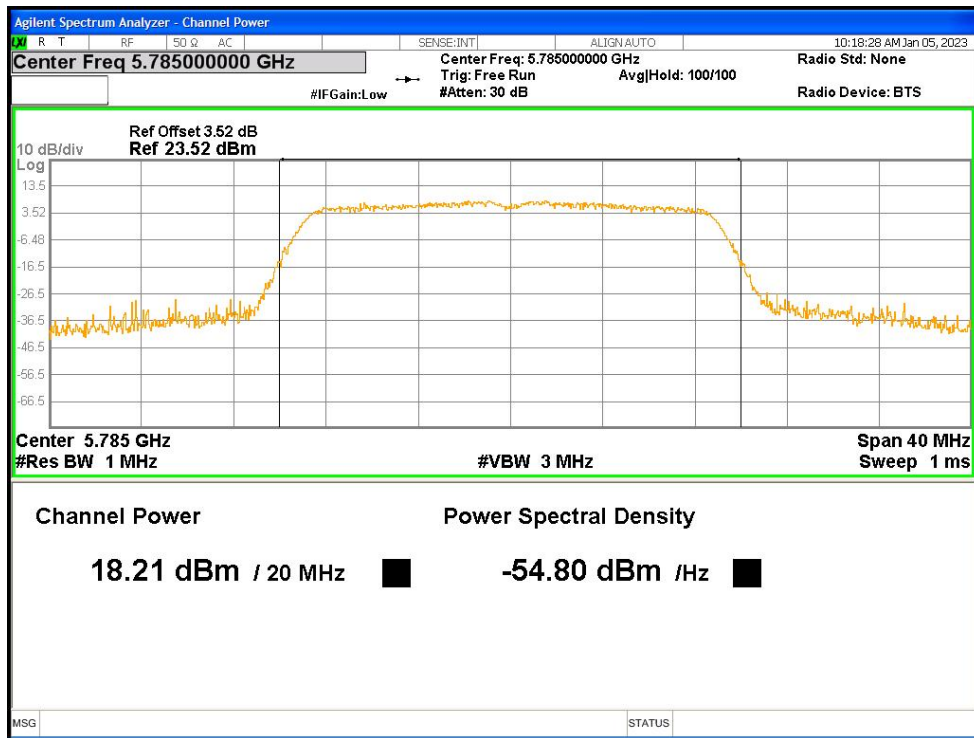 


Power NVNT ac20 5825MHz Ant2

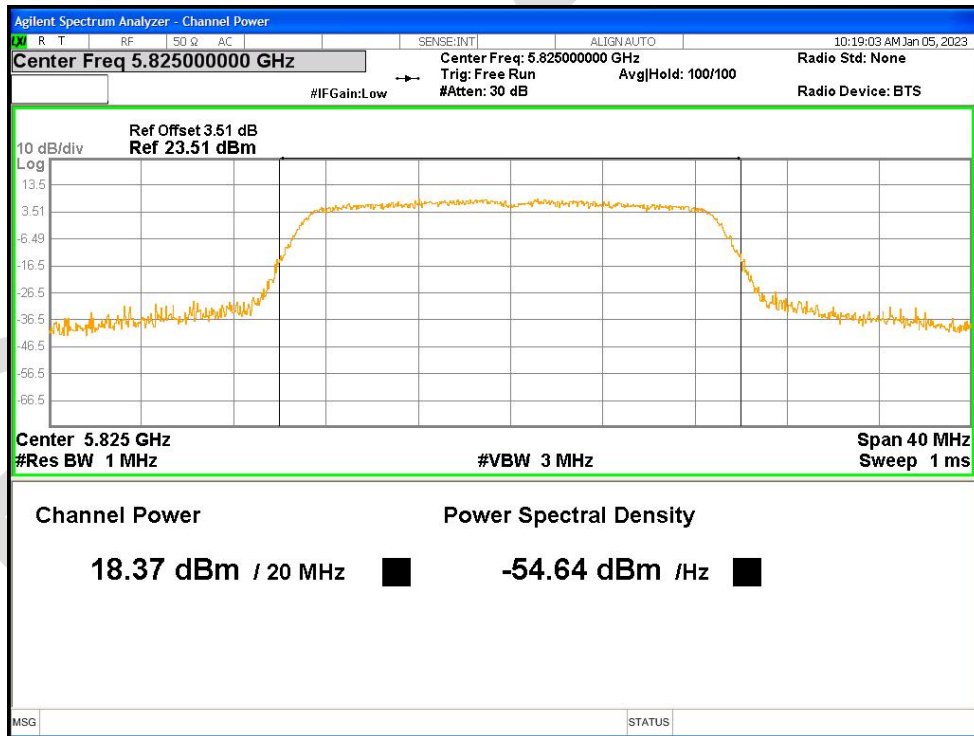 


Power NVNT ac20 5180MHz Ant1

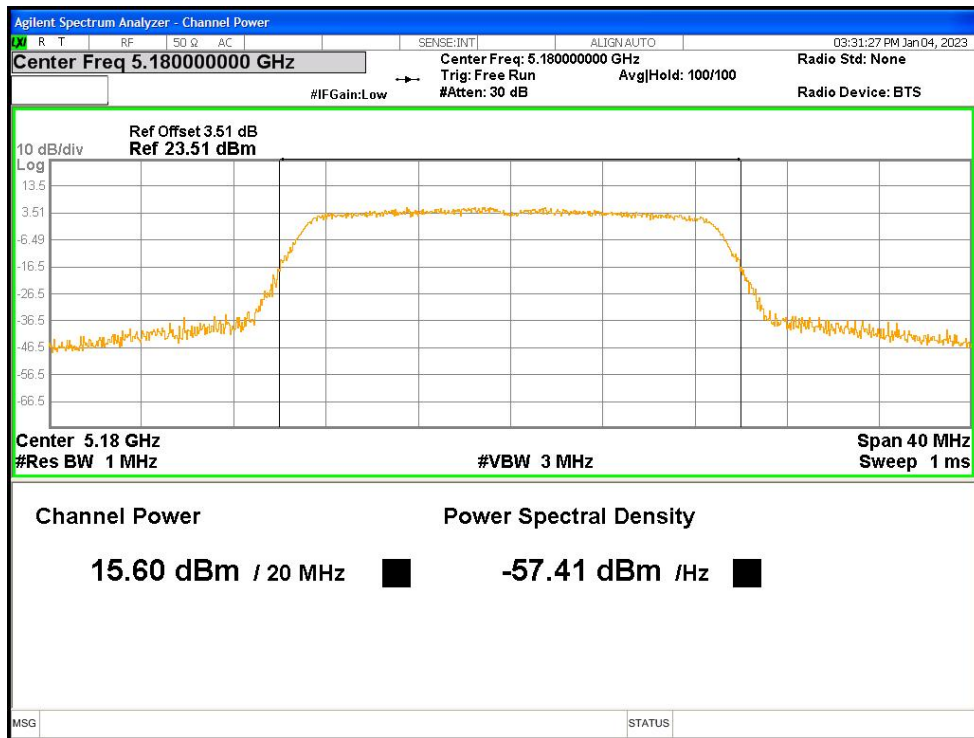 


Power NVNT ac20 5180MHz Ant2

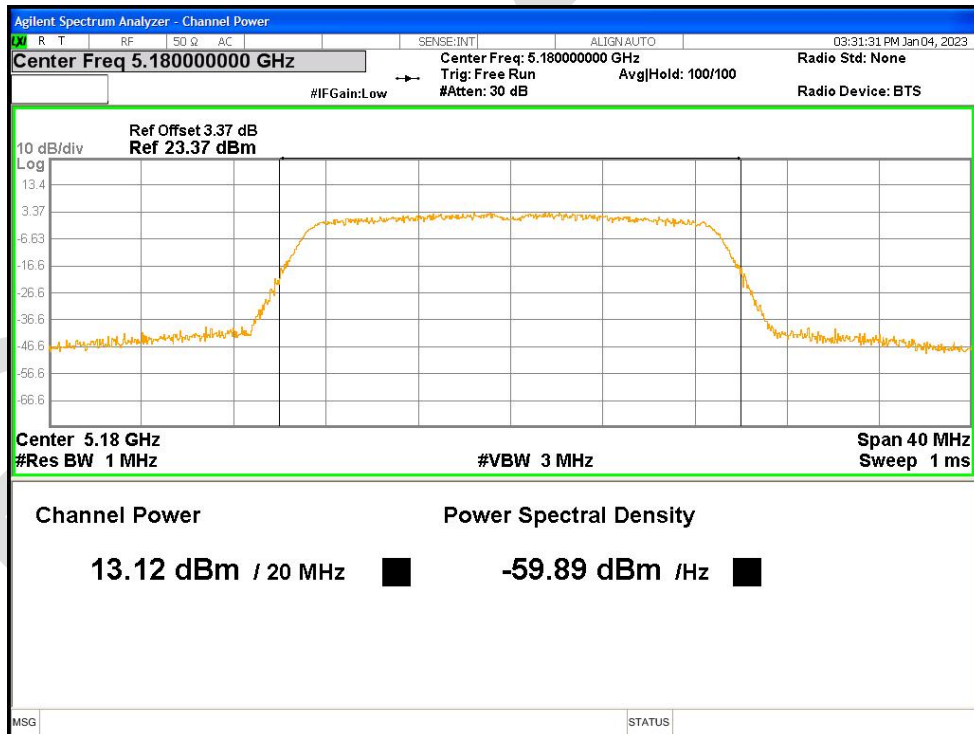 


Power NVNT ac20 5200MHz Ant1

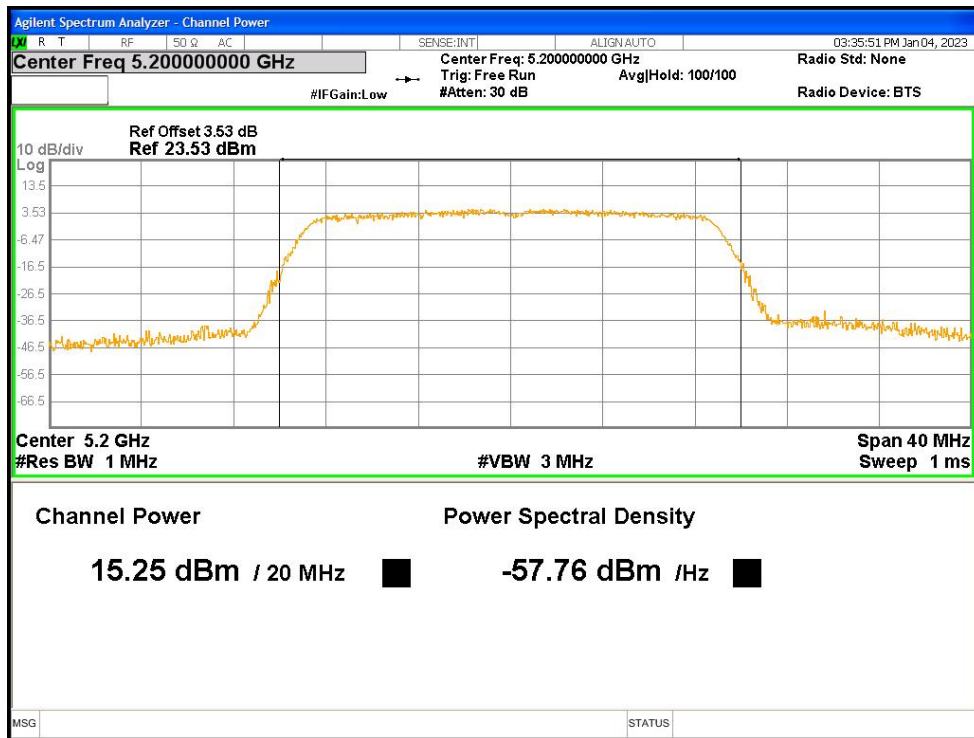 


Power NVNT ac20 5200MHz Ant2

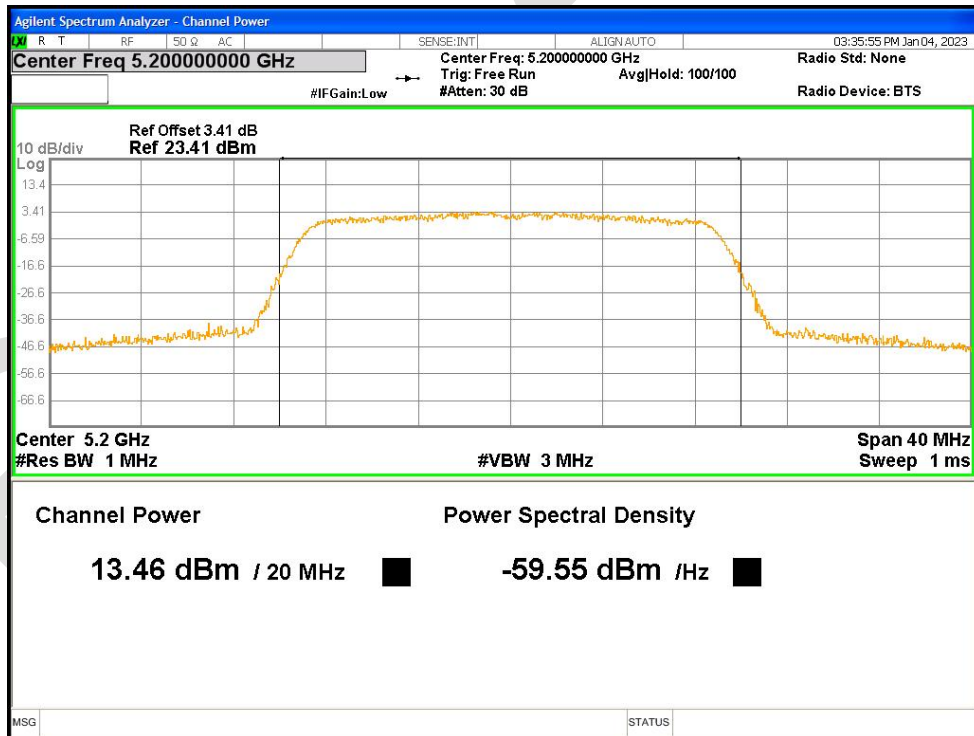 


Power NVNT ac20 5240MHz Ant1

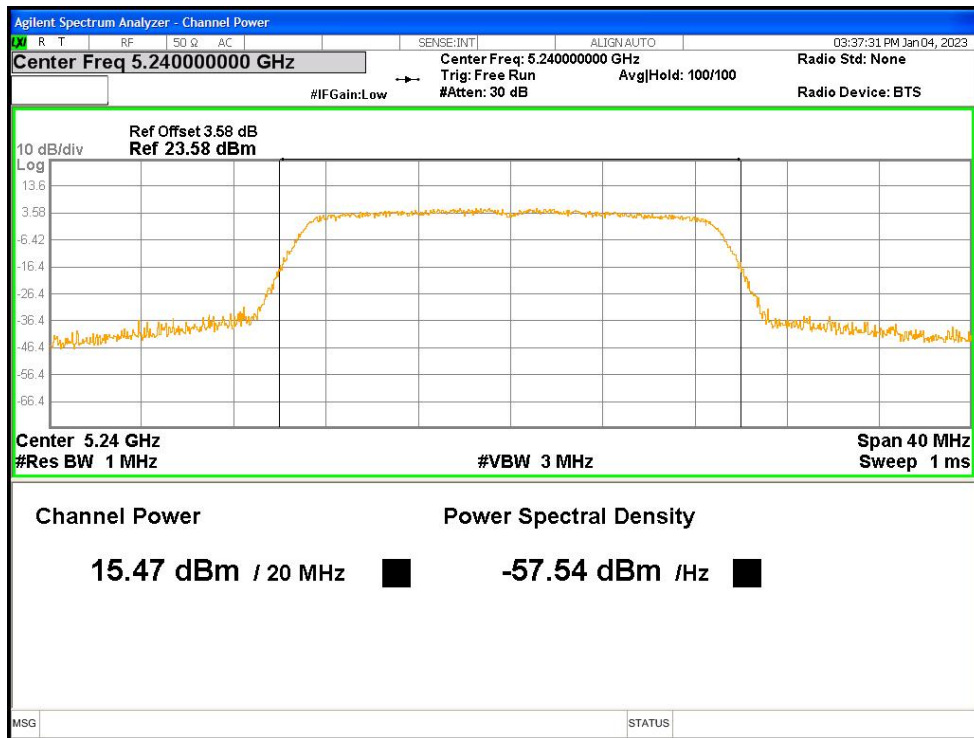 


Power NVNT ac20 5240MHz Ant2

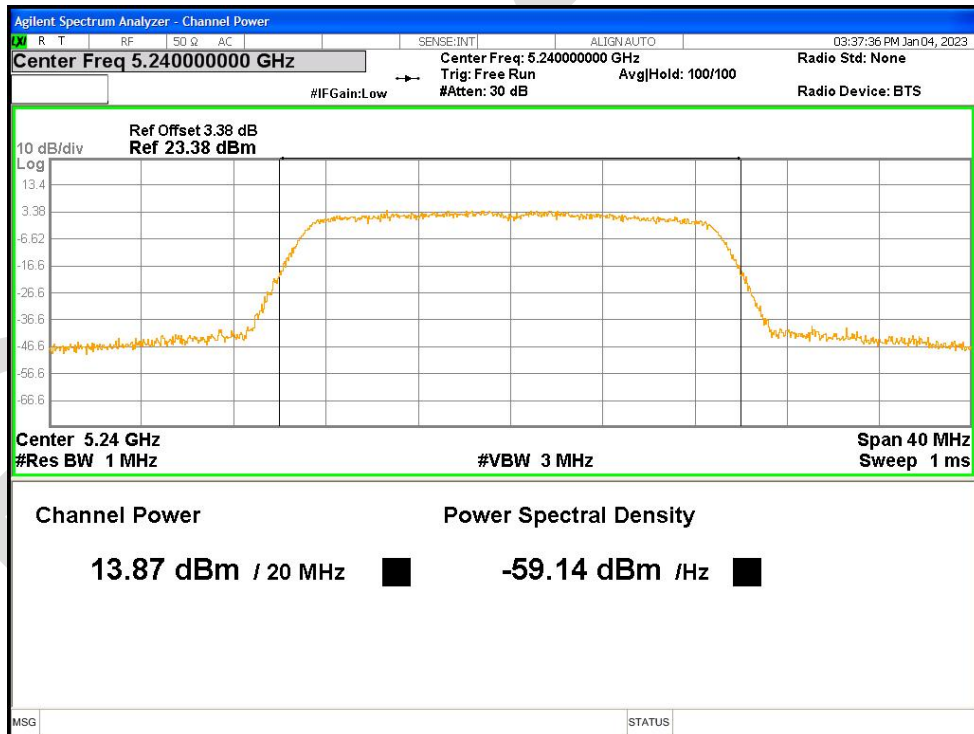 


Power NVNT ac20 5260MHz Ant1

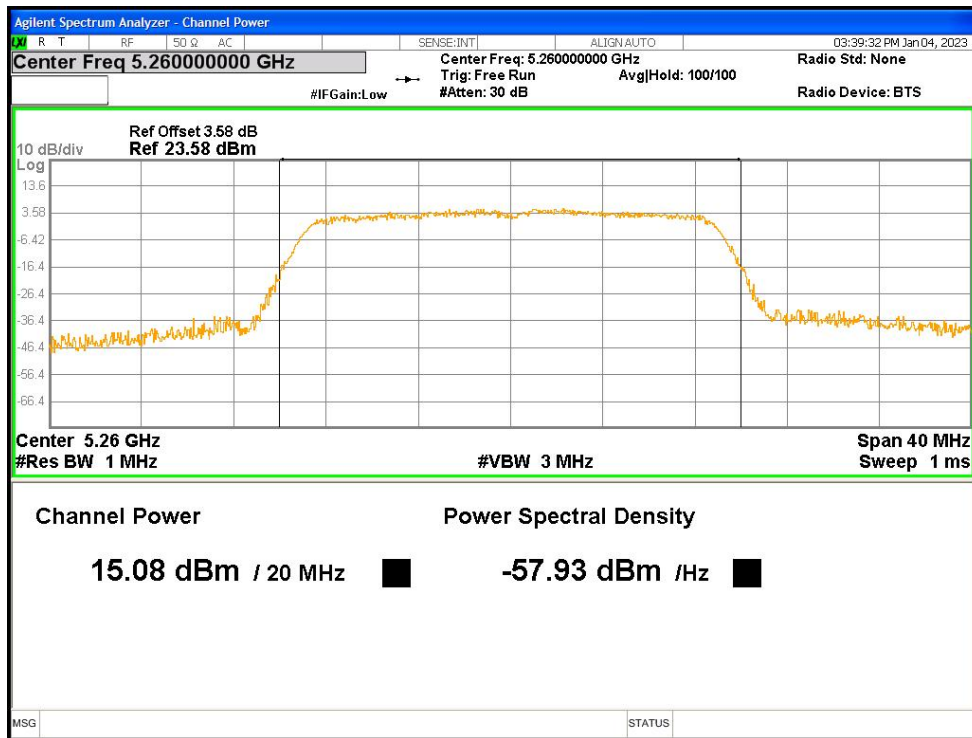 


Power NVNT ac20 5260MHz Ant2

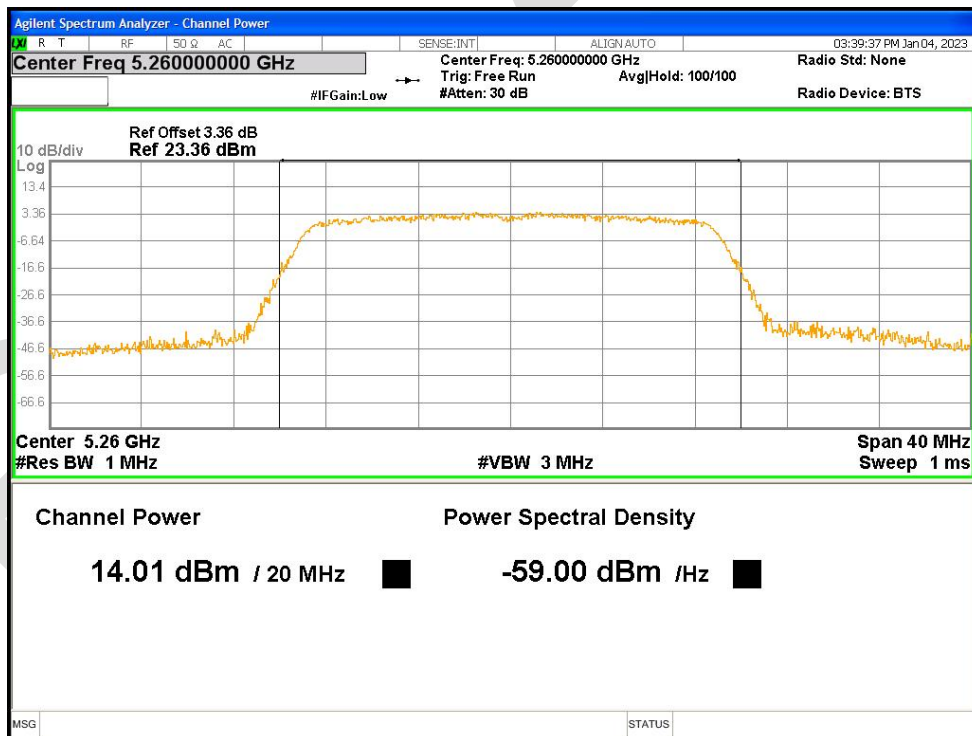 

Power NVNT ac20 5280MHz Ant1

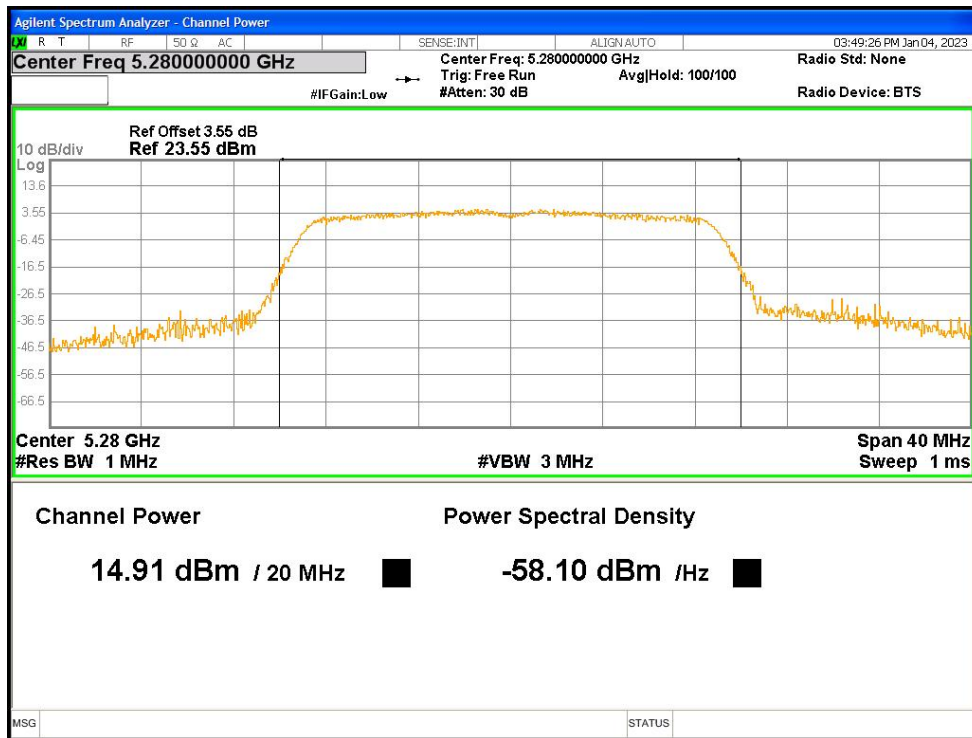 

Power NVNT ac20 5280MHz Ant2

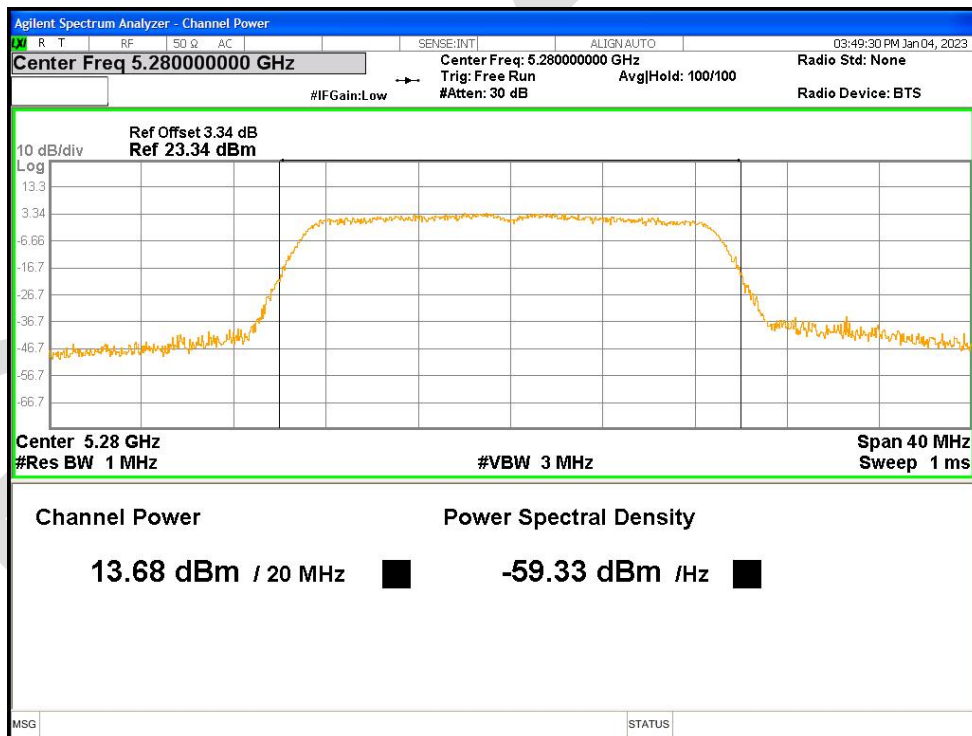 

Power NVNT ac20 5320MHz Ant1