

A Wireless shielding mode

Additional function

Setting button × 6s



Run for hint × 2



Release button



Red LED flashes twice

OK

Enter the wireless shielding mode, turn off the wireless reception function.



Short press the setting button on the receiver to restore the wireless reception function.

A Reset to factor mode

Additional function

Setting button × 14s



Run for hint × 4



Release button



Red LED flashes four times

 
OK

Reset to factory mode successfully

A Installation Method

Additional function


Installation position 1: Side Mounting

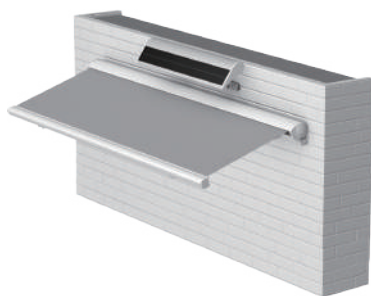



✓ Correct installation method

Install the bracket as shown in the figure

 ✗ Wrong installation method

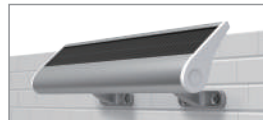


Installation position 2: Top Mounting

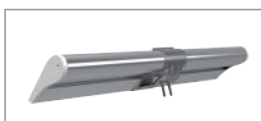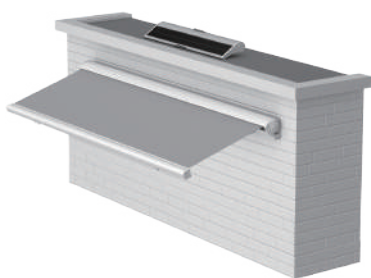  

✓ Correct installation method

Install the bracket as shown in the figure

 ✗ Wrong installation method

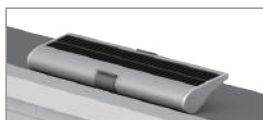


DD1536H/DD1538H

Solar Station With Integrated Receiver Specification


Version NO.: A/02

T Product description

 Technical support

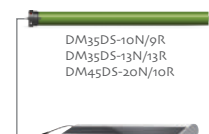

DD1536H

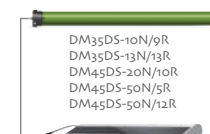 

DD1538H

- Stall protection function
- Low power consumption sleep mode
- Output voltage: 9.5V~12.6V
- Working temperature: -15°C ~ 55°C
- DD1536H Maximum output power: 80W
Size: 400mm × 50mm
- DD1538H Maximum output power: 90W
Size: 580mm × 50mm
- Can use the MICRO USB 5V Android charging line
- One DD1536H/DD1538H can store maximum 10 emitter channels. If there are already 10 channels, it will take turns to cover former channels from last one if adding more channels.



- ① When emitter is under group control, match code will be invalid.
- ② The motor works continuously for 4 minutes and then stops automatically.

T Matchable emitter

Technical support


DD1600H
Single-channel emitterDD1602H
15-channel emitterDD1800H
Single-channel emitter

T Control range

Technical support



 Effective transmitting distance may have deviation due to actual environment

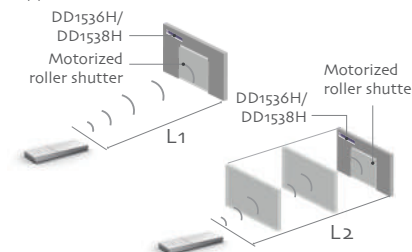

	L1 open	L2 partition	Reception frequency
	9.5V~12.6V	200m	35m
			433.92MHz

T Button specification

 
Technical support



- ① After connect to USB, when the battery voltage is higher than 12V, the green LED indicator is always bright.
- ② After connect to USB, when the battery voltage is higher than 10.2V~12V, the green LED indicator light flashes.
- ③ When the battery voltage is less than 10.2V, the red LED indicator flashes 10 times, indicating low voltage.



Motor interface

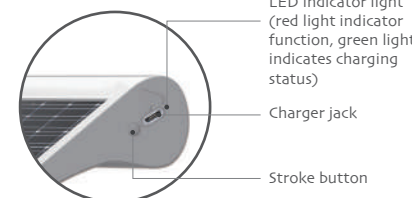

LED indicator light (red light indicator function, green light indicates charging status)

Charger jack

Stroke button

