

User guide

Profoto ProPanel 3x2

For other languages visit:
Pour les autres langues, veuillez consulter:
www.profoto.com/support



General safety instructions



IMPORTANT SAFETY INFORMATION & WARNINGS!

Before operating the equipment, you must read both the Quick Start and Safety Guide (QSSG) and this User Guide. The QSSG contains vital safety and regulatory information and must always be kept accessible to the user.

This product is intended for professional use.



General warnings

- Avoid rapid temperature changes in humid environments – this can cause internal condensation.
- Do not operate the equipment in areas with flammable gases, dust, or strong electromagnetic fields.
- Only use with approved light shaping tools and Profoto-recommended power cables.
- If the light source is damaged or deformed by heat, it must only be replaced by Profoto or an authorized service partner.
- Always lift by the handles, never by connectors or cables.
- Never install or operate the product in small confined spaces; ensure proper ventilation and do not block ventilation openings. Ensure that the fan blades can move freely.
- Keep the product away from direct sunlight, heat sources, or fire.
- Profoto products are only intended for image capture (photo and video) – no other use is permitted.
- When adjusting the yoke, be aware of pinch risks to your hands.
- Always secure the fixture with a safety strap when mounting.



WARNING – Electrical Shock – High Voltage!

- Always connect the product to a mains outlet with protective earth (grounding).
- Never open, disassemble, or attempt to repair the product yourself. High voltage (hazardous live) may be present even when powered off or unplugged.
- Only authorized Profoto service personnel may repair, modify, or service the unit.
- If the product enclosure is damaged, stop using it immediately, disconnect power, and contact Profoto Service.
- The disconnect device is the mains plug. Ensure it remains easily accessible at all times. Always unplug by gripping the plug, not the cable.

- Do not use household extension cords – they may overheat.
- Make sure the rated input voltage and current matches what is listed in the User Guide.

**Caution – Burn Hazard!**

- Some surfaces, metal parts, lenses, or glass covers near the light source may become very hot during operation.
- Do not touch hot parts with bare fingers.
- Do not position the light source too close to people or objects.
- Maintain a minimum distance of 0.3 m to the nearest surface.

**Caution - Optical Radiation!**

- This product emits high-intensity optical radiation.
- Do not stare directly into the light source when in operation – it may be harmful to the eyes.

NOTICE Note about RF (Radio Frequency)

- This equipment emits radio frequency (RF) energy and uses shared spectrum. Interference cannot be ruled out.
- Operate in accordance with local RF regulations.
- Regulations may change – keep your firmware up to date using the Profoto app.
- To comply with RF exposure rules, maintain at least 20 cm distance between the user and the device during normal operation.


Table of Contents

General safety instructions	2
Items included.....	6
Lamp overview	7
Safe Handling and Transport	9
Setup instructions	10
Mounting yoke	10
Mounting ProPanel on stand with Junior Receiver (28 mm).....	11
Adjusting the yoke tilt angle	12
Mounting ProPanel in ceiling	13
Mounting diffuser cover	14
Connecting the Power Cable.....	15
Product registration.....	16
Operating Instructions.....	17
Control button and Dial functions	17
Right (white) button – On/Off.....	17
Center dial – Main dimmer	17
Left dial.....	18
Turning lamp On or Off	18
Dimming lamp.....	18
Locking/Unlocking user interface	18
Selecting and controlling light modes	19
CCT light mode	20
HSI light mode.....	21
XY light mode.....	22
RGBW light mode.....	23
GEL light mode.....	24
Setting up wired and wireless remote control	25
Wired DMX.....	25
CRMX.....	27
Bluetooth CRMX	29
Profoto Control App.....	30
Profoto Air (and Air flash mode)	30


Navigating Settings Menu	32
DMX settings	33
Wireless settings	35
Bluetooth settings	36
Light mode settings	36
Dimming curve settings	36
CCT output settings	37
RGBW color space settings	37
Auto On setting	37
Fan settings	38
Input power limit settings	38
Display option settings	39
General (informational)	40
Factory reset	40
Automatic Temperature Protection	41
Service and Maintenance	42
Self-Maintenance	42
Repairs	42
Firmware Updates	43
Regulatory Information on Device	45
Serial Number on Device	45
Technical specifications	46
Warranty	47
Credit	47

Items included

These items should be included with your product. Contact your dealer if you find that anything is missing in the box.

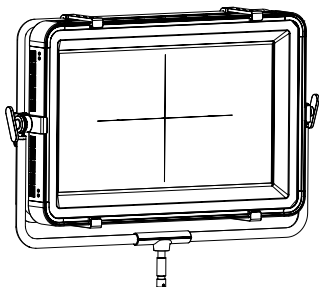

1

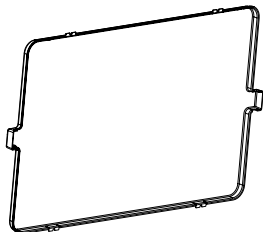

2



3



4




5




6

1. ProPanel 3x2 with yoke
2. Diffuser cover
3. AC power cord
4. Safety strap
5. QSSG (Quick Start and Safety Guide)
6. Sprint with strap (2 pcs)

Lamp overview

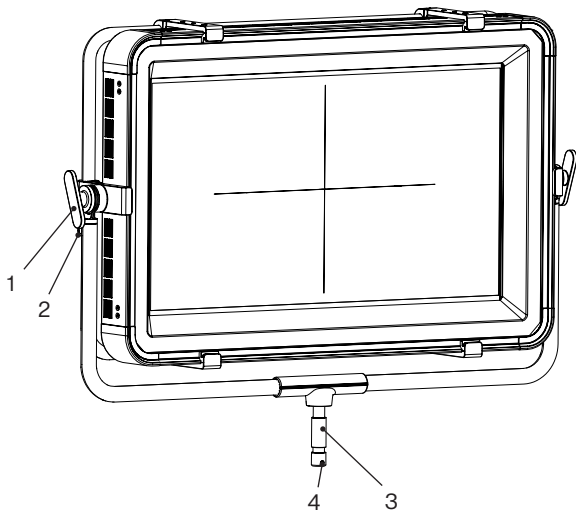

1. Yoke lock
2. Safety wire connection point for accessories
3. Stand adapter
4. Safety pin hole

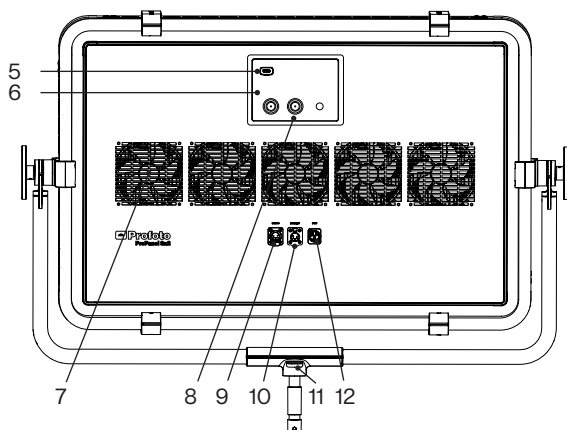

- | | |
|------------------------------|----------------------------------|
| 5. USB service port | 9. DMX IN port |
| 6. Display | 10. DMX OUT port |
| 7. Fan | 11. Safety wire connection point |
| 8. Control dials and buttons | 12. Power/AC inlet |

Safe Handling and Transport

Read the safety instructions.


Always inspect the unit before use. If there are any open cracks in the housing do not use the product.

Always let unit cool down after use.


Setup instructions

Mounting yoke


1. Loosen the yoke lock.
2. Insert the yoke.
3. Tighten the yoke lock.

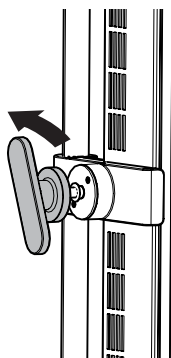

1

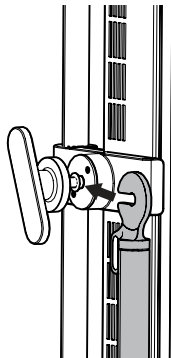




2

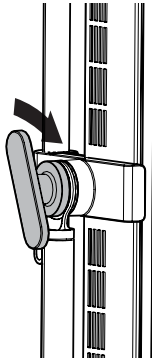

3


Mounting ProPanel on stand with Junior Receiver (28 mm)

1. Insert the stand mount into the Junior receiver on the stand.
2. Tighten the screw on the Junior receiver.
3. Secure the lamp to the stand mount by attaching the safety to the safety wire connection point on the yoke.

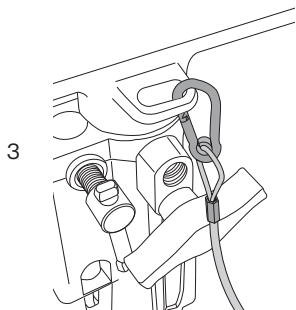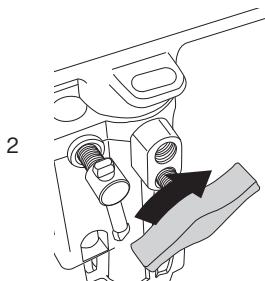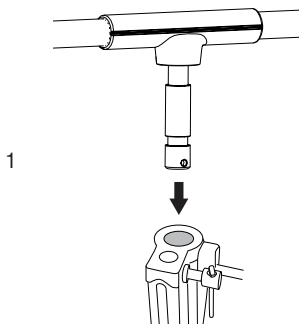

Adjusting the yoke tilt angle

1. Loosen the yoke lock.
2. Set the desired tilt angle.
3. Tighten the yoke lock.

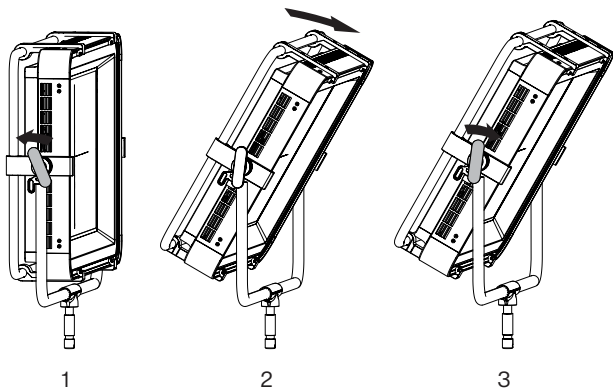


Caution:

When rotating the yoke – there is a risk of pinching fingers.


Mounting ProPanel in ceiling

1. Secure the lamp to the ceiling mount by attaching the safety to the safety wire connection point on the yoke. Loop the safety wire through the tube frame on the ProPanel.

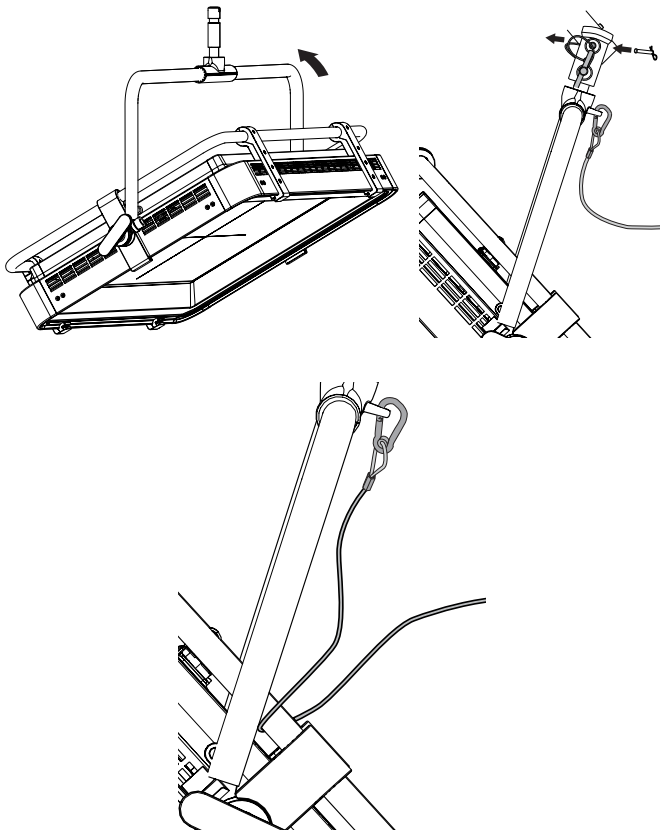

Mounting diffuser cover


The diffuser cover is mounted by first snapping it into the upper and lower slots in the panel front, and then locking it in place with the locking pins on each side. Make sure to secure each locking pin with the rubber strap.

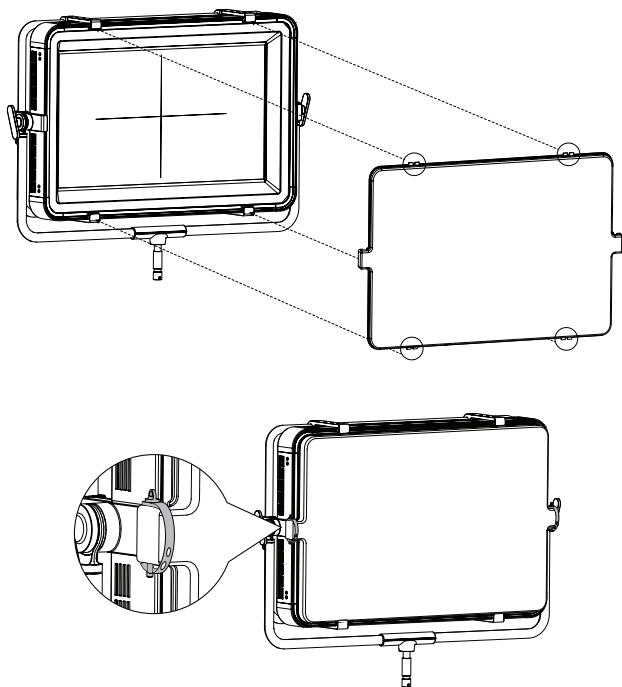

Connecting the Power Cable

To connect:

1. Align the powerCON plug with the positioning slot on the AC inlet.
2. Insert the plug fully, and twist clockwise until it locks securely with a click.

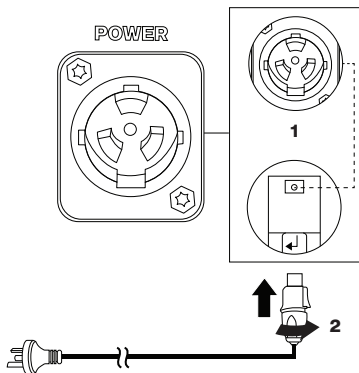

To disconnect:

1. Turn off the lamp before disconnecting.
2. Pull back the release latch on the powerCON plug.
3. Twist counterclockwise and pull the plug straight out.

Product registration

Before using your product for the first time, we highly recommend registering it and checking for firmware updates. By registering, you'll ensure that we can notify you of future updates.

To register and update your product:

1. Download Profoto Control from the App Store or Google Play.
2. Open the app and create an account.
3. Power on your light and connect it via the app – it will be registered automatically.
4. If a firmware update is available, it will appear in the app. Tap Update to proceed.

For details, see the Firmware Updates section.

Operating Instructions

Control button and Dial functions



Right (white) button - On/Off

- **Short press:** Turn the lamp on or off.
- **Long press:** Turn off the unit.
- **In settings menu:** Short press to exit the menu.

Center dial - Main dimmer

- **Rotate:** Adjust light intensity (0.0-100%). Faster rotation increases speed.
- **Short press:** Open the settings menu.
- **Long press:** Lock or unlock the controls.
- **In settings menu:** Rotate to navigate, short press to select.

Left dial

Light Mode Control

- **Rotate:** Adjust the selected light mode parameter.
- **Short press:** Switch between parameters (e.g. hue/saturation, CCT/tint).
- **Long press:** Open the light mode selection menu.
- **In light mode selection menu:** Rotate to navigate, short press to select.
- **In settings menu:** Short press to go back one level

Turning lamp On or Off

Short press the right white button to turn the light on or off.

Dimming lamp

Turn the center dial to adjust the brightness from 0% to 100%.

- Turning the dial slowly changes the light intensity in 0.1% increments per step.
- Turning the dial quickly accelerates the adjustment rate.

Locking/Unlocking user interface

You can lock the control interface to prevent accidental changes during use.


- Long press the center dial to lock the user interface.
- When locked, a lock icon  will appear on top of the main screen indicating the lock status.
- All controls are disabled except the ability to unlock.
- Long press the center dial to unlock.

Selecting and controlling light modes

ProPanel 3x2 offers six selectable light modes, each providing different ways to adjust the light's color characteristics:

- **CCT** – White light mode with adjustable color temperature and tint.
- **HSI** – Color mode with adjustable hue and saturation.
- **XY** – Color mode using X/Y coordinate control for precise color definition.
- **RGBW** – Color mode with individual control of Red, Green, Blue, and White channels.
- **GELS** – Simulated gel mode with selectable presets based on LEE and Rosco gels.

To change the light mode, press and hold the left dial to open the light mode selection menu.

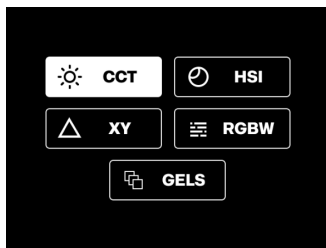


Alternatively, you can access light mode options through **Settings > Light mode**.

See the sections below for detailed descriptions of each mode.

CCT light mode

CCT is the default white light mode that lets you adjust CCT (Correlated Color Temperature) and Tint (Green/Magenta shift). CCT light mode main screen and controls below.

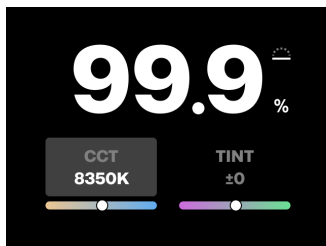

- **Right button** Click to toggle light on/off.
- **Center dial** Rotate to adjust dim level (0.0-100%).
- **Left dial** Click to select and rotate to adjust:
 - CCT (2000K-15000K).
 - Tint (-100 to +100).

NOTE:


The CCT light mode includes two selectable output modes, found under **Settings >**

CCT Output.

-  **Constant** (default) – Limits the maximum light output to maintain consistent intensity across the CCT range (~2600K–8000K), based on the set dim level.
-  **Max** – Removes the output cap to allow maximum possible intensity at any selected CCT.

HSI light mode

HSI is a color light mode that lets you create custom colors by adjusting Hue and Saturation. HSI light mode main screen and controls below.

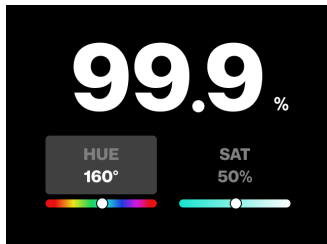


- **Right button** Click to turn light on/off.
- **Center dial** Rotate to adjust the dim level (0.0-100%).
- **Left dial** Click to select and rotate to adjust:
 - Hue (0-360°).
 - Saturation (0-100%).

NOTE:

The intensity is not constant when adjusting Hue and Saturation. Output levels will vary depending on color settings.

XY light mode

XY is a color light mode that lets you adjust the light's color using X/Y coordinate values, offering precise control for color matching and calibration. XY light mode main screen and controls below.

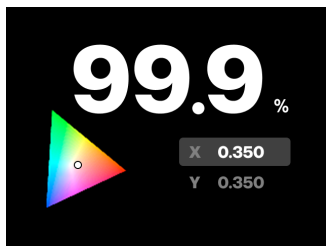


- **Right button** Click to turn light on/off.
- **Center dial** Rotate to adjust the dim level (0.0-100%).
- **Left dial** Click to select and rotate to adjust X and Y coordinates.

NOTE:

The output intensity is not constant when you change X and Y values. Light output will vary depending on the selected color coordinates.

RGBW light mode

RGBW is a color mixing mode that lets you manually adjust the intensity of each channel: Red, Green, Blue, and White. RGBW light mode main screen and controls below.

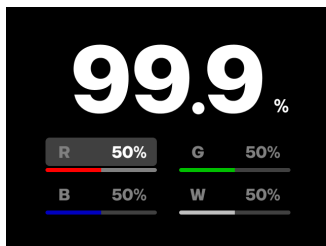


- **Right button** Click to turn light on/off.
- **Center dial** Rotate to adjust the dim level (0.0-100%).
- **Left dial** Click to select and rotate to individually adjust Red, Green, Blue and White (0-100%).

NOTE:

- The output intensity varies depending on the RGBW combination. There is no automatic normalization across channels.
- The RGBW color space can be selected in **Settings > RGBW color space**.
- All selectable RGBW color spaces are calibrated to a 6500K whitepoint.

GEL light mode

GEL mode lets you apply virtual LEE and Rosco gels, matched to either a Tungsten (3200K) or Daylight (5600K) base light.

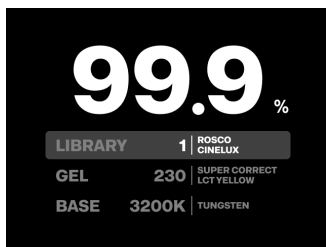

- **Right button** Click to turn light on/off.
- **Center dial** Rotate to adjust the dim level (0.0-100%).
- **Left dial** Click to select and rotate to individually adjust:
 - Library: Choose from 9 gel libraries.
 - Gel: Select a gel from the active library.
 - Base: Set base light to 3200K or 5600K.

NOTE:

The light intensity is not constant when changing gels. Output will vary depending on the selected gel and base combination.

Setting up wired and wireless remote control

The ProPanel 3x2 supports the following remote control options:

- Wired DMX
- CRMX (wireless DMX)
- Bluetooth CRMX
- Profoto Control App (via Bluetooth)
- Profoto Air

Note on DMX/CRMX priority

If a DMX cable is connected and both CRMX and Bluetooth are active, the light will automatically prioritize incoming control signals in the following order:

- Wired DMX
- CRMX
- Bluetooth CRMX

Wired DMX


Go to Setting > DMX to set the DMX address, profile, and general DMX behavior.

1. Connect your DMX controller to the DMX IN port (5-pin XLR, located next to the power connector).
2. To daisy-chain a second fixture on the same address, connect from the DMX OUT port on the first unit to the DMX IN port on the next one.

Once the ProPanel 3x2 detects an active DMX signal:

- The DMX main screen appears, showing a green line at the bottom and a large display of the selected profile and address.
- Local control is disabled, except for access to the Settings menu.
- DMX profile, address, and related settings can always be adjusted through Settings > DMX, even when DMX is active.

DMX main screen

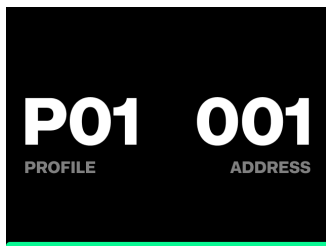

CRMX

The ProPanel 3x2 includes an integrated LumenRadio TimoTwo module for CRMX wireless DMX control.


Go to **Setting > DMX** to set the DMX address, profile, and general DMX behavior – just like with wired DMX.

To link with a CRMX transmitter:


1. Go to **Settings > Wireless > Mode**, and make sure CRMX Receiver is set to ON.
2. If the CRMX status shows LINKED, press UNLINK to clear any previous connection.
3. Press the LINK button on your CRMX transmitter to initiate pairing.

Once linked and a CRMX signal is present:

- The DMX main screen appears, showing the active profile and DMX address.
- The signal strength is shown in the lower-left corner.
- If the signal is weak, the green line at the bottom of the screen turns yellow.

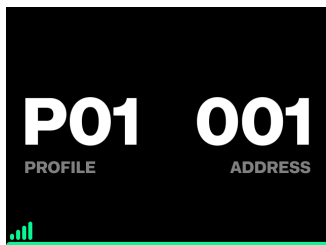

DMX main screen with good signal CRMX linked.

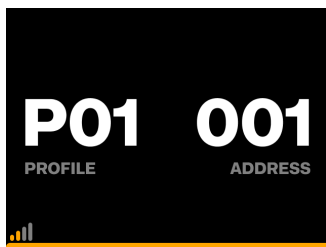

DMX main screen with weak signal CRMX linked.

Bluetooth CRMX

The integrated LumenRadio TimoTwo module also supports Bluetooth CRMX control via the Blackout app.

To enable a Bluetooth CRMX connection, make sure both of the following are set:


- CRMX Receiver is ON and UNLINKED (**Settings > Wireless > Mode > CRMX Receiver**).
- Bluetooth is ON and Disconnected (Settings > Bluetooth).

Then follow the instructions in the Blackout app to connect your light.

In the app, the fixture will appear as “[Model name] TimoTwo” in the list of available Bluetooth devices.

Once successfully connected:

- The DMX main screen is displayed, showing the active profile and address.
- A Bluetooth connection icon, , appears in the bottom-right corner of the screen.

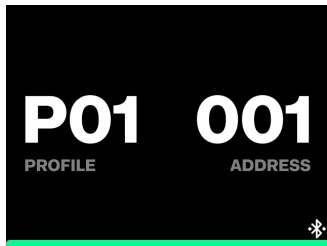

DMX main screen with Bluetooth DMX connected.

Profoto Control App

The integrated Bluetooth module supports remote control via the Profoto Control app, available on the App Store and Google Play. For more information, go to profoto.com.

To pair a light with the Profoto Control app, make sure that Bluetooth is ON and Disconnected (**Settings > Bluetooth**).

Then follow the in-app instructions to connect your light.

NOTE:

Once a light has been connected to the Profoto Control app, it will automatically reconnect the next time you launch the app - until you manually disconnect the light in the app.

Profoto Air (and Air flash mode)

Profoto Air is a proprietary wireless protocol integrated into all Profoto lights. It enables remote control and flash triggering via any Profoto on-camera remote, such as the Profoto Connect Pro. When Profoto Air is selected, you can also enable Air Flash mode to use the lamp as a flash source instead of continuous light.

With Air Flash enabled:

- The continuous light is dimmed to a low standby level
- The lamp will pulse a 30-millisecond flash at full set intensity when triggered from a Profoto remote.


Air Flash Mode is ideal for use cases where high-intensity flashes are needed, without keeping the full continuous light output active. It reduces power consumption and increases comfort for subjects, especially in portrait photography.

To select Profoto Air (and Air Flash):

1. Go to **Settings > Wireless > Mode** and select Profoto Air
2. The Profoto Air menu will open, allowing you to:
 - Select the same Air channel (1–100) as set on your remote.
 - Assign the light to an Air group (A–F).
 - Enable Air Flash if you want to use the lamp as a flash.

Once Profoto Air is active:

- The dimming scale on the main screen changes to the Profoto scale (0.1–10), matching the scale used by Profoto remotes.
- The selected channel and group are shown in the bottom-left corner of the screen.
- If Air Flash is enabled, a flash symbol  is displayed on the main screen.

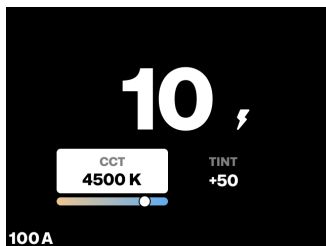

Main screen with Profoto Air and Air flash active.

Navigating Settings Menu

The Settings menu gives you access to all configurable options for the unit.

- Enter the Settings menu with a short press on the center dial.

< SETTINGS	
DMX	P1-001
WIRELESS	OFF
BLUETOOTH	ON
LIGHT MODE	CCT
DIMMING CURVE	LINEAR
CCT OUTPUT	CONSTANT
RGBW COLOR SPACE	DEVICE
AUTO ON	ON
FAN	AUTO
INPUT POWER LIMIT	AUTO
DIPLAY OPTIONS	>
GENERAL	>
FACTORY RESET	>

- Exit the menu with a short press on the right button.
- Go back one level with a short press on the left knob.

The following sections provide an overview of all available sub settings.

DMX settings

The DMX submenu lets you select and set all DMX-related settings.

DMX	
ADDRESS	001
PROFILE	P1
RDM	OFF
TERMINATION	ON
LOSS BEHAVIOR	HOLD LAST
SMOOTHING	OFF

Address

Set the DMX address (001–512) for the fixture. Default address is 001.

Profile

Select a DMX profile that matches your controller and workflow. For a detailed list of all available profiles, refer to the ProPanel 3x2 DMX profile specifications, available at profoto.com/support. Default profile is P1.

RDM

Enable or disable RDM (Remote Device Management).

- **Off** (default) = RDM disabled.
- **On** = RDM active.

Termination

Control the DMX termination setting:

- **Off** = Forwards the DMX signal to other daisy-chained lights.
- **On** (default) = Terminates the DMX signal.


Tip: When using multiple fixtures in a DMX chain, it is recommended to terminate the last light in the chain.

Loss Behavior

Select what happens if the DMX signal is lost:

- **Hold Last** (default) – Maintain last known values.
- **Black Out** – Light turns off.
- **Hold 2 min, Fade out** – Hold last value for 2 minutes, then fade out.

When the DMX signal is lost (e.g., the cable is unplugged) a “DMX disconnected” popup will remain on the screen until the user presses a button, or the DMX is reconnected.

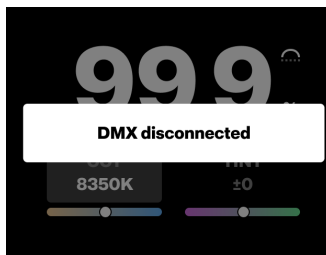

Smoothing

Adjust how smoothly DMX transitions are handled:



- **Off** (default) – Maximum response speed (no smoothing).
- **Smooth** – Transitions are smoothed over two DMX frames.
- **SuperSmooth** – Transitions are smoothed over four DMX frames, resulting in very smooth dimming, even in 8-bit mode.

Wireless settings

The Wireless menu lets you select the desired wireless control mode:

- **Off** (default) – Disables all wireless communication except Bluetooth.
- **CRMX Receiver** – Enables wireless DMX via LumenRadio.
- **Profoto Air** – Enables Profoto’s proprietary remote control and flash sync system.

When CRMX Receiver or Profoto Air is selected, additional submenus opens for further configuration.

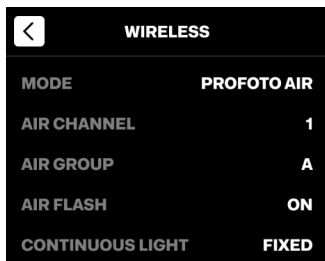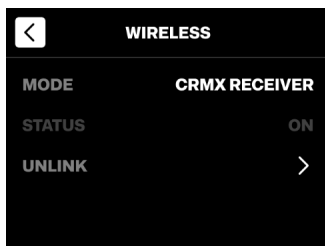

For detailed instructions on how to configure each wireless mode, see the “**Setting up wired and wireless remote control**”.

Bluetooth settings

Bluetooth can be set to ON or OFF. ON is default and is required to enable Bluetooth CRMX and to pair the lamp with the Profoto Control App.

For detailed instructions on how to connect to the Profoto Control App or the Blackout App via Bluetooth, see the “**Setting up wired and wireless remote control**”.

36

Light mode settings

The light mode settings menu allow you to select from five optional light modes. CCT is the default mode.

- **CCT** (default)
- **HSI**
- **XY**
- **RGBW**
- **GELS**

For detailed descriptions of each mode, see the “**Selecting and controlling light modes**” section.

Dimming curve settings

Select from four available **dimming curves** to customize how the light responds when dimmed. If a curve other than Linear is selected, a dimming curve icon appears on right side of the main screen (just above the percentage symbol).

- **Linear** (default) - Standard linear dimming response.
-  **Logarithmic** – Smoothest dimming at high brightness levels.
-  **Exponential** – Smoothest dimming at low brightness levels.
-  **S-curve** – Smooth dimming at both low and high brightness levels.

NOTE:

- The selected dimming curve does not apply in Profoto Air (Photo mode).

CCT output settings

This menu allows you to choose between two CCT output settings. The selected setting is indicated by a CCT output icon on the right side of the CCT Mode main screen.

-  **Constant** (default) – Limits the maximum light output to maintain consistent intensity across the CCT range (~2600K–8000K), based on the set dim level.
-  **Max** – Removes the output cap to allow maximum possible intensity at any selected CCT.

NOTE:

The selected CCT output setting only applies to the CCT light mode.

RGBW color space settings

This menu allows you to choose from four available RGBW color spaces:

- **Device** (default)
- **Rec.709**
- **Rec.2020**
- **DCI-P3**

All selectable RGBW color spaces are calibrated with 6500K whitepoint.

NOTE:

The selected RGBW color space setting only applies to the RGBW light mode.

Auto On setting

Auto On determines what happens when the lamp is connected to power. You can set it to:

- **On** (default) – The lamp automatically turns on using the previously selected settings when power is connected.
- **Off** – The lamp remains off when power is connected and must be turned on manually.

Fan settings

Select from three available fan modes. When a mode other than Auto is active, a fan mode icon appears in the top-right corner of the main screen.

- **Auto** (default) – Adjusts fan speed automatically to maintain a safe operating temperature.
-  **Max** – Runs the fan at a constant high speed, equivalent to the maximum fan speed used in Auto mode.
-  **Silent** – Runs the fan at a minimum constant speed.

NOTE:

Silent fan mode limits the maximum available light output.

Input power limit settings

Limit the lamp's input power to reduce maximum power draw – useful when:

- Power sources are fused with limited current.
- Multiple lights share the same circuit.
- A portable generator or battery pack is used.

Select from three available input power limits. When a limit other than Auto is active, the selected power limit appears in the top-left corner of the main screen.

- **Auto** (default) – Automatically allows the highest input power based on input voltage.
- **1600W** – Limits input power to 1600 Watts.
- **1200W** – Limits input power to 1200 Watts.
- **800W** – Limits input power to 800 Watts.
- **400W** – Limits input power to 400 Watts.

Display option settings

Adjust the display option settings to show or hide certain information on the main screen, and to set the screen brightness.

Available Options:

- Input Power
 - **Show** – Displays current power draw on the main screen.
 - **Hide** (default) – Hides power draw info on the main screen.
- DMX Info
 - **Show** – Displays the selected DMX profile and channel on the main screen.
 - **Hide** (default) – Hides DMX info on the main screen.
- Display Brightness
 - **Auto** (default) – Automatically adjusts display brightness based on ambient light.
 - **Max** – Locks brightness at maximum level.
 - **Medium** – Locks brightness at medium level.
 - **Low** – Locks brightness at low level.

General (informational)


The General submenu is informational only – no settings can be changed here. It provides access to unit-specific statistics, hardware details, firmware version, and regulatory information.

Available information in submenu:

- **Unit Stats** – Displays usage information about total runtime and power-on count (sessions).
- **About** – Shows serial number, hardware version, and installed firmware version.
- **Regulatory Info** – Lists relevant certifications and compliance information.

Factory reset


Use this submenu to restore all device settings to their factory defaults. This action resets all user-defined configurations but does not affect firmware version or runtime statistics.

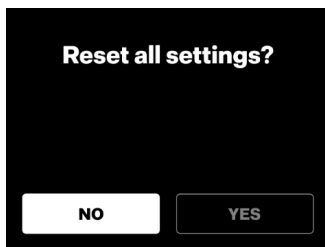


Automatic Temperature Protection

The ProPanel 3x2 has built-in Temperature Protection to prevent damage from overheating or extremely low temperatures.

- **Too hot** – If the internal temperature becomes critically high, a “COOL” indicator appears on the main screen. If the temperature continues to rise, the light output shuts off, and the fan switches to maximum speed for cooling.

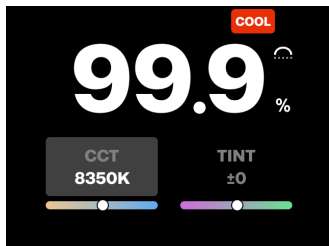

- **Too cold** – A similar warning will be shown if the unit is turned on below the critical minimum temperature for the liquid cooling (e.g. when frozen).

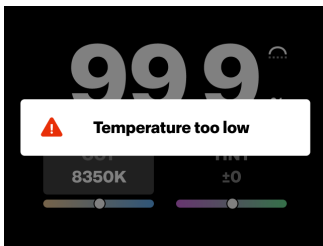

Service and Maintenance

Self-Maintenance

To clean the unit, gently wipe the exterior with a soft cloth moistened with a small amount of mild detergent. Use a second dry cloth to remove any remaining moisture.

To prevent dust buildup, perform regular maintenance using low-pressure compressed air, especially around ventilation openings.

Caution:

Always disconnect the unit from mains power before performing any cleaning or maintenance.

Repairs


Any diagnostics or repairs beyond basic maintenance must only be carried out by a trained and Profoto-authorized service partner. For assistance, contact Profoto Service or an authorized service center.

Firmware Updates

To ensure the product operates with full functionality, it is essential to always have the latest firmware installed. If you have registered your product, you will be notified whenever a new firmware version becomes available.

The recommended method for updating the firmware is via the Profoto Control App. When the unit is connected to the app, it will notify you if an update is available. Simply follow the in-app instructions to complete the update.

While the firmware update is in progress, a static “Update in Progress” message will be displayed on the device’s main screen. The update progress will be shown within the app connected to the device.

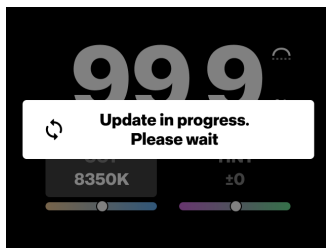


Once the firmware update over Bluetooth is completed, the device will automatically restart.

- If no additional internal updates are required after the restart, an “Updated Successfully” popup will appear for 3 seconds. The device will also notify the app that the update has completed successfully.
- If internal device updates are required after the restart, a “Finalizing Update” popup with a progress bar will be displayed to indicate that the update is still in progress.

When the internal update is complete, an “Updated Successfully” popup will appear for 3 seconds, and the device will notify the app that the update has finished

If an error occurs during the internal update, a “Something Went Wrong” message will appear and remain on the screen until a button is pressed or the update process is restarted.

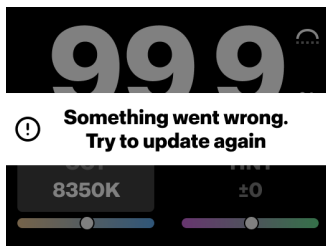

Regulatory Information on Device

Go to **Settings > General > Regulatory** info to see information about Certifications and other Compliance information.

Serial Number on Device

The serial number is printed on the bottom of the unit. You can also go to **Settings > General > About**.

Technical specifications

Model name	ProPanel 3x2
Regulatory model	P0001613
Rated input	100-240 VAC, 50/60 Hz Max 2 200 W Max 17.7 A

46 For additional technical specifications and photometrics, visit profoto.com.

Warranty

This product is guaranteed for a period of three years with the exceptions set out in Warranty terms.

If you have any technical problems with the product, please get in contact with an authorized Profoto service station or visit: <https://profoto.com/support/warranty>

Credit

App Store is a trademark of Apple Inc., registered in the U.S. and other countries and regions.

The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Profoto is under license.

USB Type-C and USB-C are registered trademarks of USB Implementers Forum. Other trademarks and trade names are those of their respective owners.

Profoto AB
Box 1264,
172 25 Sundbyberg
Sweden

+46 (0) 8 447 53 00
info@profoto.com
www.profoto.com



Technical data and product information are subject to change without notice.

August 2025. M0010053-001. Printed in Sweden.