



Oro Technology Co., Ltd.

AI Sensor-433.92MHz



Tire Pressure Monitor System (TPMS) Sensor Assemblies

無線胎壓監測器


Read all instructions before installing. Refer to Mitchell Manual for installation specifications. Professional installation only. These Tire Pressure Monitor System Sensor assemblies are replacement or maintenance parts for motor vehicles that have a factory installed Tire Pressure Monitoring System (TPMS).

CAUTION:

Each TPMS sensor is designed and manufactured to operate in a specific motor vehicle year, make, and model, using the proper frequencies to communicate with the motor vehicle TPMS system. Only install TPMS sensors designated for your specific motor vehicle year, make, and model. Improper installation will cause the motor vehicle TPMS to fail to operate properly.

Do not install sensors in damaged wheels. Upon completion of installation, test the TPMS system using the procedures described in Mitchell 1 Manual to confirm proper installation. If the TPMS system fails to operate properly, check all installation procedures to ensure proper installation and retest. If the TPMS system continues to fail to operate, immediately consult with an authorized motor vehicle dealership.

If the OEM equipment wheels or tires are not used, it is the responsibility of the vehicle owner to ensure that the TPMS system is functioning properly. The vehicle owner expressly assumes sole and complete responsibility for the TPMS and vehicle function if the OEM equipment wheels and tires are not used. Failure to ensure that the TPMS system is functioning properly can result in severe injury or death.

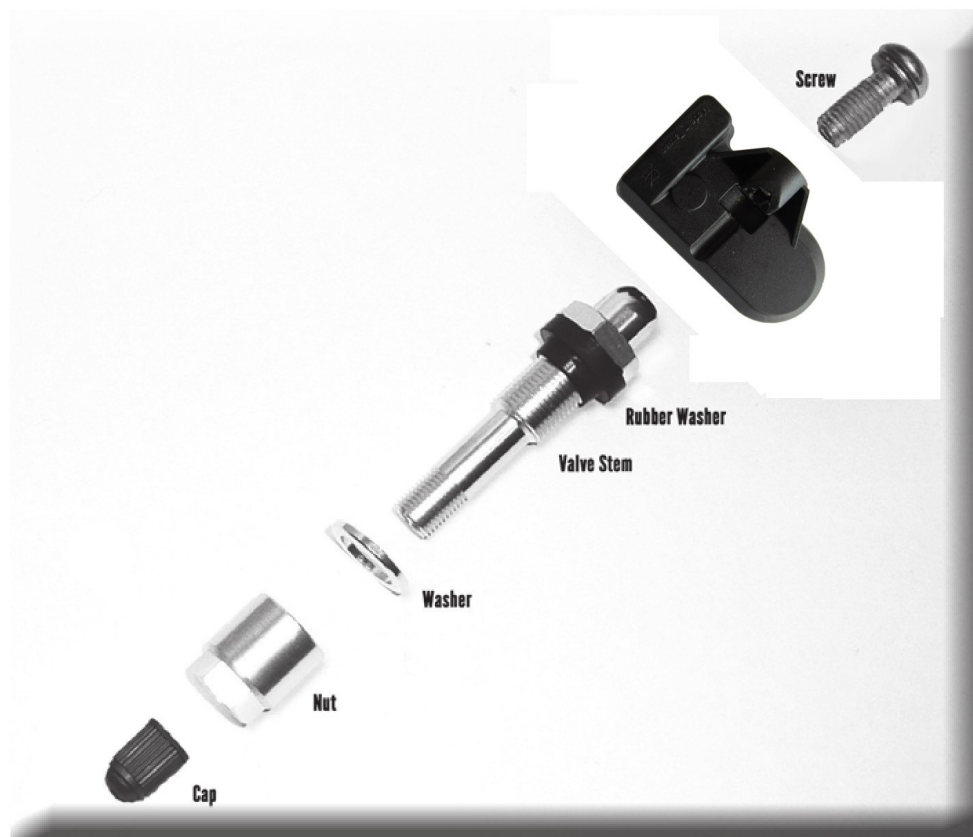

If the sensor is removed or replaced, it is MANDATORY to replace the screw and rubber washer to ensure proper sealing.

See assembly instructions on reverse side

Safe Driving With **ORO** TPMS