




RW-T52
Thank you for purchasing a Rosewill Earphones.
Please read the instruction manual before use and retain for future reference.

PRODUCT OVERVIEW

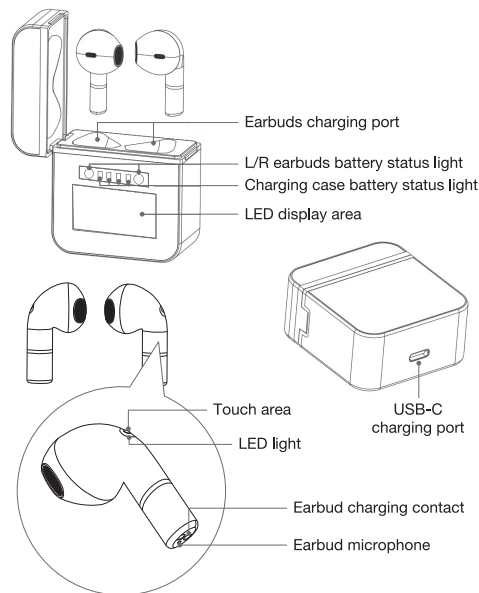

1

PACKAGE CONTENTS

- Earbuds x 2
- Charging Cable x 1
- Charging Case x 1
- User Manual x 1

SPECIFICATIONS

Product Name: True Wireless Stereo Bluetooth Earphones

Model: RW-T52

Bluetooth Version: 5.0

Effective Distance: No barrier 10m

Bluetooth Protocol: SBC, A2DP, AAC, APTX

Single Earbud Capacity: 35 mAh

Charging Case Capacity: 500 mAh

Charging Time: 1-2 hours

Service Time: Making phone call and playing music about 4 hours

Standby Time: 72 hours

Power Supply: 5V / 1A

Frequency Response: 20 Hz-20 KHz

2

HOW TO CHARGE

1. The battery is low when you hear a voice prompt or the LED shows a blinking light; please charge it.
2. For charging, please connect the charging case to a reliable power source (5V/1A). While charging, the LED indicator on the charging case will be lit.
3. The standard charging time is about 1-2 hours. When charging completes, the LED indicator will turn off.
4. When using the charging case to charge the earbuds, just place the earbuds inside the case. The earbuds will power off automatically.
5. The charging case can charge the earbuds for about 6 times, depending on your usage.

Notice:

Please keep your USB port dry and clean. Please do not charge your device right after exercising in prevention of electricity leakage caused by remaining sweat.

HOW TO PAIR THE EARPHONES

1. Due to the automatic IC control of the charging case, open the charging case, the earbuds will turn on and pair, close the charging case, the earbuds will turn off and charge. When the earbuds are turned on, hit the button 4 times within 1 second and the earbuds will be shut down.
2. If the earbuds stay unpaired for 5 minutes, it will power off automatically.

3

OPERATION

Basic Operation

FUNCTION	OPERATION
Power-on	Startup automatically when opening charging case (long press touch area for 3 seconds, voice prompt: power-on).
Power-off	Power shutdown when putting the earbuds into charging case (hit touch area 4 times in 1 second, voice prompt: power-off).
Connected	Taking out the earbuds, wait for L and R earbud to pair (pairing successful when only one earbud flashes). Search "RW-T52" and connect it, voice prompt: connected.
Reconnect	Automatically reconnect to last connected device when taking out the earbuds.

Music Function

FUNCTION	OPERATION
Play/Pause	Press 1 time on L/R earbud
Previous Song	Long press L for 2 seconds
Next Song	Long press R for 2 seconds
Volume up	Press 2 times on the R
Volume down	Press 2 times on the L
Siri Activate	Long press L/R for 3 seconds

4

OPERATION

Phone Call Function

FUNCTION	OPERATION
Answer/End	Press 1 time on L/R earbud
Reject	Long press L/R for 2 seconds
Volume up	Press 2 times on the R
Volume down	Press 2 times on the L

Notice:

"Play/Pause, Previous/Next" function may be disabled due to the different settings of cell phones or other Bluetooth devices. Please operate the earphones under the instruction of your target device.

5

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Can't turn on	Not enough battery	Fully charge before use
Can't detect/find the device	Out of effective range or not in pairing mode	Bring device closer and reconnect or try again by following the pairing process
No sound during music playing	Bluetooth connection failed or not in Bluetooth phone call mode	Reconnect or switch to Bluetooth phone call mode
No sound during phone call		
Can't pair to phone	Pairing process failed	Try again by following the pairing process

6

STORAGE AND MAINTENANCE

1. Storage:
Make sure earphones are fully charged before storage. Store your product in a cool and dry place.
2. Maintenance:
 - a. The recommended working temperature range is 0-45°C (32-113°F); overly hot/cold/humid environment may badly reduce the product battery life and harm the overall performance.
 - b. Avoid using the product during a lightning storm.
 - c. If you do not use it for a long time, please be sure to charge it within 2 months to prevent damage of excessive power consumption of lithium batteries.
 - d. Clean the product with a piece of dry cloth.
 - e. If remaining water/sweat is found inside the USB port, simply dry it with a soft cloth.
 - f. Keep the product away from sharp edges/points.
 - g. Do not charge the earphones overnight.

7

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,
and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: W6R-EB-T52



Technical Support Information: techsupport@rosewill.com 1-800-575-9885
Please register your product at www.rosewill.com for complete warranty information and support for your product.



RW-T52_A