 


1 ACCESSORIES LIST

- User Manual
- Quick Setup Guide
- Screws (M4 × 12) × 1
- Batteries AAA × 2

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.

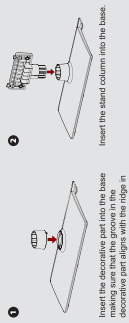


Secure the stand column to the base with 1 screw (M4×12) provided.

NOTE

Product images is only for reference, actual product may vary in appearance. Gently place your TV face down on a soft, cushioned surface to prevent damage to the TV or scaling to the screen.

3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket(not provided), you should first remove the stand if it is pre-attached.

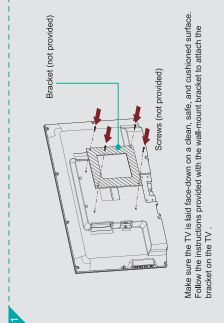

Make sure the TV is kept face down on a soft, safe, and cushioned surface. Follow the instructions provided with the wall-mount bracket to attach the bracket on the TV.

WARNING

1. If you are not sure of your ability to complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to misreading or incorrect assembly.
2. Be sure to use the provided spacers between the TV and the bracket when attaching the mount.


Wall-mount bracket pattern VESA (mm)	100 × 100	M4
TV's rear cover		
TV's rear cover		

3. Follow instructions provided with the wall bracket.

4. If you are not sure of your ability to complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to misreading or incorrect assembly.

5. Be sure to use the provided spacers between the TV and the bracket when attaching the mount.

 4 BUTTONS AND CONNECTORS

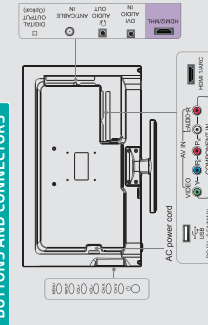


Item	Description
MENU	Display the on-screen menu to setup your TV's features.
INPUT	Select the different input signal sources.
VOL+/V-	Adjust the volume.
CH+/V-	Select the channel.
(Power button)	Turn on the TV or put the TV in standby mode.
ANT/CABLE	Caution: The TV continues to receive power even in standby mode. Connect an antenna or cable TV to this jack.
HDMI	HDMI (High Definition Multimedia Interface) provides an uncompressed, digital audio/video interface between this TV and any digital device, such as a set-top box, Blu-ray disc player, or AV receiver. All HDMI cables, the DVI audio should be connected to DVI AUDIO IN.
COMPONENT IN	Connect to a DVD player, Digital Set-Top Box, or other AV devices. Connect to the TV's audio and video and audio (L/R) output jacks on external video devices.
AV IN	Connect to a PC or other devices with a 3.5mm TRS jack.
DVI AUDIO IN	Connect headphones or speaker system using a 3.5mm TRS jack. (119V stereo mini to L/R phone not provided).
DIGITAL OUTPUT	Connect an audio amplifier to this jack.
USB	Port for Digital Media Player and for software update.

5 REMOTE CONTROL

NOTES

 The full remote is not available for this model.

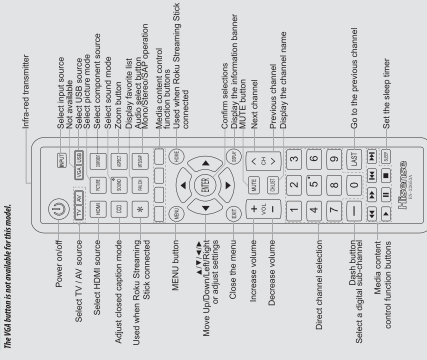

CHANGE THE BATTERIES

1. Slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA-size batteries. Make sure to match the (+) and (-) ends of the batteries with the compartment's polarity.
3. Close the battery compartment cover.



6 TV CONNECTORS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

 
ANT

Connect an outdoor VHF/UHF antenna.



USB

Connect a USB device for browsing photos and movies. The unit recognizes only a USB Memory Stick.



8 TURNING THE TV ON FOR THE FIRST TIME

Menu Language

Set the menu language to English, French, or Spanish.



 
Picture Mode

Set the picture mode to Standard, Movie, or Game.




Time Setting

Set the time zone to the correct time zone according to your location.



TV Source

 Set the TV source to the correct input source according to the connection.



Press [▲▼] to select your TV Source: Antenna or Cable. If you press [EXIT] to exit the setting, a message appears: "Please Run Channel Auto Scan". You should scan channels from the menu of Channels.

For energy saving, we kindly suggest you select the Home Mode.

If you select Retail Mode, a message appears: "Are you sure to set the TV to Retail Mode? Yes/No". If you select "Yes", the TV will be set to Retail Mode. If you select "No", the TV will be set to Home Mode.

If you are using a cable or satellite box and you have connected to the TV using a Coaxial cable, you should select the cable option. If you are using a cable or satellite box connected to an AV Component or HDMI, you don't need to scan for channels.

9 HELP TOPICS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture	• Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. • Attempt to power on unit using the power button on both the TV and the Remote. • Check the volume settings. • Check Mute mode is not "ON".
Picture is normal, but no sound	• Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
I have connected an external source to my TV and get no picture and/or sound.	• If black and white picture first unplug TV from AC outlet and replug after 60 seconds. • Check Color Setting if picture is black and white.
Sound but no picture or black and white picture.	• An electrical appliance may be affecting TV set. Turn off any appliances. If interference goes away, move appliances further away from TV. • Insert the power plug of the TV set into another power outlet.
Sound and picture distorted or appear wavy.	• If using an external antenna, check the direction, position and connection of the antenna. • Adjust the direction of your antenna or reset of the tune the channel.
Sound and picture is blurry or cut out momentarily.	• After switching to Cable, please auto program the channels. The TV will "remember" all the channels then the TV will allow you to surf the channels with [CH/V] buttons.
I set the Channel to Cable? They work with the Air setting?	• Confirm that TV still has power and is operational. • Check the power plug of the TV set into another power outlet. • Clean the front of the remote control (LED window). • If using a universal remote, be sure to select the TV mode on the remote. • Remove and reinstall the batteries, correctly to reset the remote or install new batteries. • Press the Power button to turn on the TV. With a universal remote, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while the TV is on. If the camera screen shows a black screen, the remote is not working. If no light observed, the remote controls is not working. You need to repair or replace the remote control.

Remote control does not work.

Check the following items:

- Confirm that TV still has power and is operational.
- Check the power plug of the TV set into another power outlet.
- Clean the front of the remote control (LED window).
- If using a universal remote, be sure to select the TV mode on the remote.
- Remove and reinstall the batteries, correctly to reset the remote or install new batteries.
- Press the Power button to turn on the TV. With a universal remote, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while the TV is on. If the camera screen shows a black screen, the remote is not working. If no light observed, the remote controls is not working. You need to repair or replace the remote control.

TIP: If you have a digital camera / camera phone, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while the TV is on. If the camera screen shows a black screen, the remote is not working. If no light observed, the remote controls is not working. You need to repair or replace the remote control.