

- User Manual
- Screw (M5 × 12) × 8
- Quick
- Battery

 
- ## 2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.

Follow the illustrations below to complete the installation steps.



- Carefully place your TV on a soft, cushioned surface to prevent damage to the screen.
- Align the front of the stand with the front of the base, then insert the stand column into the base.

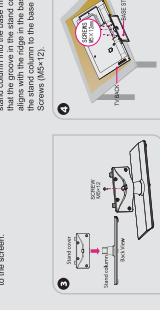

- Align the stand cover with the stand column, then secure the stand cover to the stand column with 1 Screw (M5×12). Make sure that the bottom of the stand cover is flush against the top of the stand column.
- Align the BASE STAND with the holes on the bottom of TV BASE, then secure the BASE STAND to the TV BASE with 2 Screws (M5×12). Tighten the screws tightly.

Product image is only for reference, actual product may vary in appearance. Carefully place your TV facedown on a soft, cushioned surface to prevent damage to the TV or scratching to the screen.

If you want to attach the TV to a wall-mount bracket (no provided), you should first remove the stand if it is pre-attached.


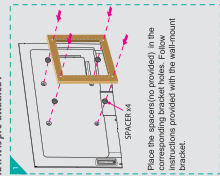


Diagram illustrating the back of the HP LaserJet 1020 printer, showing the internal layout and connection points. The diagram includes labels for the AC power cord, DC power supply, and various internal components like the fuser, toner cartridge, and paper tray. A legend at the bottom right identifies the symbols used for the components.

Legend:

- VIDEO - AV - AUDIO
- COMPONENT IN
- DC IN - SERIAL
- USB

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

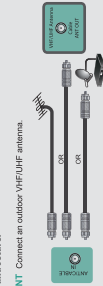

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips.

Symptoms	Possible Solutions
No sound or picture	- Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. - Attempt to power on unit using the power button on both the TV and the Remote.
Picture is normal, but no sound	- Check the volume settings. - Check if Mute mode is set "on".
I have connected an external device to the TV, but I can't see the picture and/or sound.	- Check for the correct output connection on the external source and for the correct input connection on the TV. - Make sure you have made the correct selection for the input mode for the incoming signal.
Sound but no picture or black and white picture.	- Check black and white picture fix setting TV from Auto-cable and repeating after 60 seconds. - Check Color Setting picture is black and white.
Sound and picture distorted or appear wavy.	- An electrical appliances may be affecting TV set. Turn off any appliances, if interference goes away, more appliances farther away from TV set. - Insert the power plug of the TV set into another power outlet.
Sound and picture is blurry or set out momentarily.	- If using an external input, check the direction, position and connection of the antenna. - Adjust the direction of your antenna and reset or fix the cable channel.
[Cable TV don't work when I set the Channel to Cable? They work with the air setting?]	When switching to Cable, please also program the channels. The TV will "remember" all the channels from the TV set allow you to surf the channels with [CH/V] buttons.


Remote control does not work.

TIP: If you have a digital camera / camera phone, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while pressing a button on the remote control; you should see flashing light on the screen. If there is no light observed, the remote control is not working. You need to recalibrate the remote control.

Model Name	50X200
Without Stand	44.4x26.3x3.1 inches (1129x667x78.9 mm)
With Stand	44.4x26.8x11 inches (1129x275x282 mm)
Weight	33.1 lbs (15 kg) 39.7 lbs (18 kg)
Active Screen Size (Diagonal)	50 inches
Video resolution	1080p @ 60Hz
Audio power	50W x 2
Power supply	120 V ~ 60 Hz
Receiving systems	NTSC
Digital	ATSC, QAM
Receiving channels	14-69 (QAM) ~ 1-25 Digital Terrestrial Broadcast (8VSB), 2 ~ 135 Digital cable (64QAM QAM) ~ 1 ~ 135
Tuner type	Frequency synthesized
Environmental conditions	Humidity: 20% ~ 80% RH Temperature: 50°C ~ 35°C
Component input	480i / 480p / 480P / 50i / 270i / 60i / 1080i / 60i / 1080P/60Hz
HDMI input	1080i / 60Hz / 480i / 480P / 270i / 60Hz / 1080P / 60Hz

 NOTES

The VGA button is not available for this model.

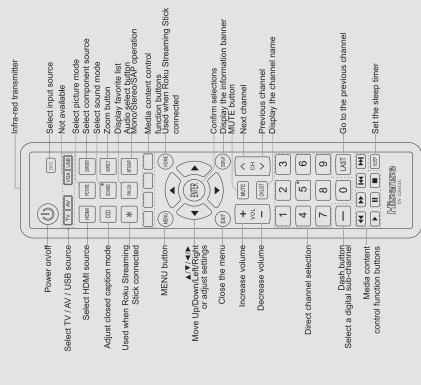

► **CHANGE THE BATTERIES**


1. Slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.



➔ **USB** Connect a USB device for browsing photos and movies.



HDMI / COMP / AV Connect an HDMI cable or Comp/AV Adapter from an external A/V equipment.

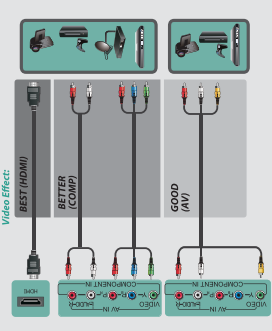

➔ **DIGITAL OUTPUT** Connect an optical cable from an external digital audio system.



7 SPECIFICATIONS

Model Name	50X200
Without Stand	44.4x26.3x3.1 inches (1129x667x78.9 mm)
With Stand	44.4x26.8x11 inches (1129x275x282 mm)
Weight	33.1 lbs (15 kg) 39.7 lbs (18 kg)
Active Screen Size (Diagonal)	50 inches
Resolution	1920 x 1080
Active Power	5.9A @ 110V 5.9A @ 220V
Power supply	120 V ~ 60 Hz
Receiving systems	NTSC
Digital	ATSC, QAM
Receiving channels	14-69 (CH 2 ~ 125) Digital Terrestrial Broadcast (8VSB), 2 ~ 135 Digital cable (64QAM), 1 ~ 135
Tuner type	Frequency synthesized
Environmental conditions	Humidity: 20% ~ 80% RH Ambient pressure: 98 kPa ~ 101 kPa
Component Input	480i / 480p / 480P / 50i / 27.0 / 60 Hz, 1080i / 1080p / 50i / 27.0 / 60 Hz, 1080P50Hz
HDMI Input	1080i / 1080p / 480i / 480P / 27.0 / 60 Hz, 1080P