

QUICK START GUIDE

- **User Manual**
- **Battery x 2**
- **Quick Start Guide**
- **Screw (M4 x 12mm) x 4**

CAUTION: Please check foam for accessories



CAUTION: Please check foam for accessories



If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is pre-attached. Place the spacers (not provided) in the corresponding bracket holes. Follow instructions provided with the wall-mount bracket.



Wall-Mount hole pattern VESA (mm)	400 × 200 (for 50") 400 × 400 (for 55")
Wall-Mount screw size (mm)	M6

 
 
 
 
► **ANT** Connect an outdoor VHF/UHF antenna.

[illegible]

► **ANT** Connect an outdoor VHF/UHF antenna.



If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is

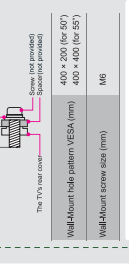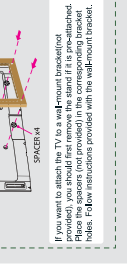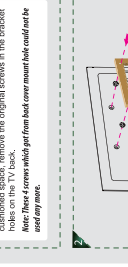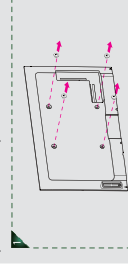

<i>Model Name</i>	<i>SS16SG</i>	<i>SS16SG</i>
Without Stand	44 ± 2.5 × 24 ± 2 inches (1117.7 ± 63.5 × 609.6 ± 50.8 mm)	48.1 ± 2.5 × 24.1 inches (1221.3 ± 63.5 × 611.3 ± 50.8 mm)
With Stand	111.77 ± 6.35 inches (2838.6 ± 161.3 mm)	135.7 ± 6.35 inches (3447.8 ± 161.3 mm)
Without Stand	1118 (686 ± 215 mm)	1258 ± 217 mm
With Stand	35.3 bar (16.5kg)	46.3 bar (21kg)
With Stand	36.4 bar (16.5kg)	47.4 bar (21.5kg)
LED Panel Minimum size	50inches	50inches
Screen resolution	1620 × 1080	1920 × 1080
Audio power	10 W + 10 W	15 W + 15 W
Power supply	120 V ~ 60 Hz	
NTSC		
Analog		
Receiving systems	ATSC / QAM	
Receiving channels	VHF: 2-13, UHF: 14-69 CATV: 1 ~ 125 Digital Terrestrial Broadcast (8VSB) 2 ~ 69 Digital cable (4QPSK QAM): 1 ~ 135	
Tuner type	Frequency synthesized	
Environmental conditions	Temperature: 41°F ~ 55°F (5°C ~ 35°C) Humidity: 10% ~ 90% RH Atmospheric pressure: 86 kPa ~ 106 kPa	
Component Input	480i (60 Hz) 480p (60 Hz) 720i (60 Hz) 1080i (60 Hz) 1080p (60 Hz)	VGA (640x480) 480p (60 Hz) 720p (60 Hz) 1080p (60 Hz)
VGA Input	640x480 (60 Hz) 800x600 (60 Hz) 1024x768 (60 Hz)	VGA (640x480) 800x600 (60 Hz) 1024x768 (60 Hz)
HDMI Input	720p (60 Hz) 1080p (60 Hz)	720p (60 Hz) 1080p (60 Hz)

No sound or picture

No sound or picture

POSSIBLE SOLUTIONS

- Check the power cord is plugged into an AC outlet and that the electrical connection is secure.
- Check if you have pressed **POWER** button on the TV or **POWER** button on the remote control.
- Check to see if LED on TV illuminated, power to TV is OK.
- Check the volume settings.
- Check if headphones are connected.
- Check if the audio output is set to AV receiver (if to be sure the AVR powered on and set to the proper inputs).
- Plug any cables available into top dock, check if audio is set to On.
- Check if the correct output connection on the external source is to the correct input connection on the TV.
- Make sure the correct input selection for the input mode for the incoming signal.
- Check network physical connection, make sure connection is service.
- Make sure configuration is correct according to your network service provider.
- Check network connection is correct, both physically configuration.

Connect Netflix fail.

Connect Netflix fail.

- After connecting the TV to the Internet, press the [Home] button on the remote to access the applications.
- Caution: Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.

Week 4 (4/1)	Week 4 (4/1)	Week 4 (4/1)	Week 4 (4/1)
Current in the Forest How do you connect to a network? • Networks • IP • OSI	Project Manager patterns Project Models Project Models How do you connect to a network?	Best of 4/1 How do you connect to a network? • Networks • IP • OSI	Best of 4/1 How do you connect to a network? • Networks • IP • OSI

MENU | OPERATIONS

Language setting	• Please press [▲/▼] button to select your language: English, Spanish or French.
-------------------------	---

- | | |
|-----------------------------------|--|
| Bluetooth remote pairing | <ul style="list-style-type: none"> Press and hold source (RED) and connect simultaneously until the Red LED turns on and you hear a voice prompt that pairing was successful. Press and hold source (RED) and connect simultaneously until the Red LED turns on and you hear a voice prompt that pairing was successful. |
| HomeKit setup | <ul style="list-style-type: none"> HomeKit setup will not be available. |
| Connect to the Internet | <ul style="list-style-type: none"> Connecting to the Internet via Ethernet cable or WiFi. |
| DNA settings | <ul style="list-style-type: none"> Connecting to the DNA device. By checking this box, you will connect to the DNA device and share your good time with family. |
| Select usage patterns | <ul style="list-style-type: none"> Select your most Satisfying Home Mode or Real Mode. Home Mode default settings are recommended for in-home use. ENERGY STAR qualified Real Mode is intended for in-store display and reset button settings at power on. |
| Google account | <ul style="list-style-type: none"> Signing in with your Google account. |
| Help make Google TV better | <ul style="list-style-type: none"> Check the TV to send the usage statistics and crash reports to Google automatically. |
| Enter ZIP code | <ul style="list-style-type: none"> Enter ZIP code so that you receive accurate programming information. |
| Set up TV service | <ul style="list-style-type: none"> Select the video input you wish to use to connect your TV service to your TV. |
| Set up TV receiver | <ul style="list-style-type: none"> Select your Audio amplifier manufacturer. To control your receiver, connect the IR remote. |
| TV input | <ul style="list-style-type: none"> The input channels are recorded here. |