

K20D Series QUICK SETUP GUIDE

1 ACCESSORIES LIST

- User Manual
- Quick Start Guide
- Remote Control
- Power Cord

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.



Align column of the stand column with the groove of the base, then insert the stand column into the base making sure that the groove in the stand column aligns with the ridge in the base.

 


To install the base stand, slide in the base stand until the screw holes are aligned.

NOTE Product image is only for reference, actual product may vary in appearance.


3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket(no provided), you should

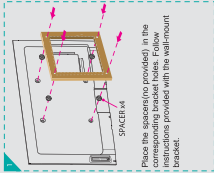

5 REMOTE CONTROL

 NOTES

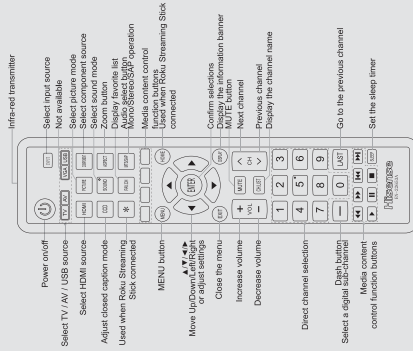

► **CHANGE THE BATTERIES**

1. Slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.

 


6 TV CONNECTORS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.




4 BUTTONS AND CONNECTORS

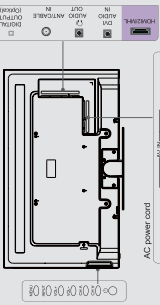

Item	Description
------	-------------


MENU	Display the on-screen menu to select your TV's features.
INPUT	Select the different input signal sources.
VOL +/-	Adjust the volume.
CH +/-	Select the channel.
() (Power button)	Turn on or off the TV or put the TV in a standby mode. Unplug the power cord to disconnect power.
ANTICABLE	Connect an antenna or cable TV to this jack. HDMI (High-Definition Multimedia Interface) provides an uncompressed, digital audio-video interface between this TV and other HDMI-compatible devices. When connected to an HDMI receiver, all HDMI inputs can support DVI video by using a DVI-to-HDMI cable. The audio should be connected to DVI AUDIO IN.
HDMI	Connect to a DVI receiver, Digital Signage, or other AV devices (such as a Blu-ray Disc player, digital camcorder, or digital video recorder).
COMPONENT IN	Connect to the composite video (Y) and audio (L/R) output jacks on external video devices.
AV IN	Connect to a PC or other devices with a 3.5mm TRS jack.
DVI AUDIO IN	Connect headphones or a audio signal source using a 3.5mm TRS jack.
ⓂAUDIO OUT	Connect headphones or a audio signal source using a 3.5mm TRS jack (L/R stereo mini to L/R mono-provided).
DIGITAL OUTPUT	Connect an audio amplifier to the software update.
USB	Port for Digital Media Player and for software update.

 8 TURNING THE TV ON FOR THE FIRST TIME



Set menu language to English, French, or Español

 Connect your TV's power cord to a power outlet, then press power. The initial setup screen opens. Press **[▲]** **[▼]** button to



Home mode default settings are recommended for all home theater systems. For more information, see the manual or call 1-800-4-A-M-C. For more information, see the manual or call 1-800-4-A-M-C.

Press **ENTER** to select your Picture Mode: Home Mode or Retail Mode. Press **ENTER** button to confirm.

If you select Retail Mode, a message appears: "Are you sure you want retail mode?" Select "Yes" to continue, or select "No" to change your selection.

For energy saving, we kindly suggest you select the Home Mode.

Note: If you are using a cable or satellite box and you have connected it to the TV using a Coaxial cable, you should select the cable option. Be sure the cable or satellite box is turned on before starting the channel scan. If you use a cable or satellite box connected to A/V, Component or HDMI, you don't need to scan for channels.

9 | HELP TOPICS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips.

SYMPTOMS	POSSIBLE SOLUTIONS
• The system is slow to respond. • The system is crashing or freezing. • The system is displaying error messages. • The system is not working at all.	• Check the system requirements and ensure the system is up to date. • Restart the system. • Check the system logs for error messages. • Contact the system administrator.

No sound or picture	• Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. • Attempt to power up unit using the power button on both the TV and the Remote. • Check if volume settings. • Check if Mute mode is set "on".
Picture is normal, but no sound	
I have connected an external device and can't get no picture and/or sound	• Check for the correct cable connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
Sound but no picture or black and white picture.	• Check Color Setting of picture is black and repeat after 60 seconds. • Check Color Setting of picture is black and repeat after 60 seconds.
Sound and picture distorted or appear wavy.	• An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance further away from TV set.
Sound and picture is blurry or does not momentarily.	• Insert the power plug of the TV set into another power outlet. • If using an external antenna, check the direction, position and connection of the antenna. • Adjust the direction of your receiver of short or fine tune the channel.
[CH+V] don't work when I set the Channel to Cable? They work with the Air setting!	All references to Cable, please auto program the channels. The TV will "remember" all the channels then the TV will allow you to surf the channels with [CH/V] buttons.

Remote control does not work.

Remote control does not work.

- Remove and reinstall the batteries correctly to reset the remote or install new batteries.
- Press the **Power** button to turn on the TV. With a universal remote if you have reset or changed the batteries you will need to reprogram the remote for the other units.
- Check if there is obstruction between the remote control and the TV.

TIP: If you have a digital camera / camera phone, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while pressing a button on the remote control, you should see flashing light on the screen. If there is no light observed, the remote control is not working. You need to repair or replace the remote control.

7 SPECIFICATIONS

[illegible]

	Without Stand
--	---------------