

WARNING

Chemical Burn Hazard
Keep Battery away from Children

Warning :

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Disposal of batteries :

Do not put batteries in the trash, take them to battery recycling location or contact your community for disposal instruction.

Keep away from children and even used cells may cause injury.

Aquatic AV
282 Kinney Drive
San Jose, CA 95112, USA

E-mail: info@aquaticav.com
US & Canada: 877 579 2782
International: 408 559 1668
Fax: +1 408 559 0125

www.aquaticav.com

6500-819 - DIGITAL MEDIA LOCKER™ for Bluetooth, USB, iPhone, iPod, MP3 devices and FM Radio

OWNERS MANUAL



! PLEASE READ THIS INSTRUCTION MANUAL BEFORE
INSTALLATION AND OPERATION !

1 Getting Started.....	3
1.1 Contents.....	3
1.2 Connections.....	3
1.3 12-pin Harness Connection.....	4
1.4 Mounting the Digital Media Locker.....	4
1.5 Remote Control Battery Install.....	5
1.6 Power On.....	5
1.7 Remote Control Synchronizing.....	5
2 Location of Controls.....	6
2.1 Digital Media Locker Controls.....	6
2.2 Remote Control.....	8
3 Listening to Devices.....	9
3.1 Listening via USB.....	9
3.1.2 Device Charging.....	9
3.1.3 iPhone & iPod Compatible Models.....	10
3.2 Listening via Bluetooth.....	10
3.2.1 Pair with Bluetooth Device.....	10
3.2.2 Listening via Bluetooth Device.....	10
3.3 Listening via Auxiliary Input.....	10
4 Listening to FM Radio.....	11
4.1 Enter FM Radio Mode.....	11
4.2 Scan or Seek FM Radio Channels.....	11
4.3 Saving Radio Channel to Memory.....	11
4.4 Listening to Saved Radio Memory.....	11
4.5 Switch between US and European FM Modes.....	11
5 Additional Features.....	12
5.1 External 12V Trigger.....	12
6 Specifications & Dimensions.....	13
6.1 Specifications.....	13
6.2 Dimensions.....	13
7 Warranty Information.....	14

FCC ID:

MADE IN CHINA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Patent: 8,578,081

Digital Media Locker is a trademark of Aquatic AV Inc. iPhone, iPod, iPod touch and iPod nano are trademarks of Apple Inc., registered in the U.S. and other countries.

Made for iPod and Made for iPhone mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Product design and specification subject to change without notice. E&OE.

Doc V1.5



Aquatic AV offers a limited warranty of our products on the following terms:

Length of warranty
2 years on audio systems, electronics, speakers, and accessories (receipt required).

Coverage
This warranty covers only the original purchaser of a Aquatic AV product purchased from an authorized Aquatic AV dealer in the United States. In order to receive service, the purchaser must provide Aquatic AV with a copy of the receipt stating the customer name, dealer name, product purchased and date of purchase.

Defective products
Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Aquatic AV's discretion.

What is not covered
Damage caused by accident, abuse, improper operations, theft. Any cost or expense related to the removal or reinstallation of product. Service performed by anyone other than an authorized Aquatic AV service center. Any product with the serial number or tamper labels defaced, altered, or removed. Subsequent damage to other components. Any product not purchased from an authorized Aquatic AV dealer.

Limit on implied warranties
Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Aquatic AV any other liability in connection with the sale of the product.

 
How to obtain service
You must obtain a return material authorization number (RMA) to return any product to Aquatic AV. You are responsible for shipping charges of returned products to Aquatic AV.

Please record the model and serial number[s] of your equipment in the space provided below as your permanent record and will assist us with your factory warranty coverage. These numbers can be found on the rear of the Digital Media Locker.

Model number[s]:	Serial number[s]:

- 1.1 Contents
- 6500-819 Digital Media Locker™
 - 2-Way RF Waterproof Remote Control
 - Jack Cable (3.5mm Male to 3.5mm Male)
 - Wiring Harness (AQ-UNH-2)
 - Rear Mounting Bracket
 - Owner's Manual


- 1.2 Connections
1. 12-pin Watertight Harness
The 12-pin harness supplies power and ground connections to the Digital Media Locker and four (4) speaker channel output connections from the Digital Media Locker.
- ⚠ Do not cut or modify the 12-pin harness on the Locker side or warranty will be void.
2. FM Radio Antenna Jack
Connect antenna (AQ-ANT-1 sold separately) to female antenna receptacle. For best FM performance make sure the antenna is extended to the highest achievable position.
3. Auxiliary Outputs
Allows external amplifiers to be connected to power additional speakers.
4. 12V DC External Trigger
Allows for an external light or relay to be triggered (350mA max load)

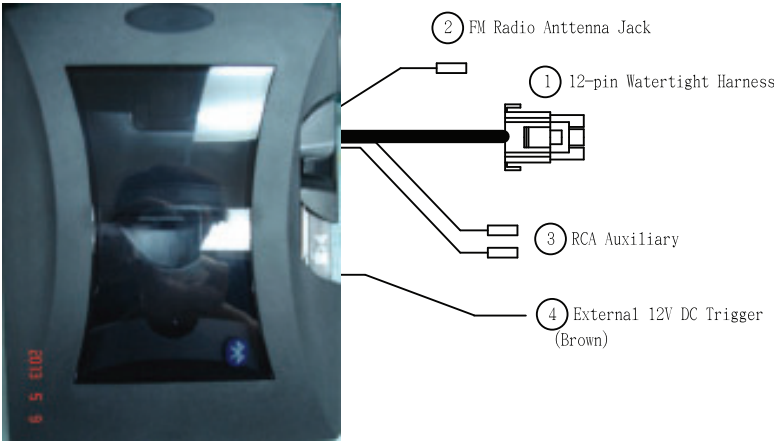

1.3 12-pin Harness Connection



The 6500-819 includes the universal harness AQ-UNH-2 in order to connect the dock to power and speakers.

 All open wire connections should be soldered and protected against water and dust for best long term performance.

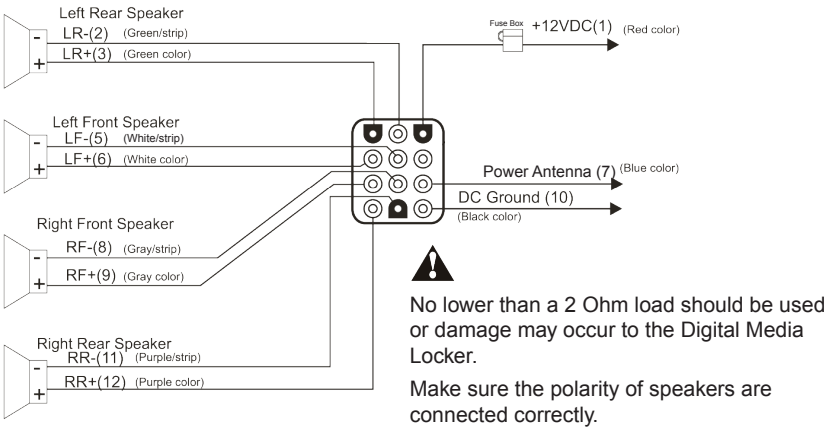

1.4 Mounting the Digital Media Locker

  - 1. A mounting template is included. Aquatic AV recommends using the 'measure twice, cut once' method!
- 2. Once the mounting hole is complete, make sure the outside surface is clean and clear of debris. The Digital Media Locker has an external water/dust proof gasket, but this requires a clean and flat surface for best performance.
- 3. The Digital Media Locker has six (6) front screws. Drive the screws using a screw driver. During final mounting apply equal pressure to all points for the best water/dust outer seal performance. Make sure screws are snug and do not over tighten.
- 4. Review all outside surfaces of the Digital Media Locker to ensure proper water/dust seal. This is important for long term environmental protection performance for your digital media device.

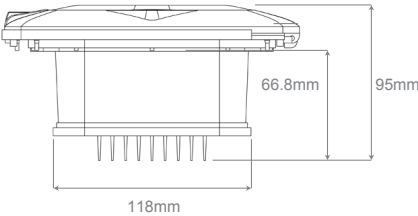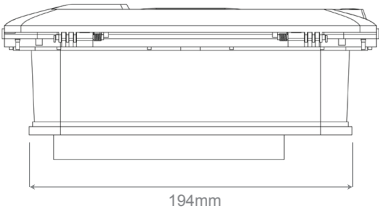

6.1 Specifications

Media	
Supported media.....	Bluetooth(A2DP and iAP)/USB/iPod/iPhone/MP3/FM
Supported media max. dimensions.....	107 x 184mm (WxH)
Device charging.....	via USB
Inputs	
USB.....	USB 3.0
Auxiliary.....	1x 3.5mm Stereo Jack Socket,
Outputs	
Pre-Out.....	1x Stereo pair RCA (4V)
FM Radio	
FM pre-sets.....	3
US/Euro frequencies.....	Yes
Power	
Output voltage @ 2 Ohm.....	4x 72W
Output voltage @ 4 Ohm.....	4x 45W
Operation voltage.....	9.6V - 14.4V DC
Max current draw.....	7A
Standby current draw.....	6mA
Multi-Environment Certifications	
Waterproof / Dustproof.....	Yes IP65 (Remote Control rated IP66)
Conformal PCB coating.....	Yes
UV protection.....	500 hours stable, ASTM D4329 compliant
Salt/Fog protection.....	500 hours stable, ASTM B117 compliant
Stainless Steel mountings.....	Yes

5.1 External 12V Trigger

Aquatic AV understands the need for more flexible remote applications. With the Digital Media Locker Aquatic AV has provided an independent 12V 'accessory' trigger, activated from the RF wireless remote. This could activate any 12V based device like 12V lights or 12V motors.

In any operational mode, press the  (12V TRIGGER) key to activate. Press again to deactivate.

 Aquatic AV strongly recommend you speak to our technical service staff or your local Aquatic AV dealer if you are considering using this feature.

 Load on External Trigger should not exceed 350mA.

1.5 Remote Control Battery Install

Remove the RF wireless remote control from the Digital Media Locker. Unscrew the water proof cap on the back of the remote control. Place the CR-2450 battery in the RF remote control and replace the water/dust proof cap.

When the battery is installed, the remote control LCD should be solid and bright without any flickering.

1.6 Power On

Press the  on/off button.

Red Light: Power to the docking station is ON, but the unit is in standby mode.

Blue Light: The unit is powered ON and looking for an audio source.

For applications that require low current draw and where battery drain may occur, the power button must be turned OFF inside the unit. When the power button is in the OFF position the red LED will not be lit.

For applications where a 12V battery is not used, such as in a Spa, the power button can be left ON and the remote control or door controls can then be used to power on/off accordingly.

1.7 Remote Control Synchronizing (6560-300 sold separately)

1. Turn the Digital Media Locker to off mode with the power button inside the door. The LED should not be illuminated.
2. Press the red  (POWER) button on the remote.
3. Press and hold the  (MODE) button until the LCD reads PAIR.
4. Continue to press and hold the  (MODE) button during step 5 below.
5. Turn the docking station to standby mode (within 10 seconds) with the on/off button inside door (the red LED will illuminate and then turn blue).
6. The remote's LCD should read WELCOME or show a mode position such as RADIO, USB, BT or AUX IN.

For any additional remote controls, you will also need to activate/synchronize those remote controls by following the steps above.

 
 If the pairing process is not effective, switch the locker off using the on/off button located inside the door of the dock. Unplug the 12-pin Harness on the back of the Locker for 3 minutes. Reattach the Harness and repeat steps 1-6 above.

 If the pairing process is not effective, check the battery voltage. If above 3V DC refer to section 1.5 above to make sure the battery is installed correctly. If battery voltage is below 3V DC replace the battery.

 If the LCD displays "NO LINK" in either mode, this means the remote is out of reception range. Move the remote closer to the Locker and try again.

 If you lose your remote control and buy another new remote control, please follow the above to start pairing before normal usage.

2.1 Digital Media Locker Controls

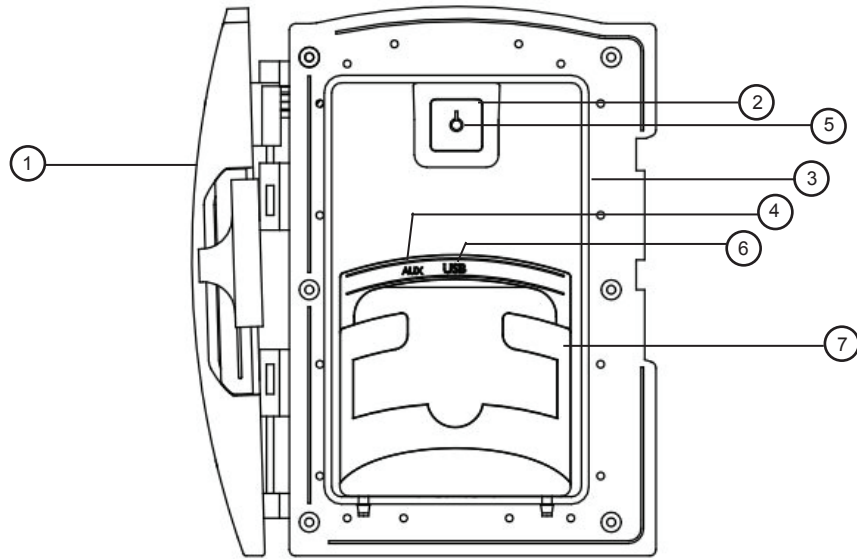

- | | |
|---------------------------------------|------------------|
| 1. Open/Close Latch & Protective Door | 6. USB Connector |
| 2. Power ON/OFF Button | 7. Phone Holder |
| 3. Water/Dust Protection Inner Gasket | |
| 4. 3.5mm Aux Input for MP3 Devices | |
| 5. Power ON/OFF LED | |

4.1 Enter FM Radio Mode

1. Press (MODE) on remote control to switch to FM radio mode.

i If this is the first time you listen to FM radio, the default frequency will be 87.5MHz, as shown on the remote LCD.

i FM radio is only available when you are in the FM Radio mode.

4.2 Scan or Seek FM Radio Channels

1. Press (FAST REWIND) or (FAST FORWARD) to seek another station.
2. Press and hold either (FAST REWIND) or (FAST FORWARD) for manual tuning back or forward.

i After using Seek mode the unit will automatically switch back into Scan mode after 20 seconds.

4.3 Saving Radio Channel to Memory

To save the current frequency into memory, press and hold (1), (2) or (3) for more than 2 seconds. The station will be stored into relevant button.

4.4 Listening to Saved Radio Memory

Press the (1), (2) or (3) preset button once to listen to the station stored in that button.

 
4.5 Switch between US and European FM Modes

1. Make sure dock and remote are turned on and in 'RADIO' mode.
2. Press the AUDIO button 6 time in a row.
3. The remote will display 'AREA USA' or 'AREA EUR' depending on which tuning mode is currently selected.
4. Use the (+) and (-) buttons to switch between US or European modes.
5. Press (PLAY/PAUSE) to select the desired tuning mode.
6. Once you switch modes it will default to the FM station stored in 'PRESET'.

i US mode will increase and decrease the FM frequency in steps of 0.1 MHz, e.g. 88.5, 88.6, 88.7 MHz. EUR mode will increase and decrease the FM frequency in steps of 0.05 MHz, e.g. 88.25, 88.30, 88.35 MHz.

i When in Seek mode and European FM tuning mode, all frequency steps will be visible.

3.1.3 iPhone & iPod Compatible Models

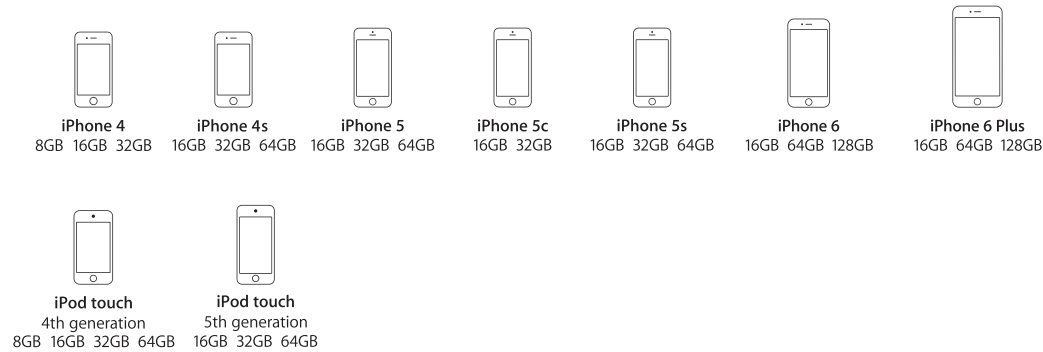

3.2 Listening via Bluetooth

IAP Bluetooth connectivity allows device information, such as song, playlist and album titles, to be streamed wirelessly and viewable on the remote control.

3.2.1 Pair with Bluetooth Device

1. Switch on your Bluetooth device.
2. Select 'BLUEWAVE' from the list of available devices to pair (password "0000").

i Only one Bluetooth device can be paired with the Digital Media Locker at any time.

3.2.2 Listening via Bluetooth Device

 
1. Bluetooth mode will be activated once a Bluetooth device is linked.
2. Play the song from device and the sound will play through the Digital Media Locker.
3. Press (PLAY/PAUSE) to play/pause the song.
4. Press / (FAST REWIND/FORWARD) buttons to play previous/next song file.
5. Track and volume can be controlled directly from your Bluetooth device, remote control or door controls.

3.3 Listening via Auxiliary Input

1. Power up the Digital Media Locker.
2. Connect your MP3 device to either the 3.5mm Jack input or RCA input
3. Secure the device with the anchor straps provided.
4. Secure the Digital Media Locker's protective door.
5. Press (MODE) on the remote control to select 'AUX IN' mode.

i Only one Auxiliary input (3.5mm Jack or RCA) can be used at any one time.

2.3 Remote Control

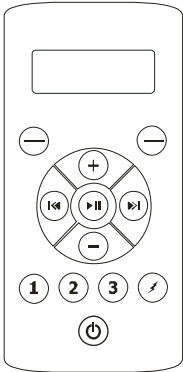

Buttons		Music Mode: iPhone, iPod, Bluetooth, USB & MP3	FM Radio Mode
Power		Press Once: Turns remote control on. Press Twice: Toggle from Operation mode to Standby mode or vice-versa.	
Mode		Press once: Change the source. Press and hold: No function	Press once: Change the source. Press and hold: No function
Audio		Press and hold: Audio Menu (BASS-TRE-BAL-FAD-EUR-DX-MONO-STEREO)	Press once: Audio Menu(BAS-TRE-BAL-FAD-EUR-DX-MONO-STEREO) Press and hold: Audio Menu (BASS-TRE-BAL-FAD-EUR-DX-MONO-STEREO)
Volume Up		Press once: Volume up Press and hold: Fast volume up	Press once: Volume up Press and hold: Fast volume up
Volume Down		Press once: Volume down Press and hold: Fast volume down	Press once: Volume down Press and hold: Fast volume down
Play / Pause		Press once: Play/Pause Press and hold: No function	Press once: Toggle mute Press and hold: No function
Fast Rewind		Press once: Previous track Press and hold: Fast rewind	Press once: Scan down Press and hold: Toggle manual seeking
Fast Forward		Press once: Next track Press and hold: Fast forward	Press once: Scan up Press and hold: Toggle manual seeking
1 / DIR -		Press once: Back to previous folder Press and hold: No function	Press once: Listen to FM preset station 1 Press and hold: Set preset FM station 1
2 / Repeat		Press once: Repeat playback function Press and hold: Repeat function	Press once: Listen to FM preset station 2 Press and hold: Set preset FM station 2
3 / DIR +		Press once: Forward to next folder Press and hold: No function	Press once: Listen to FM preset station 3 Press and hold: Set preset FM station 3
12V Trigger / Random		Press once: Random playback function Press and hold: Toggle external 12V power on/off	Press once: No function Press and hold: Toggle external 12V power on/off

- If your music player is connected via the Auxiliary input you will not be able to control track or receive track information.
- In order to prolong remote battery life the LCD will shut off in 20 seconds if no other button is pressed. To turn remote back on press any key once and then press the command desired.
- Turn off DSP to access control of Bass and Treble
- When in Bluetooth mode Repeat and Random playback functions must be enabled via your media device and not from the remote control.

3.1 Listening via USB

1. Power up the Digital Media Locker
2. Attach your device to the USB cable inside the Digital Media Locker using the appropriate USB adaptor.
3. Secure the device with the anchor straps provided.
4. Secure the Digital Media Locker's protective door.
5. Press (POWER) on the remote control or Power button on the locker to turn it ON.
6. Press (MODE) on the remote control to select USB mode. Use the buttons as shown in the remote function chart.

Always ensure to connect and disconnect your media player with dry hands!

3.1.2 Device Charging

When specified USB devices are connected to the USB input the device battery will charge.