



SIZE : 70 x 110MM

Bluetooth® Speaker
Model No : CSBT-303

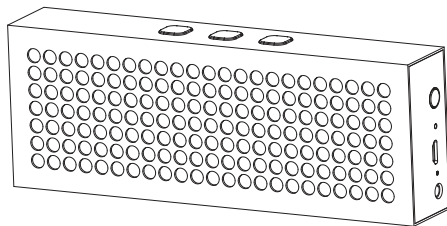

Product Overview

- 1. Volume Down / Previous song: When your speaker is in Bluetooth® mode, pressing the button once will decrease the volume. Holding the button down will play the previous song.
- 2. Play / Pause / Hands-free: Pressing this button once will allow you to reconnect the speaker to your device. Holding the button down will disconnect the speaker from you device.
- 3. Volume Up / Next Song: When your speaker is in Bluetooth® mode, pressing the button once will increase the volume. Holding the button down will play the next song.
- 4. Power: To turn your speaker on and off just hold down the power button.
- 5. Reset Hole: If you speaker suddenly stops working or does not play properly, try resetting it by pushing the button with a thin needle.
- 6. Micro-USB charging port
- 7. Charge Indicator Light: When your speaker is charging the light will be red. Once your speaker is fully charged, the light will turn green.
- 8. AUX- in Jack

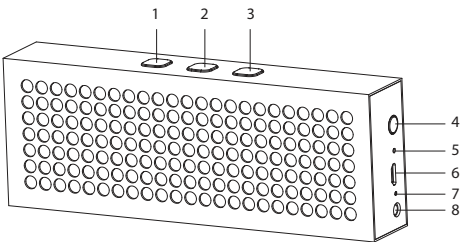

Operation Instructions

- 1. To turn on the speaker, hold down the power button located on the side of the speaker. Once the device is turned on, Bluetooth® mode is activated. On your device enter Bluetooth® mode and search “CSBT-303” Connect the speaker to your device. Once your device has successfully connected to the speaker, you will hear a tone and the blue LED light will slowly flash. When your speaker pairs with your Bluetooth® device it may require a password. Please enter, “0000.”
 - 2. Once your Bluetooth® device successfully connects to your speaker, your device will enter to your music interface. Choose the song of your choice to play and enjoy. If you would like to connect another Bluetooth® device to your speaker, hold the Play/ Pause / Hands-Free button for about 3 seconds. The speaker will enter pairing mode. Once the device is connected, the blue LED light will flash quickly.
- Battery**
- 1. When the battery power is low, a voice will prompt telling you that the battery is low. Use the micro USB cable to charge the speaker.
 - 2. When you charge the speaker when it is off, the charging indicator light will be red. Once the charge is complete, the light will turn green.

Warning

Do not replace the battery with the incorrect battery. If you need to replace the battery, you may only use the same type of battery or an equivalent type of battery to replace the damaged one. The battery (battery pack or combination battery) should not be exposed to high temperatures.

Specifications

Model No: CSBT-303
Bluetooth Version: V2.1+EDR(A2DP)
Transmission Distance: <10M (Transmission distance differs from different environments and Bluetooth® devices)
Input Voltage: DC 5V
Output Power: 3W X 2
Built-in Lithium Battery: 3.7V/1200mAh
Battery Life: 3.5 hours (Volume at 50%)
2 hours (Volume at 100%)

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contact Information:

Manufacturer: Wonders Technology Co., Ltd.

DOSS Industrial Zone, Qiping Kengdu Industrial Area Guihua Village, Guanlan
Town Baoan District, Shenzhen, China

Telephone No: 86-755-2752-0683

Fax No: 86-755-2752-0228

E-mail: LIANGBO8899@126.COM