

SIZE: 70X100MM

Wireless Bluetooth Speaker

Model NQ1 - SoundBox Plus
User Manual

Notes:

- 1. When the second speaker within 60 seconds, otherwise the pairing setting of the first speaker will be canceled.
- 2. Pairing function: Press the "Play/Pause" button for 3 seconds. The speaker will enter pairing mode. The speaker is in flashing blue, the secondary is in solid white. When the master speaker is in solid white, the secondary is in the ring of the master is in solid blue, the secondary is in solid white.
- 3. If the master speaker with your device via cable, the ring of the master is in solid blue, the secondary is in solid white.
- 4. The speaker will have stereo pairing automatically if they are in pairing mode.
- 5. Press and hold "Play/Pause" button for 3 seconds to cancel the stereo pairing mode.
- 6. Hold "Volume" stereo pairing can only change the mode. (Bluetooth/Auxiliary) on the master speaker.

Use your speaker with Echo Dot

You also can connect the Bluetooth/SoundBox Plus to a 3.5mm aux cable or Bluetooth/Phone. Please follow the steps below to set up Bluetooth.

1. Download Alexa app and follow the standard setup procedure to use the dot connected to your home audio network.
2. Connect your speaker to Bluetooth mode. You can press the "Play/Pause" button for 3 seconds to skip in pairing status.
3. Tap the Alexa app, tap "Find" and then tap "Settings".
4. Tap the Echo dot to your list of Alexa devices and tap Bluetooth.

The SoundBox Plus should appear in the list of Bluetooth devices. If it does not, then press the "Play/Pause" button for 3 seconds and try again. Once listed, tap on the speaker to complete the pairing process.

5. To remove the device, return to Bluetooth - tap the name of the speaker > tap "Forget device".

Buttons and Controls

Buttons	Functions
Power button	1. Add/Trim light and light control
Charging port	2. Charging status
TF card slot	3. TF card slot
Adjuster knob	4. Adjuster knob
Mode button	5. Mode button
Play/Pause button	6. Play/Pause button
Left arrow	7. Left arrow
Right arrow	8. Right arrow
Volume control button	9. Volume control button

Indicators

Indicator	Function
Flashing blue	Indicates that the speaker has entered into the pairing mode and it is ready to be paired
Steady blue	Indicates that the device is successfully paired
Steady red	Indicates that the device has switched to the auxiliary (TF card)
Steady Green	Indicates that the device has switched to the TF mode
OFF	If there is no operation in 10 seconds
Steady red	Charging
Charging indicator	OFF Fully charged

Preparation

- 1. Use the supplied USB cable to charge your portable speaker directly to your computer using USB port or the telephone adapter (batteries included) or the supplied USB port.
- 2. The speaker has a built-in battery, save mode when it will automatically power off if not in use for 15 minutes. This function can be removed with a firmware upgrade.

Operations

Multifunctional buttons

You want to	How to do
Turn On/Off	Press and hold power button
Disconnect the device	Tap and hold Play/Pause button
Reconnect with last device	Tap Play/Pause button
Play/Phase	Tap Play/Pause button
Volume up	Rotate your finger clockwise
Volume down	Rotate your finger counterclockwise

Pair your speaker with your smart device

1. Place your speaker and the smart device no more than 1 meter away from each other.
2. Press the power button and wait for a few seconds to turn on the speaker on. Upon powering on, a tone will be heard. The LED light starts flashing and will be accompanied by strong pulsing light that the speaker has entered into the pairing mode.
3. Tap on Bluetooth on your device and choose SoundBox Plus in the list.
4. If the pairing is successful, the LED will change to solid blue if the pairing fails after 60 seconds, please press the Play/Pause button for 3 seconds and try again.
5. Long press the Play/Pause button to disconnect the Bluetooth.
6. Note that your smart device cannot disconnect the SoundBox Plus, please long press the Play/Pause button and then try again.

Have connecting problems via Bluetooth?

1. Make sure that your device is within 1 meter from the speaker.
2. Clear the Bluetooth cache on your device.
3. Master reset your device.
4. Tap the Play/Pause button again.
5. Problem still not solved? Contact DOSS customer service at support@doss.com for assistance.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is advised to take the following steps to correct the interference: 1. Reorient the receiving antenna. 2. Increase the separation between the equipment and receiver. 3. Move the equipment into an extension of the room. 4. Consult the dealer or an experienced radio/TV technician for help. The device must not be co-located or operated in conjunction with any other antenna or transmitter.

Warnings

- 1. Do NOT drop, hit, or shake the device.
- 2. Do NOT disassemble, repair, or modify the speaker.
- 3. Do NOT use cleaning fluid that contains benzene, solvents, or alcohol.
- 4. Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time.
- 5. Do NOT use the device in a place with high humidity or dust.
- 6. Do NOT place heavy objects on the speaker.
- 7. Do NOT use the speaker near any power lines or wires.
- 8. Do NOT use the speaker near any flammable or explosive materials.
- 9. Use caution or modifications to the unit must not be expressly approved by the manufacturer.
- 10. Do not use the speaker for any purpose not intended by the manufacturer or for any use not intended by the manufacturer.

Specifications

- 1. Output: Bt*2
- 2. Power: 20W (Bt*2)
- 3. Battery: 3.7V 2200mAh
- 4. Dimensions: 180mm (L) x 80mm (W) x 80mm (H)
- 5. Play time: Up to 20 hours (50% volume, without light)
- 6. Input: AUX, Bt, TF
- 7. Warranty: One-year limited

Package Contents

- 1. x 1 DOSS SoundBox Plus
- 1. x 1 Power USB charging cable
- 1. x 1 3.5mm Auxiliary cable
- 1. x 1 User manual

Pair your device with the speaker via audio in cable

1. When using the audio cable, control audio playback via the connected device.
2. When auxiliary cable is plugged, play music will automatically switch to AUX mode.

Play music via SD card cable

1. Card capacity: 32G or below (if your micro SD card is larger than 32G, please format it as FAT32 or FAT16).
2. Support file: mp3, flac, etc.
3. *Play order: must play up in the download/ZIP order

Answer or end a call using your speaker

1. When there is an incoming call, each "yes" will answer the call, and each "no" will reject the call. The "yes" will answer the call, and the "no" will reject the call.
2. If you are in a call, you can answer the call by pressing the "Play/Pause" button.
3. If you are in a call, you can end the call by pressing the "Play/Pause" button.

Set test wireless stereo pairing

Start the first speaker

1. Turn on the speaker, press and hold the ACD button for 3 seconds.

Start the second speaker

1. Turn on the second speaker, press and hold the ACD button for 3 seconds.

DOSS

For updates, promotions, and experience sharing, follow our customer community.

@dossus
 @dossus
 support@doss.com
<https://www.dossaudio.com>
 1-833-275-8877 Mon-Fri (M-F 9AM-5PM EDT, USA)