



- Incorrect reassembly may result in a risk of fire or injury.
- Do not expose a device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
 - Have services performed by a qualified repair person using only identical replacement parts.
 - This will ensure that the safety of the product is maintained.
 - Do not charge the device while using the device to charge another device. Do not charge the device for more than 4-6 hours and do not leave unattended.
 - Switch off the device when not in use.

FCC Statement

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits

Hello!

We hope you absolutely love your new speaker. Outdoor Bluetooth Speaker with the Amazon Alexa technology.

Amazon Alexa is built in the cloud, so it is always getting smarter. The more you use Alexa, the more it adapts to your speech patterns, vocabulary, and preferences with new features continually being added. Ask Alexa to answer questions, play music, hear the news, get weather and traffic reports, control your smart home, and more.

are designed to provide reasonable protection against harmful interference in a residential installation. This equipment general uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warnings

Please read the warning and instructions before initial use of the speaker.

- Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Use of a power supply or charger not recommended or sold by device manufacturer may result in a risk of fire or injury to persons.
- Do not use the device in excess of its output rating.
- Overload outputs above rating may result in a risk of fire or injury.
- Do not use the device if damaged or modified.
- Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the device. Take it to a qualified service person when service or repair is required.

Tech Specifications:

- Tap to talk! Alexa from Amazon hands free function
- Bluetooth version: V4.2
- Speaker Driver Diameter: 45mm
- Rated output power: 5W
- Built in 3.7V/1400mAh lithium polymer battery
- Charging input: 1.5V/500mA;
- It takes 2.5 hours to charge the speaker from 0 to 100%
- Playback time at max volume: up to 3 hours

Included:

- 1x Outdoor Bluetooth® Speaker
- 1x Micro-USB Charging Cable
- 1x 3.5mm Aux Cord
- 1x Instruction Manual

inside

How to use the Speaker:

Charge the speaker completely before initial use.

- Using the provided cables, connect the Micro-USB end into the speaker and the USB end into a computer or an AC wall adapter.
- The LED (located next to the Micro-USB Port) will light up RED, when fully charged LED will turn GREEN.
- It takes 2.5 hours to charge the speaker fully.

Button Functions: (play, rewind, etc.)

- ▶ Short press: Play or Pause
- ⏻ Long press: Power ON/OFF
- ▶ Short press: Answer or End call
- 🔊 Short press: Activate Amazon Alexa
- ➦ Long press: Next Track
- ➦ Short press: Volume +
- ➦ Long press: Previous Track
- ⏮ Short press: Volume -

Common Voice Commands:

- "Alexa, play relaxing music."
- "Alexa, what's the weather like?"
- "Alexa, what's in the news?"
- "Alexa, add milk to my shopping list."
- "Alexa, set an alarm for 6 AM."
- "Alexa, what am I doing on Wednesday?"
- "Alexa, what were yesterday's NBA scores?"
- "Alexa, what's on at the movies?"
- "Alexa, what time is it in New York?"

SD Card Function:

- Find the SD card port (located next to the Micro-USB Port).
- Insert the SD card, and begin to play music.

LED Indicators:

- Rapidly Flashing Blue: Pairing mode
- Steady Blue: Paired
- Steady Green: Micro SD card mode
- Steady Red: Aux mode

Bluetooth:

1. Press ⏻ to turn speaker on, LED Indicator will flash BLUE.
2. Turn on the Bluetooth function on mobile device, Select "Outdoor Speaker" pairing name.
3. LED will turn BLUE if successfully paired
4. Speaker will automatically pair if the mobile device has been paired before.
5. Press ⏻ to turn off the device

Connecting to Alexa :

1. Download AlexaApp by using provided QR code.
2. Long press the power button of the speaker to activate pairing mode.
3. Select "Outdoor Speaker" from your smart phone's list of possible pairs to connect via Bluetooth®.
4. Open AlexaApp from mobile device.
5. Create or Log in with an existing Amazon account.
6. Once logged in, Speaker will automatically connect with Alexa.
7. Short Press 🔊 to activate Alexa.

***NOTE: AlexaApp needs to be opened on the phone for Alexa to work.



Download the App!



This app is supported by Android and iOS devices. The app will allow you to control the speaker.



For iOS



For Android

back side

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired

operation.

This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.