



AuraLink

Wireless Audio Receiver



Interactive User Guide

Version 1.9

Start Setup

< Back



Main Menu

1. Before You Start
2. Buttons & Indicators
3. How to Charge
4. Select Receiving Mode
 - A. Classic Bluetooth Mode
 - B. Auracast Mode
5. FAQ & Troubleshooting
6. Get Help & Updates

Next

 
1. Before You Start

AuraLink is an audio receiver. You can use it to:

- Use with your headphones or speakers:
→ Make wired ones wireless.
- Stream audio via **Bluetooth** from phones or transmitters.
- Receive **Auracast™ broadcasts** from TVs or public systems.

2. Buttons & Indicators



- LED  → **Classic Bluetooth**
Solid Light → Connected
Blinking **red** and **blue** → Pairing mode
- LED  → **Auracast**
Solid **orange** → Connected
Blinking **orange** → Searching device
- LED  → **Charging**
Blinking **red** → Low battery
Solid **red** → Charging

3. How to Charge

- Use USB-C (5V, 0.5~2A).
- Low battery: LED blinks **red**
- Charging: LED stays **solid red**
- Fully charged: LED turns off (~2 hrs)
- Playtime: Up to 20 hrs

< Back



Menu

4. Select Receiving Mode

A



[Classic Bluetooth](#)

B



[Auracast](#)

4A. Bluetooth Mode

- **Universal Compatibility**

Works with **any Bluetooth device:** phones, tablets, TVs, or computers.

- **Best Latency Performance**

Use transmitters supporting **Snapdragon aptX Adaptive** for smooth high-quality, and perfectly synced sound.



A.1 Pair with Bluetooth Device

- 1 Slide power switch to "ON"
LED  blinks **red** & **blue** → Ready to pair.
 - 2 On your phone or transmitter, select "Avantree AuraLink."
-  Connected: LED turns **solid**.



If not blinking red & blue, press and hold the main button

Next

< Back



Menu

A.2 Plug in headphones

- ➊ Plug your headphones into AuraLink
- ➋ Play audio and enjoy.

 Use Auracast mode 

Next

4B. Auracast Mode

- **What**

Broadcast audio to multiple headphones or hearing aids
– **no pairing needed.**

 [Learn more about Auracast.](#) ↗

- **Why**

Perfect for **group listening, travel,**
or **TV sharing.**
Just **scan & join** like Wi-Fi.

- **Notice**

Works only with Auracast-compatible transmitters.

 [View compatible transmitters](#) ↗



B.1 Join Auracast

Choose how you want to join:

a

Join an Open Broadcast

→ Auto-search and connect directly
(No code or app needed)

b

Join a Secured Broadcast

→ Connect via Android Auracast Assistant
(For encrypted broadcasts that require authentication)



a.1 Join an Open Broadcast

- ➊ Slide power switch to "ON"
→ LED  blinks orange → **auto-searches** for broadcasts.
 - ➋ Connects automatically when found.
- ✅ Connected: LED turns solid orange.

< Back



Menu

a.2 Plug in headphones

- ➊ Plug your headphones into AuraLink.
- ➋ Play audio and enjoy.

👉 Use as bluetooth mode ↗

Next

b.1 Join a Secured Broadcast


❶ Pair AuraLink with phone via bluetooth.

❷ Turn on LE Audio on Phone

→ tap **Listen to Auracast broadcast**

→ **Choose** broadcast want to join.

❸ Enter the broadcast source password

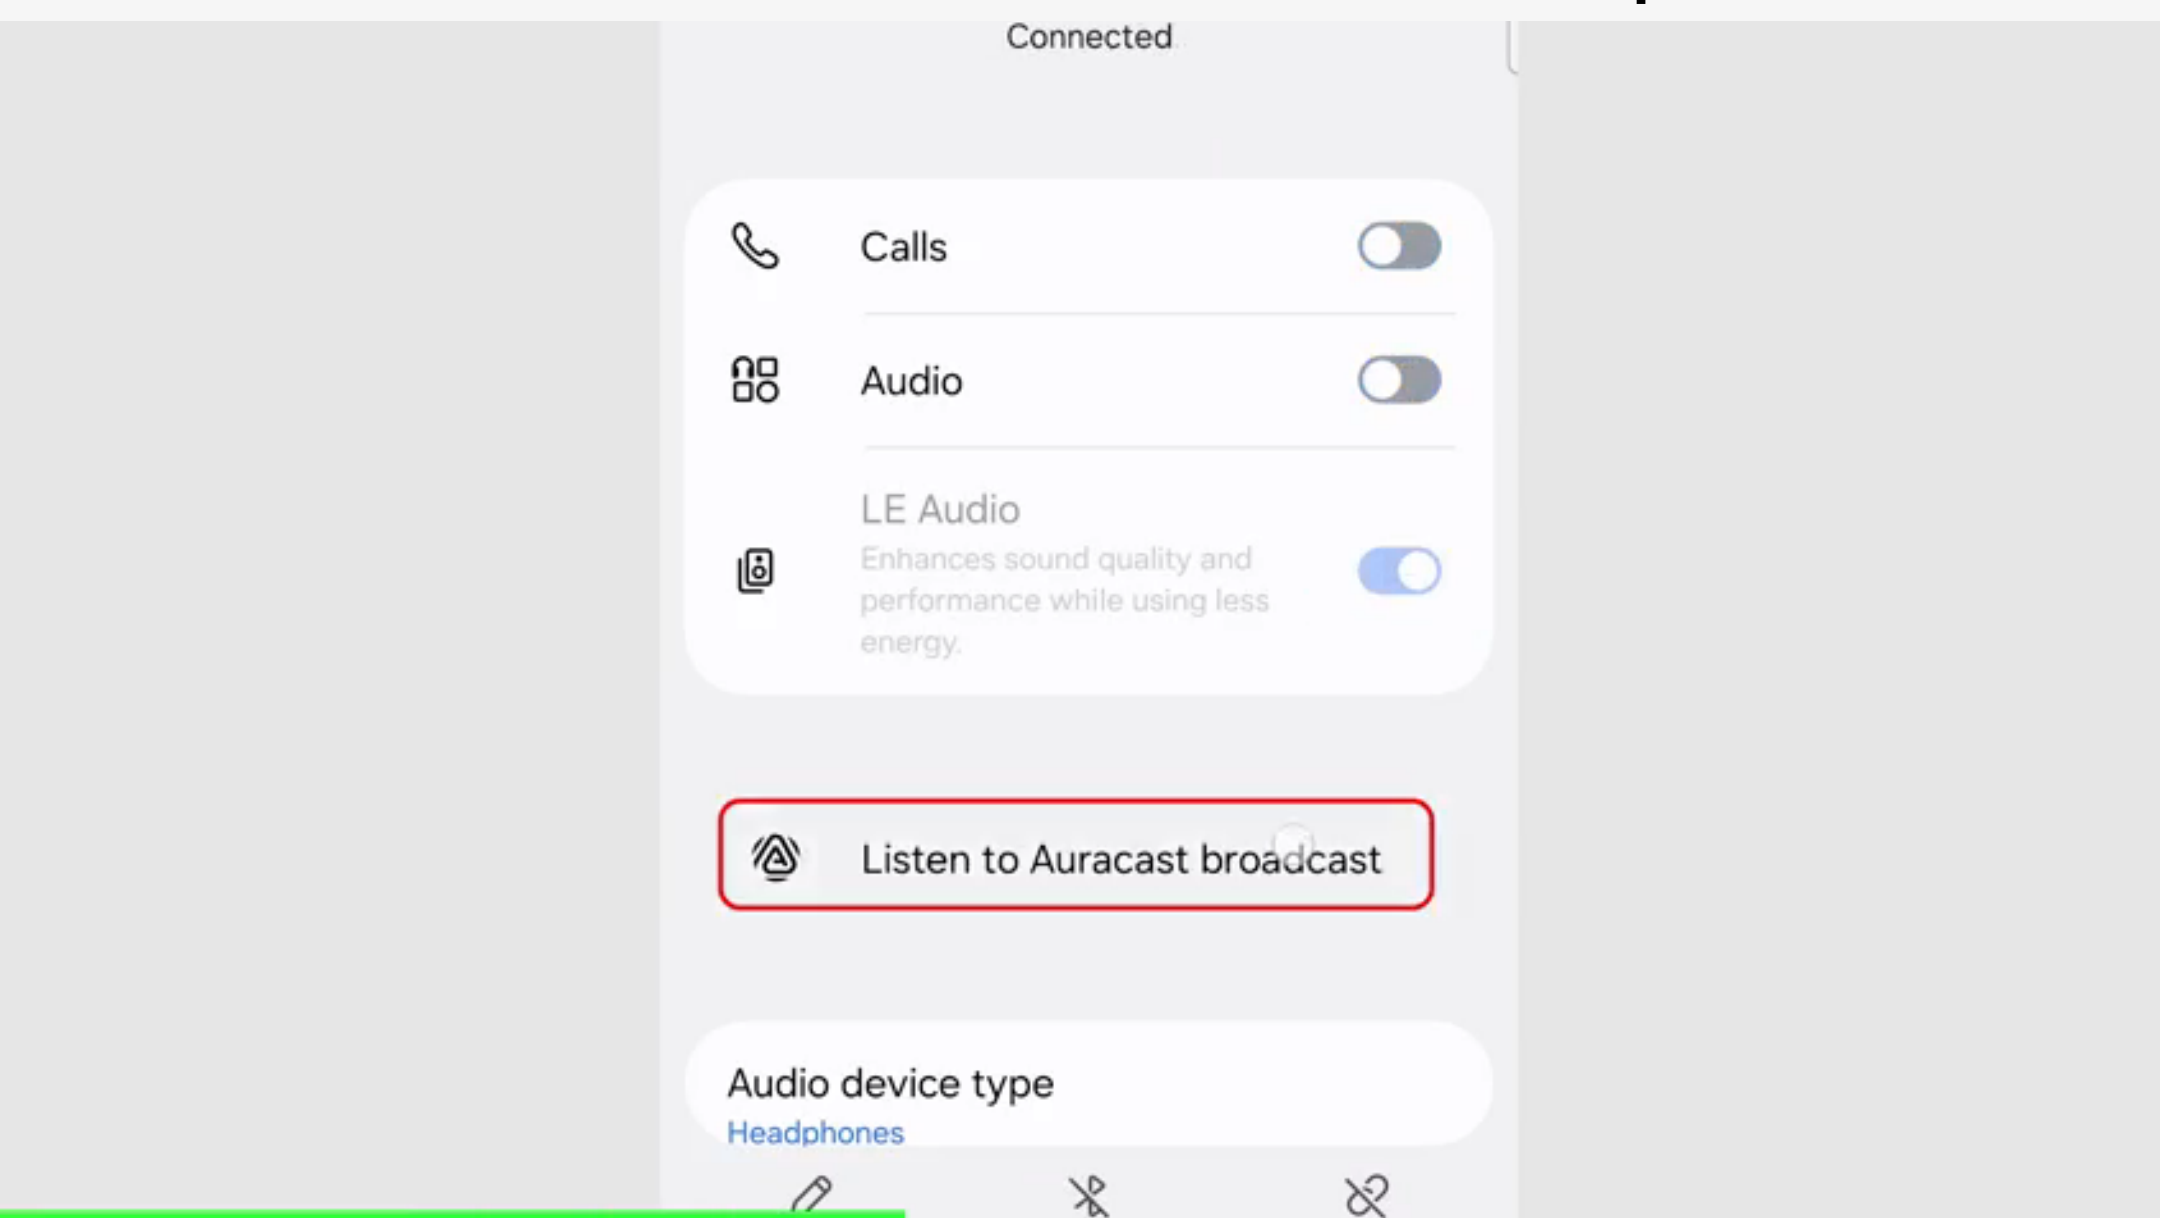

[👉 Find a phone with Auracast Assistant support.](#) (e.g. Samsung S23+, Pixel 8/9)

Next



b.2 Plug in headphones

- ➊ Plug your headphones into AuraLink.
- ➋ Play audio and enjoy.

 [Use bluetooth mode ↗](#)

Next



5. FAQ & Troubleshooting

- [How do I reset /clear pairing history? ↗](#)

 [More FAQ & Troubleshooting ↗](#)

Next

6. Support & Feedback

1. Register Your Product

Extended warranty & get updates.

[Register Your Product](#)

2. Agent Support

Need help? Contact our agents.



Email



Call



Chat

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.