

Harmony A0 Solo

Auracast Speaker With
Bluetooth



Interactive User Guide

Version 2.4



| Start Setup



| Activate Free
24-Month Warranty

< Back



Main Menu

1. Before You Start
2. Listen with Auracast
3. Switch to Bluetooth
4. Buttons & Indicators
5. Power & Charging
6. Troubleshooting
7. Register & Support

Next

 
 


1. Before You Start

Auracast speaker with Bluetooth for easy expansion

- Join **Auracast** broadcasts for shared listening
- Use **Bluetooth** when listening on your own

Next

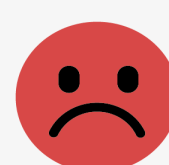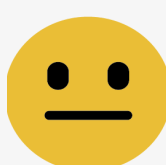



2. Listen with Auracast

2.1 What Is Auracast

Auracast lets **one** audio source broadcast to **multiple** listeners at the same time.

Perfect for:

  - TV listening
- Classrooms
- Public or shared spaces
- Group listening without pairing

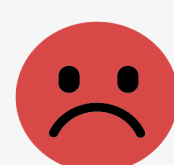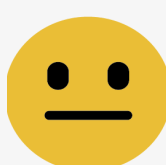[Next](#)

< Back



Menu

2.2 Choose Audio Source

Choose how you want to join:

A

 
**Join
Avantree Transmitter**

B

**Join Other
Open Broadcast**

C

**Join
Secured Broadcast**

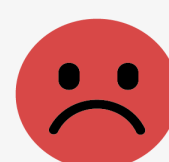



A.1 Set Up Avantree Transmitter

- Make sure the transmitter is **powered on** and **broadcasting audio**.
- For detailed setup, see the user guide for your Avantree transmitter.

Supported Avantree transmitter:



Oasis Aura



Audikast 4



Voyager



C82 Aura

 
 


Opera Aura



Aura Focus

Next

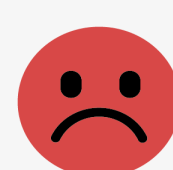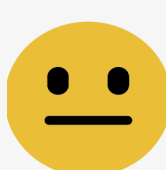



A.2 Join Broadcasting

On your speaker:

 
❶ Hold  for 2s → LED blinks **orange** (ready to join Auracast).

Not blinking orange? Hold  for 2s.

❷ Place it near the transmitter.

✅ **Joined:** LED turns **solid orange**.

Next

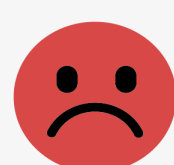



B. Join Other Open Broadcast



Available only when a nearby Auracast broadcast is active.

1 Hold  on speaker for 2s → LED blinks **orange** (ready to join Auracast).

Not blinking orange? Hold  for 2s.

2 The speaker will auto-join nearby open broadcast.



Joined: LED turns **solid orange**.

Supported Auracast broadcasting devices:

 
 


[Join Auracast phone broadcast](#) ↗



[Check more Auracast devices](#) ↗

Next

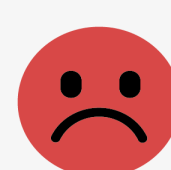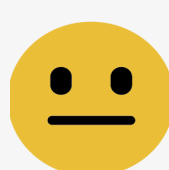



B.1 Join Auracast Phone Broadcast

- ➊ Open **Bluetooth settings** on phone.
- ➋ Tap "**Broadcast sound using Auracast**" > "**Start broadcast**".

***Note:** Menus may vary by phone model.*

 
 
- ➌ Play audio on your phone.

Supported models:

- Samsung Galaxy S23 and newer
- Google Pixel 8/9 series

👉 [Check more supported phones](#) ↗


Next

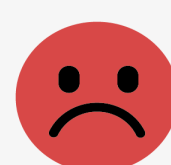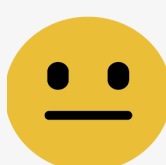

C. Join Secured Broadcast

Requires [a phone with Auracast Assistant](#) (e.g. Samsung S23 or newer).

 - ❶ Pair speaker with phone via Bluetooth.
- ❷ On your phone: Enable **LE Audio**
→ Tap **Listen to Auracast broadcast**
→ **Choose** the broadcast.
- ❸ Enter the password. Playback will auto-start → LED turns **solid orange**.

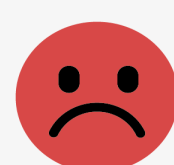[Next](#)

 


3. Switch to Bluetooth


Use Bluetooth when listening on your own:

- ➊ Hold  for 2s → LED blinks **orange**.
 - ➋ Double-press  → LED blinks **red** & **blue** (Bluetooth pairing).
 - ➌ On your device, turn on Bluetooth and tap "Venucast Harmony A0 Solo".
- ✅ **Connected:** LED turns **solid blue**.

Next

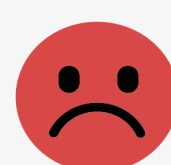

 4. Buttons & Indicators

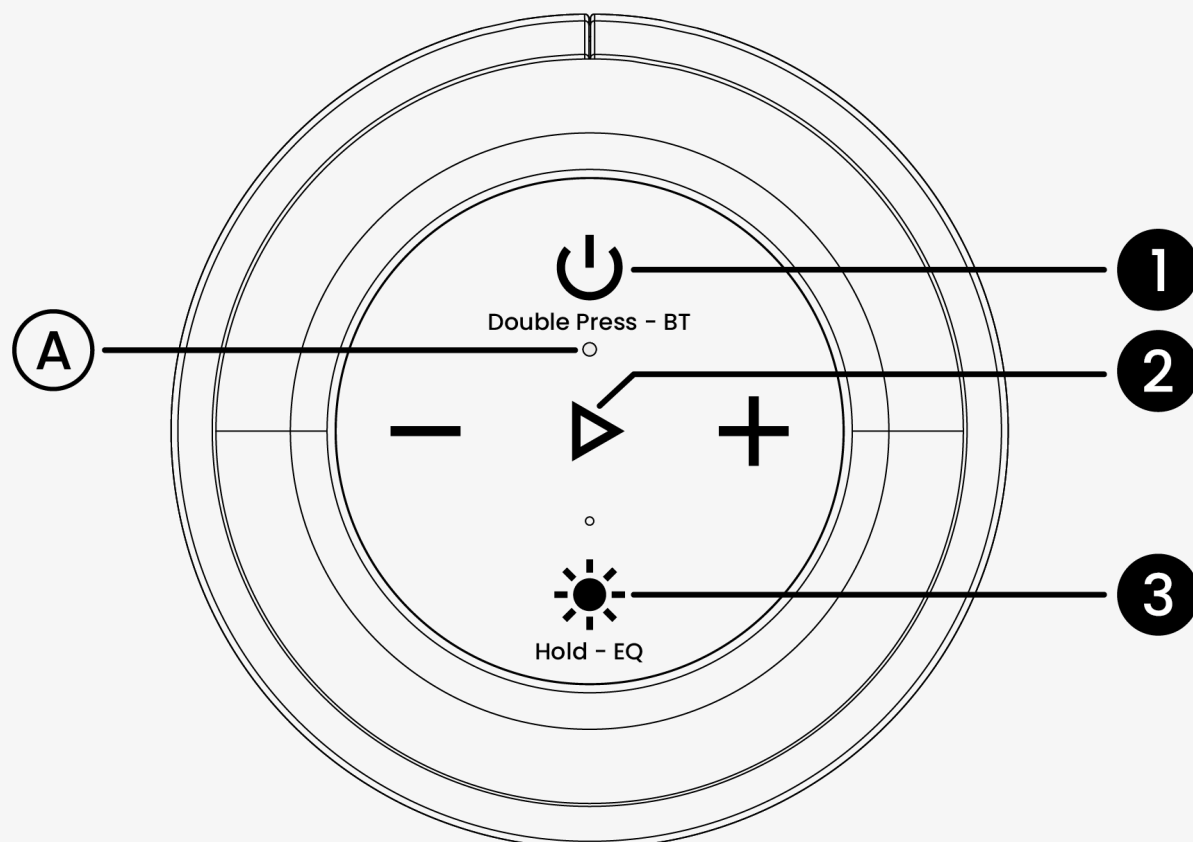

A LED Status

Solid orange → Auracast Broadcasting

Solid blue → Bluetooth Connected

1 Double-press

Switch Auracast ↔ Bluetooth

2 Press : Play/Pause; Answer/End call



Hold 2s: Search for Auracast broadcast or enter Bluetooth pairing

3 Hold

Switch EQ (Balanced / Voice Clear 1 / 2)


 [Full Buttons & Indicators Guide](#)

  Next

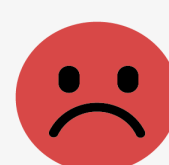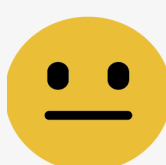

5. Power & Charging

 - Use included USB-C cable (5V, 1A)
- Low battery: LED blinks **red** slowly
- Charging: LED **solid red**
- Fully charged: LED off (~ 4 hrs)

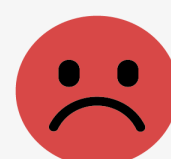[Next](#)

< Back

 


Menu

Rate This Guide

Your feedback helps us improve this guide for everyone.

It only takes a moment.

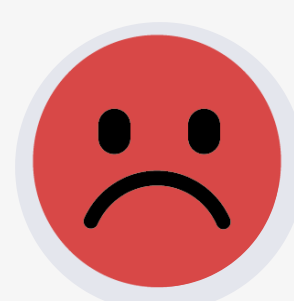

Next



6. Troubleshooting

 
Common Issues

- [Can't pair ↗](#)
- [Can't join Auracast ↗](#)
- [Reset ↗](#)

 [More FAQ & Help ↗](#)

 *Still need help?* [Contact support ↗](#)

Next

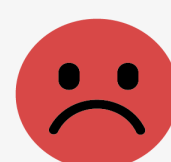



7. Register & Support

Register Your Product

Extended warranty & get updates.

Get 24M Warranty

Need help? Contact Us



Email

support@avantree.com



Call



USA (Toll Free)

 
+1 800 232 2078



Other Regions



Chat

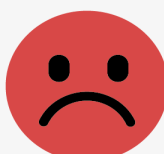

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user ' s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: –
Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.