

CU358-2-U	User Manuel	No:
	JLDP.15.005.301	Page 1 of 3

JLDP.15.005.301 User Guide

1. Appearance



Remote: JLDK.27.09.03



control box: JLDP.15.005.301

2. Function description

1. **HEAD UP:** Press this key, the head actuator out, release to stop it.
2. **HEAD DOWN:** Press this key, the head actuator in, release to stop it.
3. **FOOT UP:** Press this key, the foot actuator out, release to stop it.
4. **FOOT DOWN:** Press this key, the foot actuator in, release to stop it.
5. **Zero G:** Actuators are moved into zero G position automatically. The movement starts when

CU358-2-U	User Manuel	No:
	JLDP.15.005.301	Page 2 of 3

the key is released. Click any key to stop it.

6. **FLAT:** Actuators are moved into FLAT automatically. The movement starts when the key is released. Click any key to stop it.
7. **Pairing Key:** Press this key for more than 1 second, the remote will enter pairing mode and a blue LED besides the pairing key will flash. Release this key to stop pairing .After the pairing is successful, LED will stop flashing.
8. **RESET button:**Double click on the RESET button ,the Control box will enter pairing mode and the Green LED will on. After the pairing is successful or 10s later ,Green LED will off.

CU358-2-U	User Manuel	No:
	JLDP.15.005.301	Page 3 of 3

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

*This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et***
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.***

ISED RF exposure statement :

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment .This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux ISED RF limites d'exposition aux radiations dans un environnement non contrôlé. Cet émetteur ne doit pas être situé ou opérant en conjonction avec une autre antenne ou émetteur.