

\_\_\_\_\_

[illegible]

The diagram illustrates the touch controls for the Boom Bluetooth speaker. It features a horizontal row of 11 circular icons, each representing a specific touch gesture and its corresponding function. The functions are as follows:

- Power On/Off:** 2 Second Hold
- Bluetooth Pair:** Automatically Engages with Power On
- Play/Pause:** Tap buttons simultaneously
- Volume Up/Down:** Tap Button
- Track Forward/Track Back:** 2 Second Hold
- Answer/Hang Up Phone:** Tap + to answer / Hold - 2 seconds to hang up
- Answer/Desligar telefone / Riattaccare:** Toccare + per rispondere / Tenere premuto - per 2 secondi per riagganciare
- Responder y colgar el teléfono:** Para responder, dar un apretón a la botón + / Para colgar, mantener oprimido el botón - durante 2 segundos
- Avancar/Revenir on arrière:** Maintenir enfoncé pendant 2 secondes
- Avance de pista y retroceso de pista:** Mantener oprimido durante 2 segundos
- Avançar/Voltar:** Manter pressionado por 2 segundos