 
 


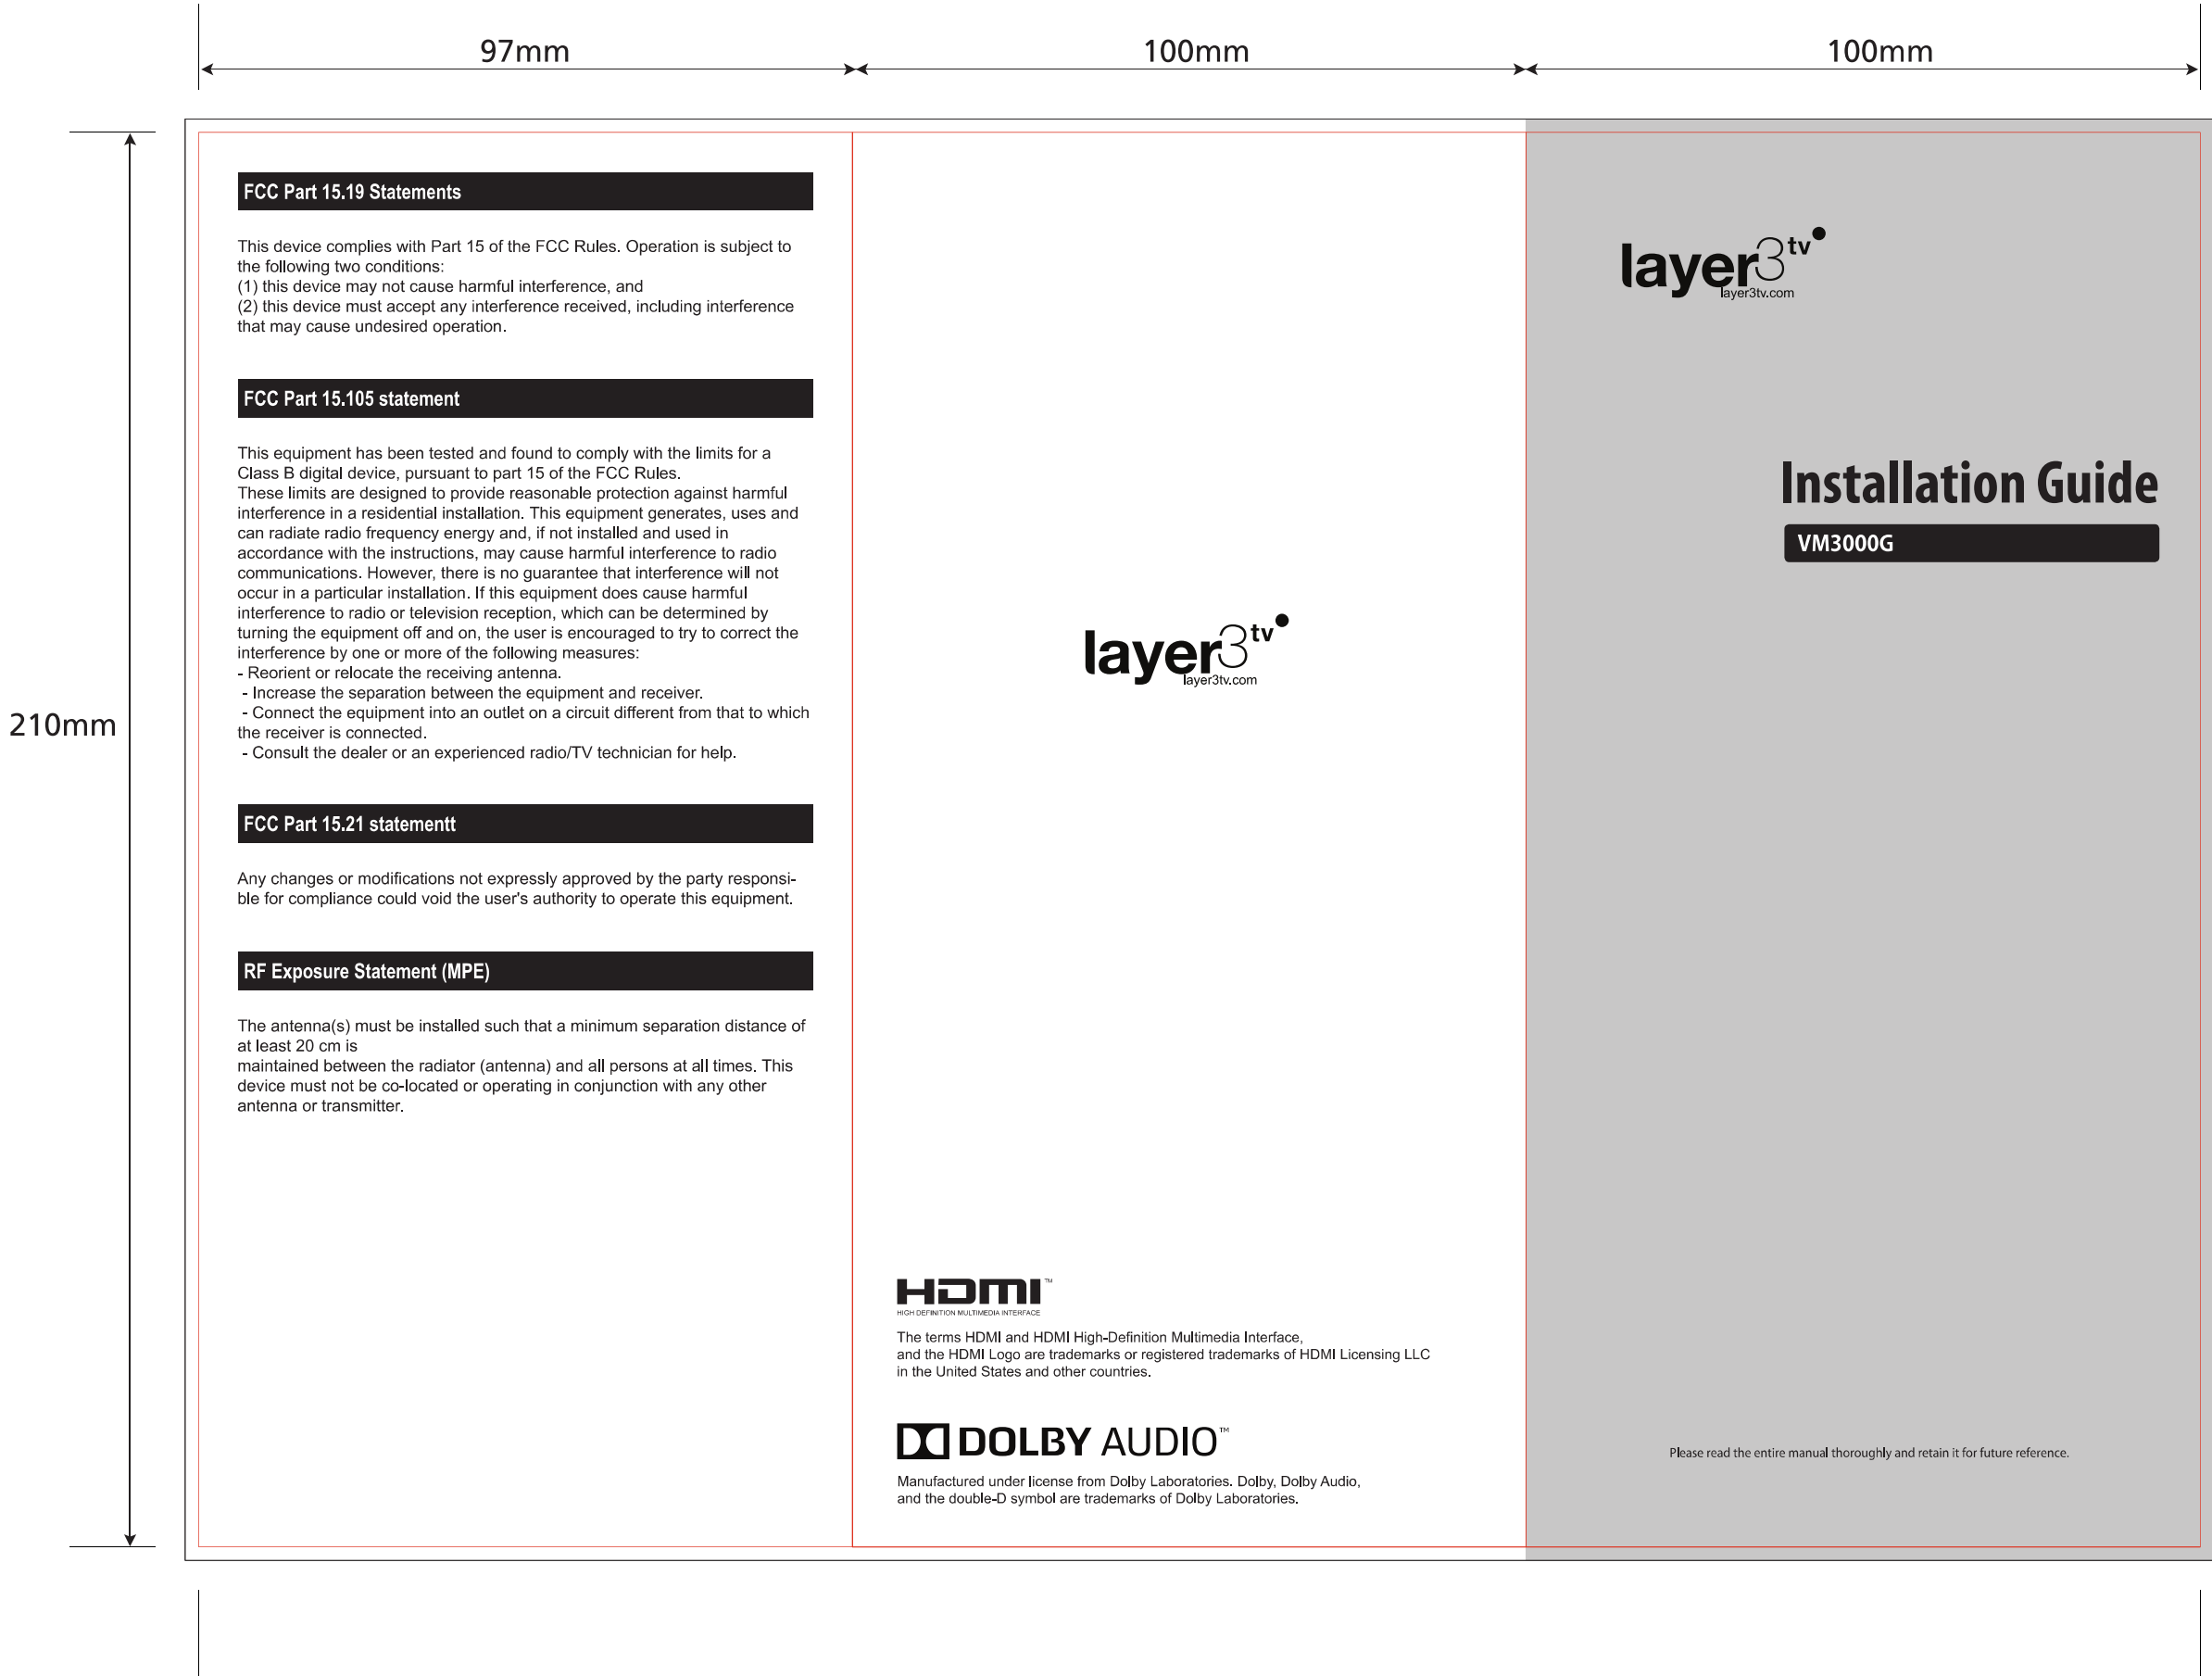

Important safety instructions

Cautions

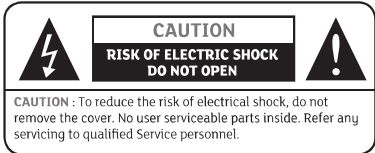

Read this manual carefully before using the product. The cautions described below contain important information about safety. The company will not take any responsibility for accidents or damage resulting from careless handling by the user.

This item incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing user only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

Important Safety Instructions

 
1. Read these Instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. only use the attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

1. Introduction


1.1 Front Panel

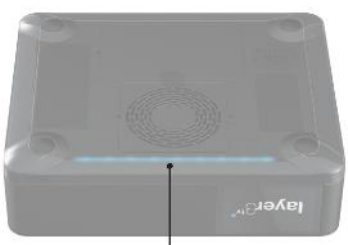

1 STANDBY (POWER) "ON" or "OFF" indicator

The front of the product is subject to change without notice.

 1.2 Rear Panel

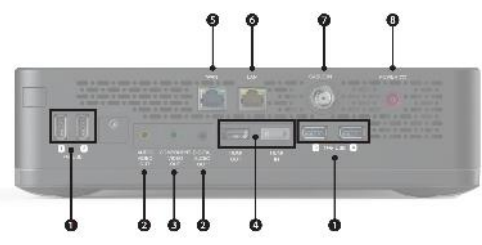


1 USB	Connect to USB Mass storage device for SW upgrade.
2 AUDIO	Audio connection port to the TV or other equipment.
3 VIDEO	Video connection port to the TV or other.
4 HDMI	Use the HDMI cable to connect this jack to the HDMI jack on your television for the best quality picture.
5 WAN	
6 LAN	
7 CABLE IN	
8 POWER	To connect your decoder to the mains power supply.

2. Installation Steps

You can install this receiver as per the following installation steps. If you have some questions regarding installation, please consult your GOX0081338 (1-888-228-3607).

2.1 Connecting HDMI cable / Connecting Power cable

 1. Connect the receiver to a TV with HDMI jack if your TV is equipped for it.
2. Connect the Power cable to a power outlet as well as the power socket.

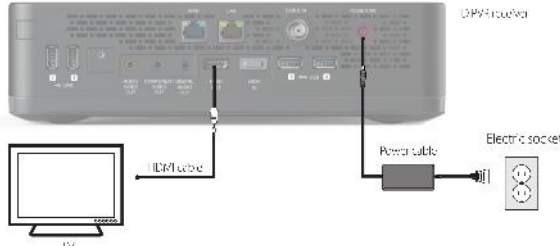


HDMI, or high-definition multimedia interface is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression. "Multimedia interface" is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels). When connecting via HDMI, you do not need to connect Audio Cables. You only need to connect Audio cables when connecting via HDMI/DVI.

2.2 Connecting the Antenna

Connect one end of the antenna cable to the ANT IN on the back of the receiver and the other end to a terrestrial antenna connection or the jack for the public antenna on the wall.

2.3 Turning On and Off Your Receiver

 Power On
1. Press the STANDBY button on the remote control.
2. The receiver will display "On".

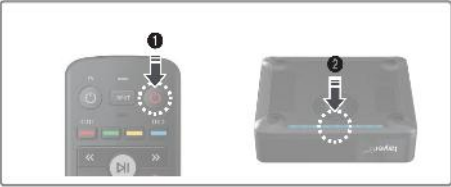

Power Off
Press the STANDBY button on the remote control. The receiver will display "Off".

Installation notice
If the receiver is placed in a location where it is exposed to strong radio waves, the receiver may not work properly. Do not connect it to a TV set.