


Doro 5030

Quick Start Guide

English

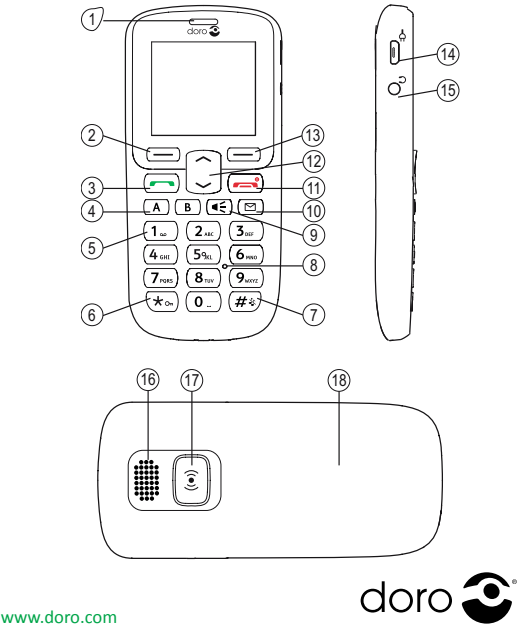

- | | |
|-----------------------------|---------------------------------------|
| 1. Earpiece | 11. End call /
Power on/off |
| 2. Left selection button | 12. Arrow buttons |
| 3. Call button | 13. Right selection button |
| 4. Speed dials | |
| 5. Voice mail | |
| 6. Keypad lock | 14. Charging socket |
| 7. Silent /
Input method | 15. Headset socket |
| 8. Microphone | 16. Loudspeaker |
| 9. Torch shortcut | 17. Assistance button |
| 10. Message shortcut | 18. Battery cover |
| | 19. Lanyard hold
(not included) |



Note! All illustrations are for illustrative purposes only and may not accurately depict the actual device. The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

Full user manual

For the full user manual please visit www.doro.co.uk/support/ or contact our Helpline.

1. GET STARTED


SIM card and battery

Remove the battery cover and the battery if it is already installed.

Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may be damaged.




Insert the SIM card

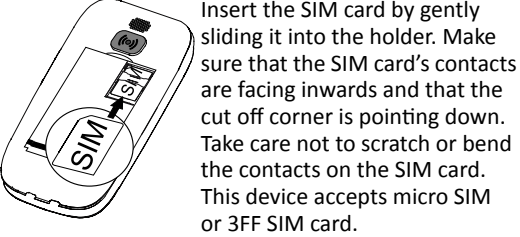

Insert the battery

Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right. Replace the battery cover.

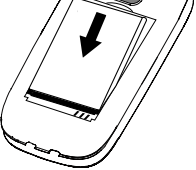

Charge the phone

CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low,  is displayed and a warning signal is heard.

- Connect the mains adapter to the wall socket and to the charging socket .

2. GET TO KNOW YOUR PHONE

Turn the phone on and off

- Press and hold the red button  on the phone to turn it on/off. Confirm with **Yes** to power off.
- If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN** is displayed. Enter the PIN code and press **OK**. Delete with **Clear**.

Note! If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Tip: It is recommended to remove the protective plastic film from the display to enhance the visibility.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

- Enter the PUK code and confirm with **OK**.
- Enter a new PIN code and confirm with **OK**.
- Re-enter the new PIN code and confirm with **OK**.

Start-up wizard

When starting the telephone for the first time, you can use the start-up wizard to set some basic settings.

Tip: You can run the start-up wizard later if you want.

Step-by-step instructions

The arrow (➔) indicates next action in step-by-step instructions. To confirm an action, press **OK**. To select an item, scroll or highlight the item using  and then press **OK**.

Enter text

- Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.
- Press  for a list of special characters. Select the desired character with  and press **OK** to enter it.

- Use  to move the cursor within the text.
- Press  to cycle upper case, lower case and numerals.
- Press and hold  to change writing language.

Keypad lock

You can lock the keypad to prevent the keys being accidentally pressed.

- Press and hold  to lock/unlock the keypad.

Activate keylock

- Press **Menu** ➔ **Settings** ➔ **Security** ➔ **Keypad lock**:
 - Auto keylock** select the time delay for automatic keypad locking.
 - Unlock mode** select **Single key** to unlock the keypad with  alternatively with **Dual key** to lock/unlock with right selection button (**Name/Unlock**) and .
- Press **OK** to confirm.

3. CALLS

Make a call

- Enter the phone number including the area code. Delete with **Clear**.
- Press  to dial. Press **Abort** to cancel dialling.
- Press  to end the call.

Note! For international calls, always use + before the country code for best operation. Press  twice for the international prefix +.

Make a call from the phonebook

- Press **Name** to open the phonebook.
- Use  to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the name.
- Press **Call** to dial the selected entry, or press **Back** to return to standby.

Receive a call

- Press  to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternately, press  to reject the call directly.
- Press  to end the call.

Volume control

Use  to adjust the sound volume during a call. The volume level is indicated on the display. See also [Audio setup](#) in the full manual.

Silent

Silent is a fixed profile with keypad tone, message tone and ring tone disabled, while vibration, tasks and alarm are unchanged.

- Press and hold  to activate/deactivate silent.

Call options

During a call the soft keys () give access to additional functions.

Speed dial

Use **A-B**, **0** and **2-9** to speed dial an entry from standby.

- Press and hold the corresponding button to dial.

Add speed dial numbers

- Press **Menu** ➔ **Settings** ➔ **Calls** ➔ **Speed dial**.
- Select **A** ➔ **Add** an select an entry from the phonebook.
- Press **OK** to confirm.
- Repeat to add speed dial entries for buttons **B**, **0**, **2-9**.

SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

Call log

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

- Press .
- Use  to scroll through the call log.
 -  = Received call
 -  = Dialled call
 -  = Missed call
- Press  to dial, or **Options**.

4. PHONEBOOK

The Phonebook can store 100 entries with 3 phone numbers in each entry.

Add contact

- Press **Menu** ➔ **Phonebook** ➔ **-New contact- ➔ Add**.
- Enter a  **Name** for the contact, see [Enter text](#). Delete with **Clear**.
- Use  to select  **Mobile**,  **Home** or  **Office**, and enter the phone number(s) including the area code.
- When done, press **Save**.

5. ICE (IN CASE OF EMERGENCY)

First responders can access important information such as medical information from the victim's phone  **ICE** in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

- Press **Menu** ➔ **ICE**.
- Use  to scroll the list of entries.
- Press **Edit** to add or edit information in each entry. Delete with **Clear**.

- Press **Save** when done.

See [Phonebook/ICE](#) in the full manual.

6. ASSISTANCE BUTTON

The assistance button allows easy access to contact your predefined help numbers should you need help. Make sure that the assistance function is activated before use. See the full manual on how to activate, how to enter recipients in the numbers list, and how to edit the text message.

Important!

Always inform recipients in the **Number list** that they are listed as your assistance contacts.

Make an assistance call

- When help is needed, press and hold the assistance button for 3 seconds, or press it twice within 1 second. The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .
- An assistance text message (SMS) is sent to all recipients.
- The first recipient in the list is dialled. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until  is pressed.

CAUTION

When an assistance call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

Note! Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number.

See [Assistance settings](#) in the full manual.

7. MESSAGES

Create and send text messages

- Press shortcut button . Alternatively press **Menu** ➔ **Messages** ➔ **Write message**.
- Write your message, see [Enter text](#), then press **To**.
- Select a recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
- Select **Add** to add more recipients. You can modify the recipients by selecting one and press **Options** ➔ **Edit/Delete/Delete all**.
- When done, press **Send**.

8. BLUETOOTH®

You can connect wirelasses to other Bluetooth® compatible devices such as headsets or other phones.

Important!

When you are not using Bluetooth® connectivity, turn off **Function on/off** or **Visibility**. Do not pair with an unknown device.

Activate Bluetooth®

- Press **Menu** ➔ **Settings** ➔ **Bluetooth** ➔ **Function on/off** ➔ **On**.
- Press **OK** to confirm.

Visibility

- Press **Menu** ➔ **Settings** ➔ **Bluetooth** ➔ **Visibility** ➔ **On**.
- Press **OK** to confirm.

Search device

- Press **Menu** ➔ **Settings** ➔ **Bluetooth** ➔ **Search device**.
- Select a device from the list and press **Bond** to connect. If Bluetooth® is not enabled, press **Yes** to activate.
- Press **OK** to confirm.

9. SOUND & DISPLAY

Tone setup

- Press **Menu** ➔ **Settings** ➔ **Sound** ➔ **Tone setup** ➔ **Ringtone**.
- Use  to select one of the available melodies, the melody will be played.
- Press **OK** to confirm or **Back** to discard changes.

Text size

You can customise the text size for the menu and messages.

- Press **Menu** ➔ **Settings** ➔ **Display** ➔ **Text size**:
 - Normal** / **Large**
- Press **OK** to confirm.

Brightness

You can customise the brightness settings. The higher value, the better contrast.

- Press **Menu** ➔ **Settings** ➔ **Display** ➔ **Brightness**:
 - Level 1-3**
- Press **OK** to confirm.

10. ADDITIONAL FUNCTIONS

Alarm

- Press **Menu** ➔ **Alarm** ➔ **On**.
- Enter the alarm time using the keypad and press **OK** to confirm.
 - For a single occurrence, select **Single**.
 - For a repeated alarm, select **Repeated**. Scroll through the list of days and press **On/Off** to enable/disable the alarm for each day.
- When done, press **Save**.
- When the alarm goes off a signal will sound. Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.

Note! The alarm will work even when the phone is switched off. Do not press **Yes** to power on if wireless phone use is prohibited or when it may cause interference or danger.

Torch

- Press **Menu** ➔ **Torch**.
- Select **Off** to turn off.

Tip: Press and hold shortcut button  to turn on the torch. Release to turn off.

11. TROUBLESHOOTING

Phone cannot be switched on	
Battery charge low	Connect the power adapter and charge the battery.
Battery incorrectly installed	Check the installation of the battery.
Failure to charge the battery	
Battery or charger damaged	Check the battery and charger.
Battery recharged in temperatures < 0°C or > 40°C	Improve the charging environment.
Charger incorrectly connected to phone or power socket	Check the charger connections.
PIN code not accepted	
Wrong PIN code entered too many times	Enter the PUK code to change the PIN code, or contact the service provider.
SIM card error	
SIM card damaged	Check the condition of the SIM card. If it is damaged, contact the service provider.
SIM card incorrectly installed	Check the installation of the SIM card. Remove the card and reinstall it.
SIM card dirty or damp	Wipe the contact surfaces of the SIM card with a clean cloth.
Failure to connect to network	
SIM card invalid	Contact the service provider.
No coverage of GSM service	Contact the service provider.

Failure to add a contact	
Phonebook memory full	Delete contacts to free up memory.
Failure to set a function	
Function not supported or subscribed from network	Contact the service provider.

12. SAFETY INSTRUCTIONS

 **WARNING**
The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.
The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the GSM 900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.
Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.
Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15 cm between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15 cm from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.

If you have any reason to suspect that interference is taking place, turn the phone off immediately. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress. Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.

 **WARNING**
Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Protect your hearing

 **WARNING**
Excessive exposure to loud sounds can cause hearing damage.
Exposure to loud sounds while driving may distract your attention and cause an accident.
Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Emergency calls

Important!
Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories.

For vehicles equipped with air bags: Remember that air bags fill with air with considerable force. Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

13. CARE AND MAINTENANCE

Your unit is a technically advanced product and should be treated with Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain, snow, humidity, and all types of liquids can contain substances that corrode the electronic circuits. If the unit gets wet, you should immediately power off the phone, remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit’s moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside and can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop or shake the unit. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.
- Do not disassemble, open, crush, bend, deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.

- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Improper battery use may result in a fire, explosion or other hazard.

For devices that utilize a USB port as a charging source, the device’s user manual shall include a statement that the device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

The advice applies to the unit, battery, power adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don’t forget the receipt or a copy of the invoice.

14. WARRANTY

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user’s part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee. This guarantee does not apply if batteries other than DORO original batteries are used.

15. COPYRIGHT AND OTHER NOTICES

© 2016 Doro AB. All rights reserved.
Bluetooth™ is a registered trademark of Bluetooth SIG, inc.
eZiType™ is a trademark of Zi Corporation.
vCard is a trademark of the Internet Mail Consortium.
microSD is a trademark of SD Card Association.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-

copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

16. TECHNICAL DATA

Network:	GSM 900/1800/1900 MHz
Dimensions:	117 mm x 53 mm x 14 mm
Weight:	78 g (including battery)
Battery:	3.7V/800 mAh Li-ion battery
Operating ambient temperature:	Min: 0°C (32°F) Max: 40°C (104°F)
Charging ambient temperature:	Min: 0°C (32°F) Max: 40°C (104°F)
Storage temperature:	Min: -20°C (-4°F) Max: 60°C (140°F)

Hearing aid compatibility

Note! For hearing aid compatibility, turn off Bluetooth connectivity.

This phone is hearing aid compatible. Hearing aid compatibility is not a guarantee that a specific hearing aid will work with a specific phone. Mobile phones contain radio transmitters that may interfere with hearing aid performance. This phone has been tested for use with hearing aids, for some of the wireless technologies that it uses, but there may be some newer wireless technologies that have not been tested yet for use with hearing aids. To ensure that a specific hearing aid works well with this phone, test them together before making a purchase.

The standard for hearing aid compatibility contains two types of ratings:

- **M:** To use your hearing aid in this mode, make sure that your hearing aid is set to “M-mode” or acoustic coupling mode, and position the phones receiver near the hearing aid’s built-in microphone. For the best results, try using the phone in different positions relative to your hearing aid—for example, placing the receiver slightly above the ear may result in better performance for hearing aids with microphones positioned behind the ear.
 - **T:** To use your hearing aid in this mode, make sure that your hearing aid is set to “Tmode” or telecoil coupling mode (not all hearing aids have this mode). For the best results, try using the phone in different positions relative to your hearing aid—for example, placing the receiver slightly below or in front of the ear may result in better performance.
- Your device meets the T4/M3 level rating.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines from the independent scientific organization ICNIRP (International Commission of Non-Ionizing Radiation Protection).
The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg averaged over 10 grams of tissue and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Head SAR: 0.58 W/kg

Body SAR: 0.88 W/kg

During normal use, the SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the output power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

This device meets RF exposure guidelines when used against the head or when positioned at least 0.5 cm away from the body. When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above stated separation distance from the body.

The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you reduce your usage or use a hands-free accessory to keep the device away from your head and body.

Correct disposal of this product

 (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or manual indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.
Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This product is RoHS compliant.

Correct disposal of batteries in this product
(Applicable in countries with separate collection systems)

 The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Declaration of Conformity

Doro hereby declares that **Doro 5030** conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2011/65/EU (RoHS). A copy of the Declaration of Conformity is available at www.doro.com/dofc

17. FCC/IC

FCC/Industry Canada notice

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules/Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that inter-

ference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC or Industry Canada can require you to stop using your unit if such interference cannot be eliminated.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user’s authority to operate the equipment.

RF exposure information (SAR)

This model phone meets the government’s requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government and by the Canadian regulatory authorities.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC and Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the poser required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the

power output.
The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.813 W/kg and when worn on the body, as described in this user guide, is 1.010 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)
While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.
SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on FCC ID: W55DFB0060

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.
*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

Model: DFB-0060
Doro 5030 (2021)
QSG
English

Version 1.0
www.doro.com

C € 0984