


Doro 7010

Quick Start Guide

English

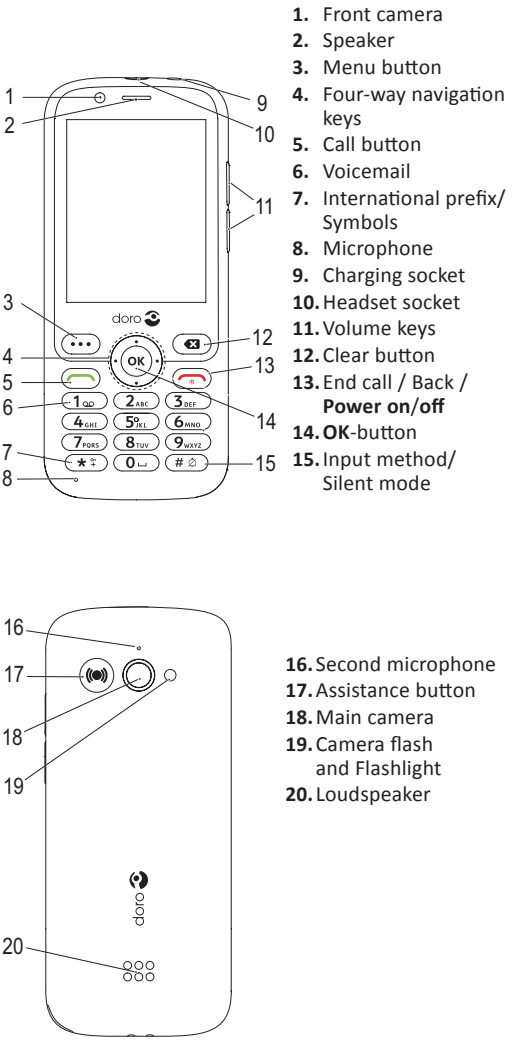

Note! All illustrations are for illustrative purposes only and may not accurately depict the actual device. The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

1. GET STARTED

When you first get your phone, there is a few actions that you need to take before starting to use it.

Tip: Remove the plastic screen protector.

1.1. Unbox your new phone


The first step is to unbox the phone and assess the items and equipment included in the delivery. Make sure to read through the manual so you can familiarize yourself with the equipment and the basic functions.

- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- The supplied items are designed only for this device and may not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- You can purchase additional accessories from your local Doro retailer.
- Make sure they are compatible with the device before purchase.
- Only use batteries, chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and warranty.
- Availability of all accessories is subject to change depending entirely on manufacturing companies. For more information about available accessories, refer to the Doro website.

Insert the memory card, SIM card and battery

Important!
Turn off the phone and disconnect the charger before removing the battery cover.

Remove the battery cover:

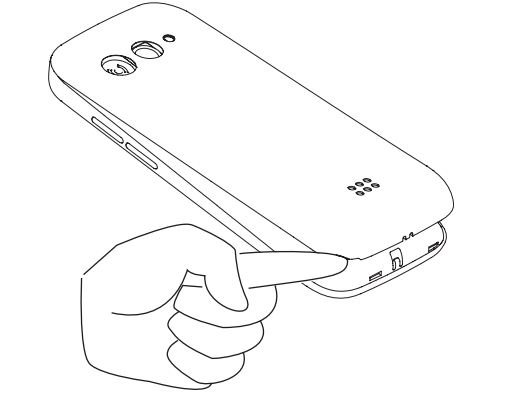

Important!
Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may get damaged.

Insert the SIM card:

Note! Take care not to scratch the metallic contacts on the cards when inserting them into the card holders.

Insert the micro SIM or USIM card provided by the mobile service provider.

You can insert a second micro SIM or USIM card so you can have two phone numbers or service providers on a single device. Data transfer speeds may be slower, in some cases, if two SIM cards are inserted in the device than when one SIM card is inserted.

Note! This device only accepts micro SIM/USIM cards (3FF). Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. If you are using only one SIM card, we recommend using SIM1.

Insert the memory card:

You may optionally install a memory card in the phone to increase the storage space of your phone to be able to store more files, pictures, videos etc. Make sure that the memory card's contacts are facing downwards, as shown above. Compatible card type: MicroSD, MicroSDHC, MicroSDXC. Incompatible cards may damage the card itself, the device and corrupt data stored on the card.

Insert the battery:

Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the left.

Replace the battery cover.

1.2. Charge

While it's possible that your phone will already come with enough charge to be powered on right out of the box, we recommend to give it a full charge before first use.

Caution
Only use batteries, chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and warranty.

When the battery is running low,  appears and a warning signal is heard. Connect the mains adapter to a wall socket and to the charging socket  or place the device in a charging cradle.

Alternatively connect the cable to the charging socket  on the phone to a USB port on a computer.

1.3. Save energy

When the battery is fully charged, disconnect the charger from the device and unplug the charger from the wall socket.

To save power the screen goes off after a while. Press any button to wake the screen up. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use. During extended operation, the device may feel warm. In most cases, this is normal. To avoid getting too warm, the device may switch off during charging.

1.4. Turn the phone on and off

- Press and hold  (red) to turn on and off.
- If the SIM card is valid but protected with a PIN code (Personal Identification Number), **Enter SIM PIN** appears. Enter the PIN code and press the center key **OK**. Delete any mistyped number using .

Note! If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Please also note that if you use more than one SIM card, the PIN and PUK codes might differ between SIM1 and SIM2.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** appears. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

- Enter the PUK code and confirm with **OK**.
- Enter a new PIN code and confirm with **OK**.
- Re-enter the new PIN code and confirm with **OK**.

2. GET TO KNOW YOUR PHONE

When starting the telephone for the first time, you are guided by the Start-up wizard to set some basic settings.

Select the setting you would like to change.

When ready, scroll to the end and press **Finish**.

2.1. Descriptions in this document

Descriptions in this document are based on your phone's setup at the time of purchase. Instructions normally start from the home screen. Press  (red) to reach the home screen. Some descriptions are simplified.

The arrow () indicates next action in step-by-step instructions.

2.2. Handle the phone

Call (green):

- Dial a number or answer an incoming call.
- Enter the call log.

End call/Back/Power on and off (red):

- Press to end calls or return to the home screen.
- Return to the previous screen (.
- Long press to power on or off.

Menu/options button/notifications

- If the phone is locked, press the menu button to unlock.
- From the Home screen, press  to view notifications.
- From other screens, press  for to see more options available in that menu.

Assistance (

- Press to make an assistance call.

Clear

- Press to clear the previous character.

Navigation keys:

- (A) Use the **Four-way navigation keys** to navigate up, down, left and right. These keys will be shown as  in the rest of this document.
- (B) Use the centre button to select items and confirm actions. This button will be shown as **OK** in the rest of this document



Note! Navigation in some third party apps might work differently.

2.3. Easy mode actions

"Easy mode" is Doro's unique telephone menu which is action-based and allows you to navigate your phone, by just asking yourself, "**What do I want to do?**". Select one of the available actions as a shortcut for your next step.



Volume control:

Use + and - on the side of the device to adjust the sound volume. During a phone call, it adjusts the earpiece volume.

Set the language:

The default language is determined by the SIM card.

  **Settings**  **System**  **Languages & input**  **Language**

Set the time and date:

The time and date can automatically set from .

  **Settings**  **System**  **Date & time**.

2.4. Enter text

- Press the button corresponding to the letter until the appropriate character appears.
- Press  for a list of special characters. Select the desired character using the **Four-way navigation key** and press **OK** to enter it.
- Use the **Four-way navigation key** to move the cursor within the text.
- Press **Clear** to erase characters.
- Press  to cycle upper case, lower case, numerals and predictive text.

Change the writing language:

- Press and hold  for a list of available languages.
- Select language with  and press **OK** to confirm.

Enter text with predictive text:

For fast and accurate typing, you can use the intelligent predictive text input method.

While texting, press  to select input method.

Enter phone numbers:

Note: For international calls, always use + before the country code for best operation. Press and hold  for the international prefix +.

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. There are two types of pauses available on your phone, press and hold  until desired character is shown. Comma (,) is for pause and semicolon (;) is to wait for user activation.

3. CALLS

3.1. Make a call

- Enter the phone number.
- Press  (green) to call.
- Press  (red) to end the call.

Note! There is no dial tone. As long as the phone is turned on, it is ready for use.

3.2. Make a call from the contacts list

- Press   **Contacts**.
- Use  to scroll through the contacts, or press  to search the phonebook.
- Select the wanted contact and press **OK**.
- Press  (green) to dial the selected entry.

3.3. Receive a call

- Press  (green) to answer.

Silence an incoming call

- When a call comes in, press **Volume keys** to silence the ring tone.

3.4. Call log

Received, missed, and dialed calls are saved in a call log.

Retrieving and dialing:

- Press  (green).
- Use  to scroll through the call log

 = Incoming call

 = Outgoing call

 = Missed call

- Press  (green) to dial the highlighted number.

4. CONTACTS

4.1. Create a contact

- Press   **Contacts**  **Create new contact** 
- Enter relevant contact information.
- When done, press  and the select **Save**.

Tip: Depending on the selected storage location, the types of information you can save may vary.

Press  to see more options for the contact.

4.2. Create ICE entry (In Case of Emergency)

First responders can access additional information such as medical information from the victim's phone in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

- Press   **Contacts**  **ICE**.
- Fill in as much information as possible.
- Add ICE contacts from the list of contacts.
- Press   **Save** when done.

5. SOS/112 CALLS

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by  (green). Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

Note! Sometimes an emergency call cannot be placed due to network, environment or interference issues.

6. ASSISTANCE BUTTON (

The Assistance button on the back of the phone allows easy access to contact your predefined help numbers should you need help. Make sure that the assistance function is activated before use. See the full manual on how to activate, how to enter recipients in the numbers list, and how to edit the text message.

  **Settings**  **Assistance**

See also "[16. Response by Doro](#)"

7. CAMERA

Note: To get sharp photos, wipe the lens clean with a dry cloth.

- Press the shortcut button  or, press   **Camera**.
- Press  or **OK** to take a photo.

8. MESSAGES

8.1. Create a message

Create, edit and read messages. A text message will be converted to a picture message automatically when media files (music, video, etc.) are attached.

- Press   **Messaging**    **New message**.
- Enter the recipients phone number in the **To** field. Or select  to select one or more recipients from your contacts. When done press   **OK**.
- Scroll down and type your message.
- Press  for further options.
- When done, press   **Send** or .

Note! If you choose to send to multiple contacts, you will be charged for each one.

Important!
Some features uses Internet data services and that can be costly. We recommend that you check your data service rates with your service provider.

9. WI-FI CONNECTION

You need an Internet connection to use the Internet and the e-mail features. To reduce data traffic costs, it is recommended to use Wi-Fi connections when available, instead of using the more costly Mobile Data Connection. Contact your service provider for detailed subscription costs before activating. You may already have Wi-Fi in your home and it's often available at workplaces. Take advantage of free networks in coffee shops, hotels, trains and libraries. Connecting to the Internet with Wi-Fi doesn't incur additional data traffic costs, unless you have to pay to get on the wireless network.

- Press   **Settings**  **Network & Internet**  **Wi-Fi**.
- Select **On**.
- Select the available network you want to connect to.
- If the network is secured with a password, enter the password and select **Connect**.

Tip:  is shown in the status bar when connected.

Note! Keep in mind that your phone remembers Wi-Fi networks you connect to. If Wi-Fi is turned on, the phone automatically connects to the network next time you are within reach. Some open networks require you to log in to a webpage before gaining access to the network.

10. BROWSER

Use the web browser to access the Internet.

- Press   **Browser**.
- Select any of the available sites or navigate to **Search** or **type URL**.

11. E-MAIL

E-mail accounts, like Gmail and Yahooo may require that you modify some of the account settings before you are able to access e-mails on your new Doro phone. To avoid problems signing in from your phone, you may need to log-into your Gmail / Yahoo account from a computer first.

Press   **E-mail**.

11.1. Gmail & Yahoo Mail:

- Use a computer / tablet web browser to log in to your Gmail/Yahoo account.
- Click your name (top right corner)  **My Account**  (Under the security section click) **Connected apps & sites/ Account security**  **Allow less secure apps**  Set the switch to **ON**.
- Try to log in with your phone again.

12. CUSTOM SETTINGS

12.1. Silence the ring tone

Press and hold  to activate/deactivate silent.

During an incoming call, press **Volume keys** to silence the ring tone.

12.2. Configure the audio setup

Press   **Settings**  **Sound**  **Audio setup**.

13. BLUETOOTH®

Bluetooth technology for hands free use. Connect wirelessly to other Bluetooth compatible devices such as headsets.

1. Press  ➔ **Settings ➔ Connected devices ➔ Bluetooth.**
2. Select **On ➔**
3. Select **Pair new device ➔ OK.**
4. Select an available device that must be in pairing mode.
5. Select **Connect**. When connecting to another Bluetooth device you may need to enter a password or confirm a shared pairing code.

14. ALARM

Set alarms for timings you shouldn’t miss.

15. MYDORO

Create a MyDoro account to get the most out of your phone. Administer the phone using any web browser, www.mydoro.com.

16. RESPONSE BY DORO

***Note!** This service is only available on some markets/countries.*

Response by Doro is a new, easy-to-use service from Doro, created to give seniors and relatives extra security, every day. By pressing the assistance button on the Doro phone, the user can easily call for help. First the alarm contacts the relatives, and if no relative is able to answer it is automatically sent to one of our alarm centres, where there is staff on duty 24/7. Your as relatives can use any iOS or Android smartphone.

Read more at www.doro.com.

17. WHATSAPP

WhatsApp is a cross-platform messaging and Voice over IP (VoIP) service. The application allows you to send and receive text messages, voice calls, video calls, images and other media, documents, and user location. The service requires you to provide your mobile number. For more information, see www.whatsapp.com.

18. FACEBOOK

Use Facebook to check you social network. For more information, see www.facebook.com.

19. ORGANISER

On the home screen, press  ➔ **Organizer ➔**

Calculator:

Perform basic math operations.

Calendar:

Enter your upcoming tasks and events.

File manager:

Access and manage various files stored in the phone or in the memory card.

20. MEDIA

On the home screen, press  ➔ **Media ➔**

Gallery:

View photos taken with the camera and other saved images or downloaded images.

Music:

Use the music player to listen to music or other audio files.

FM Radio:

Listen to FM radio which has a frequency range from 87.5 to 108.0 MHz. You need to connect a compatible headset that works as antenna.

Sound Recorder:

Record and store voice recordings.

Videos:

View recorded, other saved or downloaded videos.

21. TORCH

Use the torch when you need extra lighting.

***Note!** The torch will drain the battery very quickly. Remember to switch off after use.*

22. Help

To get help:

- Download the full manual at www.doro.com
- Update your phone’s software
Your phone checks for available software updates automatically. Please follow the on-screen instructions when you are notified of a software update.
- Tip:** *Always download and install phone software updates to increase your phone’s performance.*
- Reset your phone
On the home screen, press  ➔ **Settings ➔ System ➔ Reset options ➔**select the wanted reset

The reason to perform a reset might be a persistent problem that is impossible to solve or if you want to pass the phone to someone else. Note that everything added to the phone since you got it will be erased. SIM card and memory card are not affected.

23. SAFETY INSTRUCTIONS

WARNING

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.
The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the WCDMA 900/2100 MHz, GSM 900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.
Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.
Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15 cm between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15 cm from the medical device.

- Not carry the wireless device in a breast pocket.
 - Hold the wireless device to the ear opposite the medical device.
- If you have any reason to suspect that interference is taking place, turn the phone off immediately. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress. Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.

WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Protect your hearing



WARNING
Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident.

Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Emergency calls

Important!
Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories.

For vehicles equipped with air bags: Remember that air bags fill with air with considerable force. Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.
It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

24. CARE AND MAINTENANCE

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain, snow, humidity, and all types of liquids can contain substances that corrode the electronic circuits. If the unit gets wet, you should immediately power off the phone, remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit’s moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside and can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop or shake the unit. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.
- Do not disassemble, open, crush, bend, deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Improper battery use may result in a fire, explosion or other hazard.

For devices that utilize a USB port as a charging source, the device’s user manual shall include a statement that the device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

The advice applies to the unit, battery, power adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don’t forget the receipt or a copy of the invoice.

25. WARRANTY

This product is guaranteed for a period of 24 months and for original accessories for a period of 12 months (such as the battery, charger, charging cradle or handsfree kit) which may be delivered with your device, from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user’s part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Please note that this is a voluntary manufacturer’s warranty and provides rights in addition to, and does not affect statutory rights of end-users.

This guarantee does not apply if batteries other than DORO original batteries are used.

26. COPYRIGHT AND OTHER NOTICES

© 2017 Doro AB. All rights reserved.

Bluetooth® is a registered trademark of Bluetooth SIG, inc.

vCard is a trademark of the Internet Mail Consortium.

microSD is a trademark of SD Card Association.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

27. TECHNICAL DATA

Specifications

Network bands (MHz) [maximum radio-frequency power/dBm]:	
4G LTE	1 (2100) [23], 3 (1800) [23], 7 (2600) [23.5], 8 (900)[23], 20 (800)[23]
3G UMTS	1 (2100) [23.5], 8 (900) [24], 82 (1900) [23.5]
2G GSM	900 [33.5], 1800 [30.5], 1900 [30.5]
Bluetooth (MHz) [maximum radio-frequency power/dBm]:	4.2 (2402 - 2480) [7]
Wi-Fi, band (MHz) [maximum transmit power, dBm]:	IEEE 802.11 b/g/n, (2412 - 2472) [16]

GPS receiver:	Category 3
Operating system:	DorOS
SIM card size	nano-SIM (4FF)
Dimensions:	109 mm x 57 mm x 21 mm
Weight:	124 g (including battery)
Battery:	3.7 V / 1350 mAh Li-ion battery
Operating ambient temperature:	Min: 0°C (32°F) Max: 40°C (104°F)
Charging ambient temperature:	Min: 0°C (32°F) Max: 40°C (104°F)
Storage temperature:	Min: -20°C (-4°F) Max: 60°C (140°F)

Hearing aid

This device should work with most hearing aid equipment in the market. However, full compatibility with all equipment can not be promised.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines from the independent scientific organization ICNIRP (International Commission of Non-ionizing Radiation Protection).

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg averaged over 10 grams of tissue and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Head SAR: 1.102 W/kg
Body SAR: 1.661 W/kg

During normal use, the SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the output power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.
This device meets RF exposure guidelines when used against the head or when positioned at least 0.5 cm away from the body. When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above stated separation distance from the body.

The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you reduce your usage or use a hands-free accessory to keep the device away from your head and body.

Correct disposal of this product

 (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or manual indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This product is RoHS compliant.

Correct disposal of batteries in this product

(Applicable in countries with separate collection systems)



The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

EU Declaration of Conformity

Hereby, Doro declares that the radio equipment type DFB-0280 (Doro 7010) is in compliance with Directives:2014/53/EU and 2011/65/EU including delegated Directive (EU) 2015/863 amending Annex II.

The full text of the EU declaration of conformity is available at the following internet address: www.doro.com/dofc

FCC notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules/Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC can require you to stop using your unit if such interference cannot be eliminated.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void he user’s authority to operate the equipment.

FCC RF exposure information (SAR)

This model phone meets the government’s requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest

certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.779 W/kg and when worn on the body, as described in this user guide, is 1.159 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on **FCC ID: W55DFB0280**.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 3/8 inch (1.0 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 3/ 8 inch (1.0 cm) from your body when the phone is switched on.

*In the United States, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

Model: DFB-0280

Doro 7010 (1031,1041)

QSG

English

QSG_Doro_7010_en(CE,FCC)_A3(A7)_v10