 


# Doro PhoneEasy® 516

## Quick Start Guide

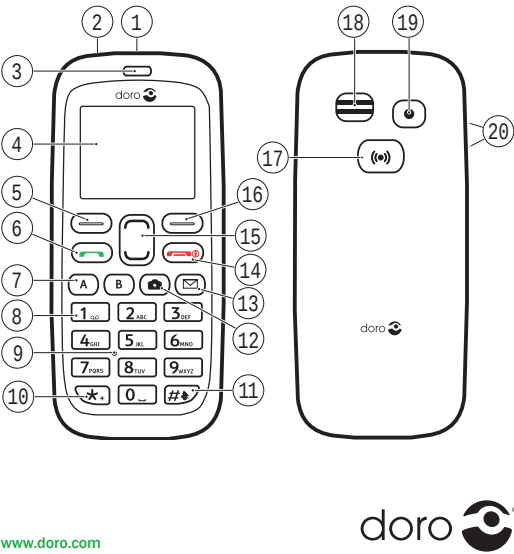

1. Charging socket

2. Headset socket

3. Earpiece

4. Display

5. Left selection button

6. Call button

7. Speed dials

8. Voice mail

9. Microphone

10. Keypad lock

11. Silent / Input method

12. Camera shortcut

13. Message shortcut
14. End call / Power on/off

15. Arrow buttons

16. Right selection button

17. Assistance button

 
18. Loudspeaker

19. Camera lens

20. Volume control

21. Charging stand (not included)

22. Lanyard (not included)

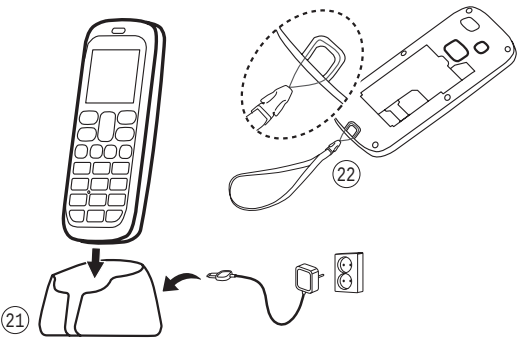

The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.


**Full user manual**  
For the full user manual please visit [www.doro.com.au/support/](http://www.doro.com.au/support/) or contact our Helpline.

### 1. INSTALLATION

 The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

**Important!**  
Turn off the phone and disconnect the charger before removing the battery cover.

**Installing the SIM card and battery**  
The SIM card holder is located behind the battery.

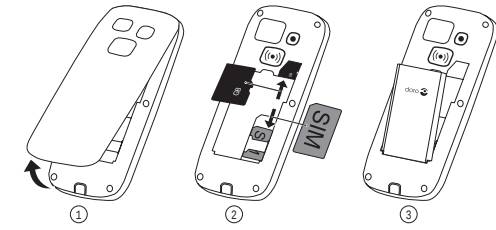

1. Remove the battery cover and the battery if it is already installed.

2. Insert the SIM card by gently sliding it into the holder. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is pointing upwards. Take care not to scratch or bend the contacts on the SIM card.

3. Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right.

4. Replace the battery cover.

### Charging

**CAUTION**  
Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low, is displayed and a warning signal is heard. To charge the battery, connect the mains adapter to the wall socket and to the charging socket .

### 2. OPERATION

**Activating the phone**  
Press and hold the red button on the phone to turn it on/off. Confirm with **Yes** to power off.  
If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN:** is displayed. Enter the PIN code and press **OK**. Delete with **Clear**.  
**Note!** If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

**Attempts:** # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).  
1. Enter the PUK code and confirm with **OK**.  
2. Enter a new PIN code and confirm with **OK**.  
3. Re-enter the new PIN code and confirm with **OK**.

### Keypad lock

1. Press **Menu** ➔ **Settings** ➔ **Security** ➔ **Keypad lock:**
  - **Auto keylock** select the time delay for automatic keypad locking.
  - **Unlock mode** select **Single key** to unlock the keypad with alternatively with **Dual key** to lock/unlock with right selection button (**Name/Unlock**) and .

2. Press **OK** to confirm or **Back** to discard changes.

### Start-up wizard

When starting the telephone for the first time, you can use the start-up wizard to set some basic settings.  
**Tip:** You can run the Start-up wizard later if you want.

**Changing the language, time and date**  
The default language is determined by the SIM card. See **Settings** in the full manual on how to change language, time and date.

### Volume control

Use +/- to adjust the sound volume during a call. The volume level is indicated on the display. See also **Audio setup** in the full manual.

### 3. CALLS

#### Making a call

1. Enter the phone number including the area code. Delete with **Clear**.

2. Press to dial. Press **Abort** to cancel dialling.

3. Press to end the call.

#### Receiving a call

1. Press to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternately, press to reject the call directly.

2. Press to end the call.

**Note!** For international calls, always use + before the country code for best operation. Press twice for the international prefix +.

### Making a call from the Phonebook

1. Press **Name** to open the phonebook.

2. Use / to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the name.

3. Press **Call** to dial the selected entry, or press **Back** to return to standby.

### 4. PHONEBOOK

The Phonebook can store 300 entries with 3 phone numbers in each entry.

#### Add contact

1. Press **Menu** ➔ **Phonebook** ➔ **-New contact-** ➔ **Add**.

2. Enter a **Name** for the contact, see **Entering text**. Delete with **Clear**.

3. Use / to select **Mobile**, **Home** or **Office**, and enter the phone number(s) including the area code.

4. Select **Picture** ➔ **Edit** to associate a picture to the contact. This picture will be displayed when you call the corresponding contact or when they are calling you.
  - **Take picture** to use the camera to take a picture.
  - **My pictures** to select an existing picture.

5. Press **Save**.

See **Settings/General/Phonebook/Phonebook picture** in the full manual.

### 5. SPEED DIAL

Use **A-B**, **0** and **2-9** to speed dial an entry from standby.

- Press and hold the corresponding button.

#### Add speed dial numbers

1. Press **Menu** ➔ **Settings** ➔ **Phonebook** ➔ **Speed dial**.

2. Select **A** ➔ **Add** an select an entry from the phonebook.

3. Press **OK** to confirm.

4. Repeat to add speed dial entries for buttons **B**, **0**, **2-9**.

### 6. CAMERA

To get sharp photos, wipe the lens clean with a dry cloth.

#### Take photos

1. Press shortcut . Alternatively press **Menu** ➔ **Camera** ➔ **Camera**.

2. Press to take photo.

3. Press **Options** or **Back** (if you do not make any selection the picture is saved).

#### Video camera

1. Press shortcut . Alternatively press **Menu** ➔ **Camera** ➔ **Video camera**.

2. Press to record.

3. Press to stop recording. Select **Yes** to save.

4. Press **Back** to return.

### 7. ADDITIONAL FUNCTIONS

#### Entering text

Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character. Press for a list of special characters. Select the desired character and press **OK** to enter it. Use / to move the cursor within the text. Press to cycle upper case, lower case and numerals.

#### Call options

During a call the soft keys give access to additional functions.

#### Silent

**Silent** is a fixed profile with keypad tone, message tone and ring tone disabled, while Vibration, Tasks and Alarm are unchanged. Press and hold to activate/deactivate Silent.

#### SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

8. CALL LOG

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

Retrieving and dialling

- 1. Press .
- 2. Use / to scroll through the call log.
-  = Received call
-  = Dialled call
-  = Missed call
- 3. Press  to dial the number.

9. ASSISTANCE BUTTON

The assistance button allows easy access to contact your predefined help numbers should you need help. The assistance function may need to be activated before use. See the full manual on how to activate, how to enter recipients in the numbers list, and how to edit the text message.

- Press **Menu** ➔ **Settings** ➔ **Assistance**.

**Important!**  
Always inform recipients in the Number list that they are listed as your assistance contacts.

 **CAUTION**  
When an assistance call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

**Note!** Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number.  
See **Settings/Assistance** in the full manual.

10. MESSAGES

Create and send text messages

- 1. Press shortcut button .  
Alternatively press **Menu** ➔ **Messages**.
- 2. Select **Create new** ➔ **SMS**.
- 3. Write your message, see **Entering text**, then press **To**.
- 4. Select a recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
- 5. Select **Add** to add more recipients. You can modify the recipients by selecting one and press **Options** ➔ **Edit/Delete/Delete all**.
- 6. Press **Send** to send.

Create and send picture messages

- 1. Press shortcut button .  
Alternatively press **Menu** ➔ **Messages**.
- 2. Select **Create new** ➔ **MMS**.
- 3. Write your message, see **Entering text**.
- 4. Press **Options** ➔ **Add picture**:
  - **My pictures** to select an existing picture.
  - **Take picture** to use the camera to take a picture.  
You can also **Add sound** and **Add video** using the **Options** menu.
- 5. Select **Add subject** and enter your subject, then press **Done**.
- 6. Select **To** and select a recipient from **Phonebook**. Alternatively, select **Enter number** to add recipient manually and press **Done**.
- 7. Select **Add** to add more recipients.
- 8. Press **Send** to send.

11. ICE (IN CASE OF EMERGENCY)

First responders can access important information such as medical information from the victim’s phone  **ICE** in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

- 1. Press **Menu** ➔ **ICE**.
- 2. Use / to scroll the list of entries.
- 3. Press **Edit** to add or edit information in each entry. Delete with **Clear**.
- 4. Press **Save** when done.

See **Phonebook/ICE** in the full manual.

12. SETTINGS

The  settings described in this chapter are carried out in standby mode. Press  to return to standby mode.

Tone setup

- 1. Press **Menu** ➔ **Settings** ➔ **Sound**.
- 2. Select **Tone setup** ➔ **Ringtone**.
- 3. Use / to select one of the available melodies, the melody will be played.
- 4. Press **OK** to confirm or **Back** to discard changes.

Themes

You can select different themes to personalise the phones display text and background.

- 1. Press **Menu** ➔ **Settings** ➔ **Display** ➔ **Themes**.
- 2. Use / to select a theme.
- 3. Press **OK** to confirm.

13. SAFETY INSTRUCTIONS

 **WARNING**  
The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.  
The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

**Network services and costs**  
Your device is approved for use on the WCDMA 850/2100MHz, GSM 900/1800/1900MHz networks. To use the device, you need a subscription with a service provider.  
Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

**Operating environment**  
Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.  
This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.  
Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.  
Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress. Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

**Li-ion battery**  
This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.

 **WARNING**  
Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Protect your hearing



**WARNING**  
Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Emergency calls

**Important!**  
Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

**Vehicles**  
Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.  
Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories.  
For vehicles equipped with air bags: Remember that air bags fill with air with considerable force. Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand.

Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air. It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

14. CARE AND MAINTENANCE

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
  - Do not use or keep the unit in dusty, dirty environments. The unit’s moving parts and electronic components can be damaged.
  - Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
  - Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
  - Do not try to open the unit in any other way than that which is indicated here.
  - Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
  - Do not use strong chemicals to clean the unit.
- The advice above applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don’t forget the receipt or a copy of the invoice.

15. SPECIFICATIONS

|                                       |                                          |
|---------------------------------------|------------------------------------------|
| <b>Network:</b>                       | WCDMA 850/2100MHz, GSM 900/1800/1900 MHz |
| <b>Dimensions:</b>                    | 119 mm x 53 mm x 14 mm                   |
| <b>Weight:</b>                        | 93 g (including battery)                 |
| <b>Battery:</b>                       | 3.7V/800 mAh Li-ion battery              |
| <b>Operating ambient temperature:</b> | Min: 0°C (32°F) Max: 40°C (104°F)        |
| <b>Charging ambient temperature:</b>  | Min: 0°C (32°F) Max: 40°C (104°F)        |
| <b>Storage temperature:</b>           | Min: -20°C (-4°F) Max: 60°C (140°F)      |

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules/Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and the receiver.
  - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The FCC or Industry Canada can require you to stop using your unit if such interference cannot be eliminated.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void he user’s authority to operate the equipment.

**Declaration of Conformity**  
Doro hereby declares that **Doro PhoneEasy® 516** conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS). A copy of the Declaration of Conformity is available at [www.doro.com/dofc](http://www.doro.com/dofc).

Copyright and other notices

©2014 Doro AB. All rights reserved.  
Bluetooth® is a registered trademark of Bluetooth SIG, inc. eZiType™ is a trademark of Zi Corporation.  
vCard is a trademark of the Internet Mail Consortium. microSD is a trademark of SD Card Association.  
The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.  
Other product and company names mentioned herein may be the trademarks of their respective owners.  
Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.  
Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

**Content copyright**  
The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

WEEE

Disposal of Waste Equipment by Users in Private Households in the European Union. This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Where batteries or accumulators are collected together with waste electrical and electronic equipment on the basis of Directive 2012/19/EC, batteries or accumulators shall be removed from the collected waste electrical and electronic equipment.

PhoneEasy 516 (1031)  
FCC ID: WS5DOR0516

QSG  
English (AU/NZ)  
Version 1.1  
©2014 Doro AB. All rights reserved.



**Specific Absorption Rate (SAR)**  
**Bands WCDMA 2100 MHz, GSM 900/1800 MHz**  
This device meets applicable international safety requirements for exposure to radio waves. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.913 W/kg measured over 10 g tissue.  
The maximum limit according to ICNIRP is 2.0 W/kg measured over 10 g tissue.  
**RF exposure information (SAR)**  
**Bands WCDMA 850 MHz, GSM 1900 MHz**  
This model phone meets the government’s requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government and by the Canadian regulatory authorities.  
The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC and Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.  
The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.004 W/kg and when worn on the body, as described in this user guide,

is 0.91 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)  
While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on FCC ID: **WS5DOR0516**  
For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 5/8 inch (1.5 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 5/8 inch (1.5 cm) from your body when the phone is switched on.  
\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

**FCC/Industry Canada notice**  
This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.