



 
 
 
BLUETOOTH HEADSET

User Manual

Contents

1. Product Overview.....	3
2. Basic Operations.....	4
3. Bluetooth Pairing & Connection.....	5
4. Dual Device Connection.....	6
5. Status Indicators.....	7
6. Voice Prompts.....	8
7. Charging.....	9
8. Technical Specifications.....	9
9. FAQs & Troubleshooting.....	10

1. Product Overview

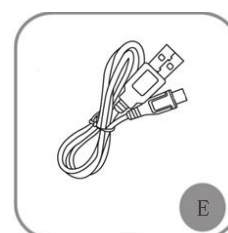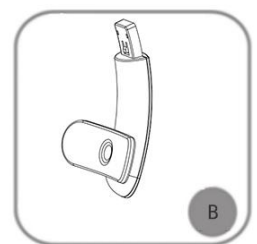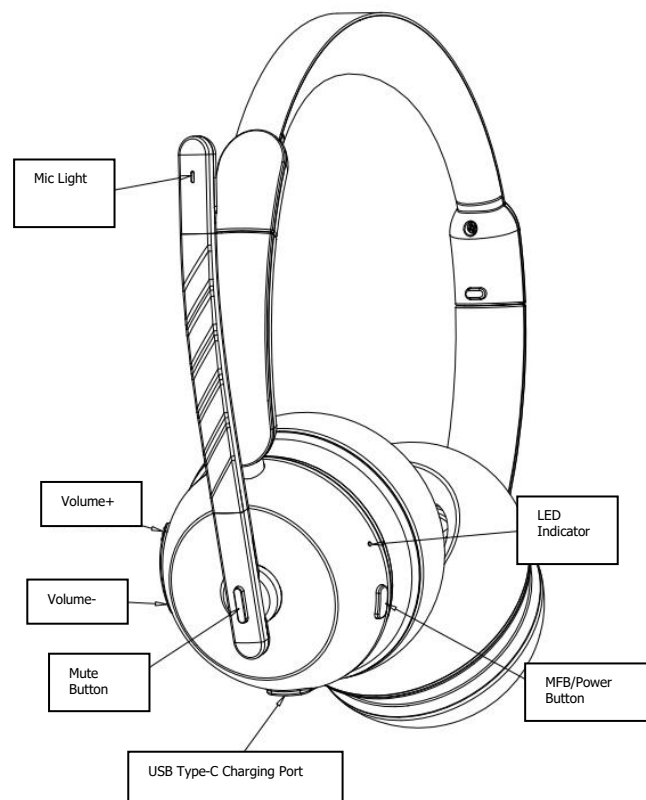

Package list :

- A. M121 Stereo Bluetooth Headset ×1
- B. Anti Slip Pad ×1
- C. Charging Dock ×1
- D. USB Type-C Cable ×1
- E. User Manual ×1

2. Basic Operations

Button	Function	Operation
Power Button	Power On	When powered off, press and hold the power button for 2 to 3 seconds.
	Power Off	When powered on, press and hold the power button for 3 seconds.
	Pairing Mode	a. If no devices are paired, the headset will enter pairing mode and the LED indicator will alternate between red and blue lights; b. You can also manually enter pairing mode by disconnecting Bluetooth on your phone.
MFB	Redial Last Call	In standby or music mode, double click MFB to call last dialed number.
	Voice Dialing	When connected, press and hold MFB for 1 second to activate phone voice dialing.
	Answer Call	When call arrives, short press MFB to answer the phone.
	End Call	During call, short press MFB to hang up the phone
	Reject Call	When call arrives, press and hold MFB for 1 second to reject the call
	Play/Pause	When playing music, short press MFB to pause or play music
	Audio Switch	During call, press and hold MFB for 1-2 seconds to change between phone and headset.
	Multi-call	A. When you receive a call, short press the MFB to answer the new call and end the current call; b. If you are on a call and receive another call, double click the MFB to answer the new call and keep the current call active. You will hear a prompt tone; c. If you are on a call and receive another call, press and hold the MFB for one second to keep the current call and reject the new call; d. During a multi-call, double click the MFB to switch between the current call and the reserved call. You will hear a prompt tone.
Volume + button	Increase Volume	During music playback or calls, briefly press the Volume + button to increase the volume. A beep will sound when maximum volume is reached.
	Next track	While in music mode or standby, press and hold the Volume + button for 1 second to skip to the next song.
Volume - button	Decrease Volume	During music playback or calls, briefly press the Volume - button to lower the volume. A beep will sound at minimum volume.

	Previous Track	While in music mode or standby, press and hold the Volume - button for 1 second to return to the previous song.
Mute button	Mic mute / Cancel mute	During calls, press the mute button once to mute the microphone. You will hear "mute on". The LED Indicator will flash blue every 10 seconds and the Mic Light will flash red every 5 seconds. Press the mute button again to unmute. You will hear "mute off". The LED Indicator will flash blue every 10 seconds and the Mic Light will stay red continuously.
Dual-Button Operation	Clear pairing records	When the headset is powered on but not in a call, simultaneously press and hold the MFB and Volume - button for 5 seconds. All pairing records will be erased and the headset will require re-pairing.

3. Bluetooth Pairing & Connection

A. To enter pairing mode, power off the headset, then press and hold the MFB for 2-3 seconds until the LED indicator begins alternating between red and blue lights, at which point the headset will automatically enter pairing mode.

B. To connect with your phone, enable Bluetooth on your phone, and select "M121" from the discovered devices. Once connected, you can listen to music and take calls through the headset.

C. The headset provides full control over calls and media playback. Use the buttons to manage call functions, adjust volume, skip tracks, or mute the microphone as needed during operation.



1. Pairing

Power off the headset, then press and hold MFB for 2-3 seconds to power on and enter pairing mode automatically.

 
2. Connect

Search and connect

Turn on Bluetooth on your phone and search for devices. Select "M121" when it appears to complete pairing. Your phone will then show that "M121" is connected.

4. Dual Device Connection

- Devices connected to "M121" are designated as Device A and Device B;
- To begin, power on "M121" to activate pairing mode. Enable Bluetooth on Device A, search for "M121", and select it to connect. After Device A is connected, keep "M121" in pairing mode.
- Then connect Device B following the same steps. When both devices are paired, "M121" will maintain both connections. Only one device can play audio at a time. The device that starts playback first gets priority. To switch playback, pause or stop audio on the currently playing device.

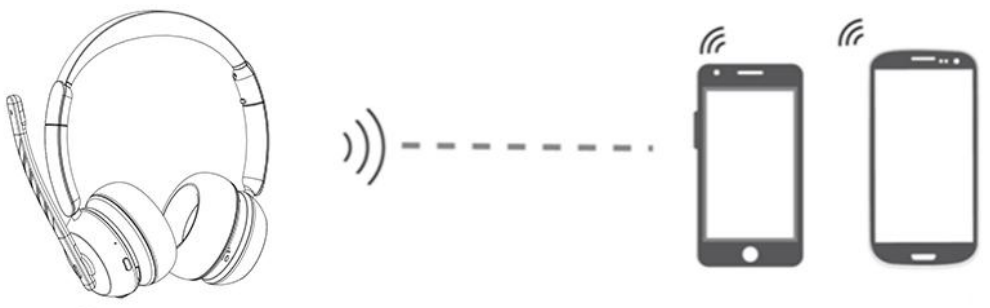

5. Status Indicators

Headset

Status	LED Indicator
Power On	The blue LED flashes twice, and the mic light remains off.
Power Off	The red LED flashes twice, and the mic light remains off
Pairing Mode	The red and blue LEDs flash alternately, and the mic light remains off.
Clear Pairing	The red LED stays on for 1 second, and the mic light remains off.
Standby (Connected)	The blue LED flashes once every 10 seconds, and the mic light remains off.
Music Mode	The blue LED flashes twice every 10 seconds, and the mic light remains off.
Call Mode	The blue LED flashes once every 10 seconds. During unmuted calls, the mic light remains steady red. During muted calls, the mic light flashes red every 5 seconds.
Charging	The red LED stays on, and the mic light remains off.
Fully Charged	The red LED turns off and the blue LED stays on. The mic light remains off.
Low Battery	The red LED flashes, and the mic light remains off.

Charging Base

Status	LED Indicator
Charging	The red light flickers slowly
Fully Charged	The blue light is always on
Standby	The blue light is always on

6. Voice Prompts


Status	Prompt Message
Power On	Power on
Power Off	Power off
Pairing Mode	pairing
Mic Mute On	mute on
Mic Mute Off	mute off
Low Battery	Low battery please charge
Disconnected	Your headset is disconnected
Connected	Your headset is connected

7. Charging

When the "M121" battery is low, the red LED indicator flashes. Please charge it immediately. Full charging takes approximately 2 hours. The blue LED indicator remains steady when fully charged.

Charging connection

 Please connect the Type-C end of the charging cable to the "M121" charging port and the USB end to a USB charger such as a car charger, travel charger, or computer USB.

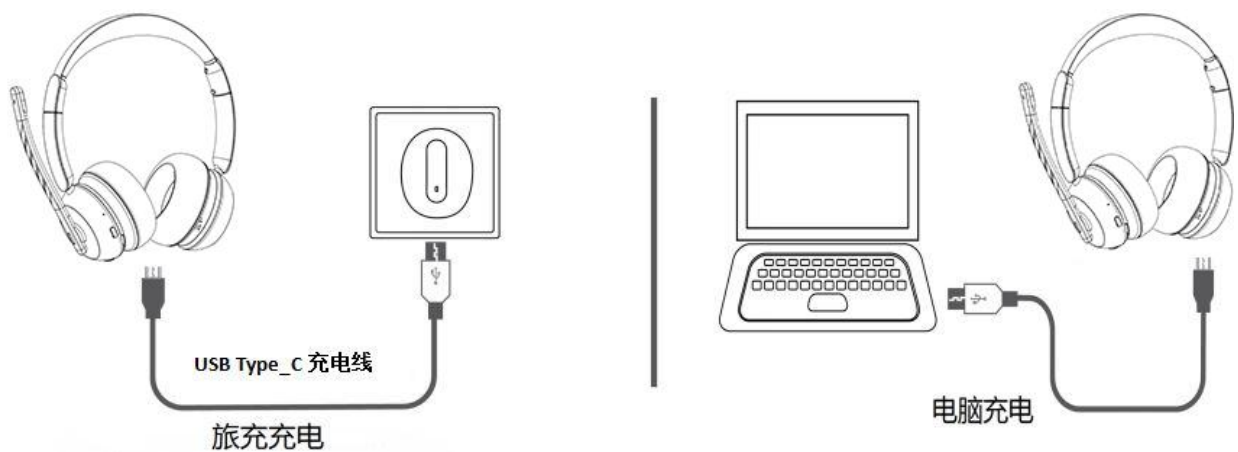

USB Type-C charging cable

旅充充电: AC adapter charging

电脑充电: USB charging

*Note: 1. When M121 is not in use, please charge it at least once every two months.

8. Technical Specifications

Headset

Bluetooth Version	V5.3
Bluetooth Chip	BT8925B2
Wireless Range	Ten metres

Supported Profiles	HFP A2DP AVRCP
Audio Codecs	AAC SBC
Battery Capacity	400mAh /3.7V
Charging Time	About 2 hours
Standby Time	About 400 hours
Music time	About 45 hours (at 70% volume)
Talk time	About 20 hours (at 70% volume)
Headset Net Weight	About 206.8g
Headset Dimensions	186.8*186.5*72.4mm

Charging Base

Charging output	5V DC ≥500mA
Operating Temperature	-10°C to 55°C
Base Net Weight	About 153.6g
Base Dimensions	86.4*110.8*91.1mm

9. FAQs & Troubleshooting

A. How to Reconnect?

The M121 automatically reconnects to your last paired device when powered on. If automatic reconnection fails, you can either select "M121" from your phone's Bluetooth menu or reset the headset by pressing and holding both the MFB and Volume - button simultaneously for 5 seconds before pairing again.

B. How to clear pairing records?

With the headset powered on and not in a call, press and hold both the MFB and Volume - button for 5 seconds. The red LED remaining steady for 1 second confirms all M121 pairing records have been cleared, which may resolve connection issues.

C. What is the paired password?

If your device asks for a password to connect to M121, try these common default codes such as 0000 (four zeros), 8888 (four eights), 1111 (four ones) or 1234.

D. Which chargers can I use?

M121 supports charging from any standard 5V DC power source providing minimum 500mA current, including wall chargers, car chargers and computer USB ports.

E. What to do when experiencing headset issues?

If your headset is not functioning properly, first make sure it's turned on and not in a call. To clear all paired devices, press and hold the MFB and volume - buttons together for 5 seconds. For a complete factory reset, press and hold only the MFB button for 10 seconds.

CORRECT DISPOSAL OF THIS PRODUCT

垃圾桶 (Waste Electrical& Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can

radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.