 
 
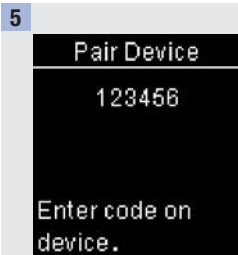 


Pair Device appears. Press to highlight **Yes**. Press **OK**.

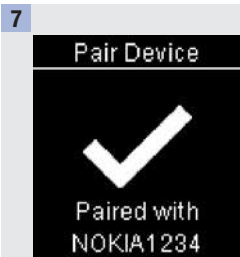

The meter displays its code.

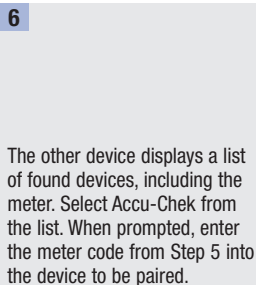


When pairing is complete, a checkmark and the name of the paired device appear. Press **OK** to return to **Wireless**.

DRAFT


7 Wireless Communication and Meter Pairing

Flight Mode (Main Menu > Settings > Wireless > Flight Mode)


Select whether wireless communication is available or not. When **Flight Mode** is on, the airplane icon appears in the title bar and wireless communication is not available.

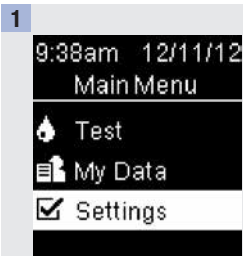


Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

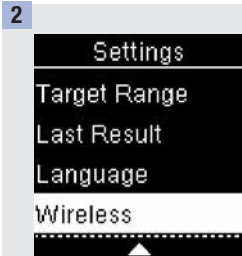

Press **▼** to highlight **Wireless**. Press **OK**.

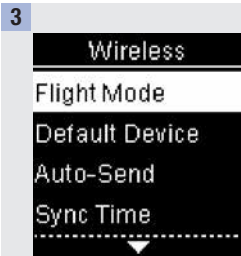

 Flight Mode is highlighted. Press **OK**.

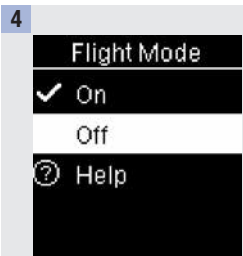

Press **▲** or **▼** to highlight **On** or **Off**. Press **OK** to move **✓** to the option. Press **OK** to set the option and return to **Wireless**.

DRAFT

Default Device (Main Menu > Settings > Wireless > Default Device)

If more than 1 device is paired, select the default paired device for the **Auto-Send** and **Sync Time** features.

1

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **OK** to highlight **Settings**. Press **OK**.

2

Press **OK** to highlight **Wireless**. Press **OK**.

3

Press **OK** or **OK** to highlight **Default Device**. Press **OK**. A list of paired devices appears.

4

 
Press **OK** or **OK** to highlight the device you want as the default device. Press **OK** to set the option and return to **Wireless**.

DRAFT


7 Wireless Communication and Meter Pairing

Auto-Send (Main Menu > Settings > Wireless > Auto-Send)


Select whether data is automatically sent to the default paired device after each test.

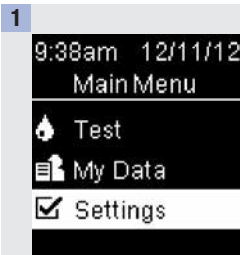


Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

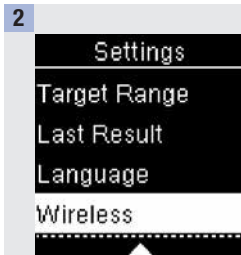

Press **▼** to highlight **Wireless**. Press **OK**.

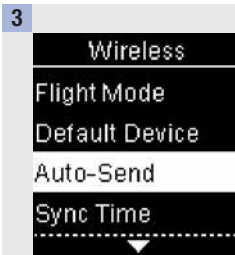

 Press **▲** or **▼** to highlight **Auto-Send**. Press **OK**.

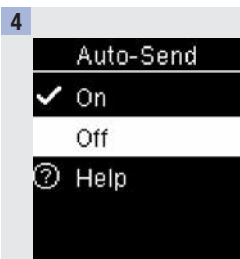


Press **▲** or **▼** to highlight **On** or **Off**. Press **OK** to move **✓** to the option. Press **OK** to set the option and return to **Wireless**.

DRAFT

Sync Time (Main Menu > Settings > Wireless > Sync Time)

Select whether to synchronize the time and date to the default paired device.

 1

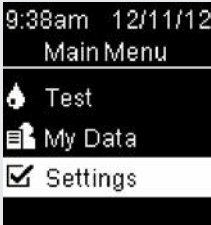

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

2



 
Press **▼** to highlight **Wireless**. Press **OK**.

3



Press **▲** or **▼** to highlight **Sync Time**. Press **OK**.

4

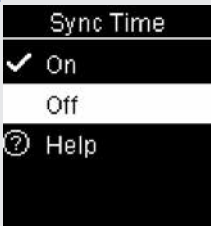

Press **▲** or **▼** to highlight **On** or **Off**. Press **OK** to move **✓** to the option. Press **OK** to set the option and return to **Wireless**.

DRAFT

7 Wireless Communication and Meter Pairing

Pairing Additional Devices (Main Menu > Settings > Wireless > Pairing > Pair Device)


This procedure is to add another paired device (assumes there is already 1 paired device).

You can pair 5 devices.

If you have 5 paired devices, you must delete a pairing before you can add another device.

The device you choose remains as the default until you change it.

1

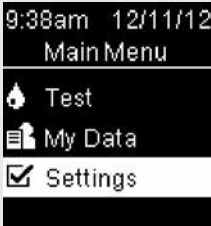

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

2



Press **▼** to highlight **Wireless**. Press **OK**.

3



Press **▲** or **▼** to highlight **Pairing**.

 
DRAFT

4



Press **▲** or **▼** to highlight **Pair Device**. Press **OK**.

If there are less than 5 paired devices, **Pair Device** appears. Go to Step 5.

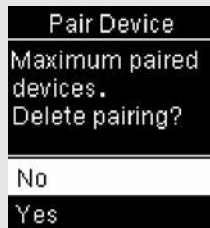

If there are already 5 paired devices, **Pair Device** appears. You must delete a paired device before you can proceed to Step 5. Select **Yes**. Press **▲** or **▼** to highlight the device to delete. Press **OK**. Proceed to Step 5.



5

Prepare the other device for pairing. Refer to the other device's instructions for information about pairing.

6



The meter displays its code.

7

The other device displays a list of found devices, including the meter. Select Accu-Chek from the list. When prompted, enter the meter code from Step 6 into the device to be paired.

DRAFT


7 Wireless Communication and Meter Pairing

8



When pairing is complete, ✓ and the name of the paired device appear. Press **OK**.

9

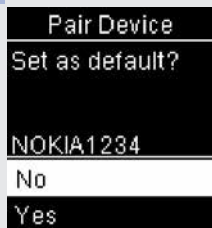

If there is more than 1 paired device, you will be asked if you want the new device to be the default device.

Press **▲** or **▼** to highlight **No** or **Yes**. Press **OK** to set the option and return to **Pairing**. Press **ESC** to return to **Wireless**.

DRAFT

Delete Pairing (Main Menu > Settings > Wireless > Pairing > Delete Pairing)

This procedure is to delete a paired device (assumes there is at least 1 paired device).

You can pair 5 devices. If you have 5 paired devices, you must delete a pairing before you pair to another device.

The device you choose remains as the default until you change it.

9:38am 12/11/12
Main Menu

🔥
Test

📄
My Data

☑
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

Settings

📏
Target Range

📊
Last Result

🗣
Language

📶
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.

Wireless

📶
Default Device

📶
Auto-Send

🕒
Sync Time

📶
Pairing

Press **▲** or **▼** to highlight **Pairing**. Press **OK**.

7 Wireless Communication and Meter Pairing

4



Press **▲** or **▼** to highlight **Delete Pairing**. Press **OK**.

5



Press **▲** or **▼** to highlight the device to delete. Press **OK** to set the option.

DRAFT

6

Delete Pairing

Press OK to
choose new
default device.

If the selected device is not the default device, the pairing is deleted. ✓ and the name of the deleted device appear.

If the selected device is the default device, you are asked to select a new default device. If there is only 1 device remaining, it becomes the default device. The list of paired devices appears.

Delete Pairing

Deleted:
NOKIA1234



New default:
DROID456

Highlight the new default device and press **OK**. ✓ and the name of the deleted device appear, along with the new default device.

DRAFT

7 Wireless Communication and Meter Pairing

DRAFT