

148MM


Wireless Remote  
for Wii / Wii U

USER MANUAL

105MM


Thank you for choosing a Biogenik product. Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference.

Product Diagram: (see below)

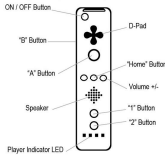

Setup Instructions:

- 1.Remove the battery compartment cover from the Remote and place 2 (two) AA batteries inside. Please ensure they are inserted correctly before proceeding.
- 2.Press the red pairing button located on the back of the Remote and the LED's will begin flashing.
- 3.While the Remote LED's are still flashing, press the pairing button located on the front of the Wii console to complete the connection process. Once connected, one of the four LED's will light up, indicating that the Remote is properly connected.
- 4.When connection is complete, replace the battery compartment cover.

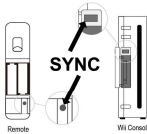

LED Backlight Feature:

Wireless Remote – Press the Power button to turn the glowing feature on/off.  
*NOTE: Press and hold the Power button to turn the Remote on/off.*

Troubleshooting Tips:

- Remote not working:
- Change the batteries in the Remote
  - Ensure the Remote is properly synchronized with the Wii console
  - Refer to the Wii console instruction Manual for more troubleshooting tips

WARNING:

We recommend taking fifteen-minute breaks for every hour played. If, at any time, you feel joint pain in your hands, wrists, elbows or elsewhere, stop playing until the symptoms disappear and see your doctor.

DO NOT LET GO OF THE CONTROLLER DURING GAME PLAY.

- Read the instruction booklet for the game you are playing and follow all game control instructions for correct use of the Remote or accessory controllers.
- Hold the Remote securely and avoid excessive motion, as it may cause you to let go of the Remote.
- If your hands become moist, stop and dry your hands.

ALLOW ADEQUATE ROOM AROUND YOU DURING GAME PLAY.

- 1.Stay at least three (3) feet away from the television.
- 2.As you may move around during game play, make sure objects and other people are out of your range of movement or arm motion to prevent damage or injury.

Precaution & Maintenance:

Before use, please read the following important safety information. Following these simple guidelines will ensure trouble-free operation and optimal performance of the product and compatible electronic devices. Improper use may cause the product to stop working and may even cause serious injury to the user.

- This product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Failure to follow these directions may void the warranty.
- For indoor use only. Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture.
- Storage temperature should be between 41°F – 86°F (5°C – 30°C).
- Do not bend or crush the cable.
- Avoid pulling on the cable. Always grip the plug firmly when connecting/disconnecting the cable.
- Do not drop or subject the product to undue shock.
- Do not place anything on top of the product.
- Do not leave batteries in this product for long periods of non-use.

- Do not put the batteries in backwards. (Always make sure the positive and negative ends are inserted correctly).
- When inserting batteries, insert the negative end first.
- When removing batteries, remove the positive end first.
- Do not dispose of batteries in fire.
- Keep this product out of the reach of small children.
- Dispose of packaging material according to applicable local regulations.
- Do not attempt to service or disassemble. The unit is not user-serviceable. Attempting to disassemble or service the unit could result in an electrical hazard, including injury from exposure to shock. If you experience problems with the unit, discontinue use and contact Biogenik for assistance. Attempting to open or service the unit voids all warranties, expressed or implied.

Battery Safety:

Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Released battery fluid is corrosive and may cause skin and eye burns. It is extremely harmful if swallowed and may be toxic. KEEP BATTERIES OUT OF THE REACH OF CHILDREN. Leakage of battery acid can cause personal injury as well as damage to your product. If leaked battery fluid comes into contact with your eyes, immediately flush your eyes thoroughly with water and see a doctor, as it may result in blindness or other injury. If leaked battery fluid comes into contact with your body or hands, wash thoroughly with water. If leaked battery fluid comes into contact with the product, carefully wipe the product; avoid direct contact with your hands. Dispose of batteries in accordance with Local and National Disposal Regulations.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. MODIFICATIONS WILL VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.  
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

FCC ID: X5NLBI-315  
MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) may not cause harmful interference, and (2) must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.