



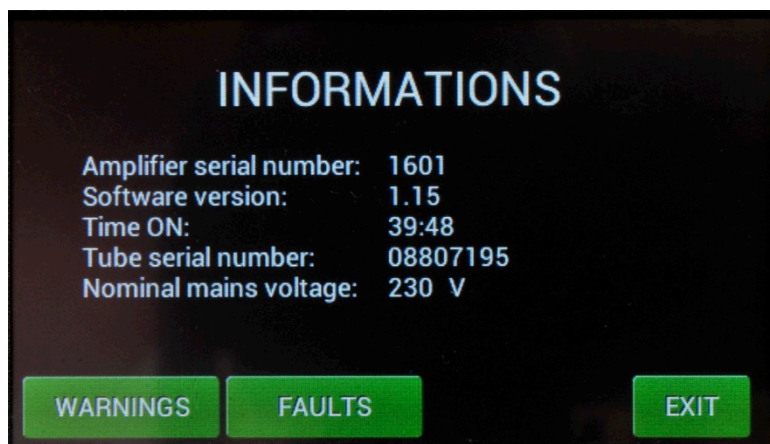

Also it provides an overview of the last 20 warnings and faults:


Touch **FAULTS**.

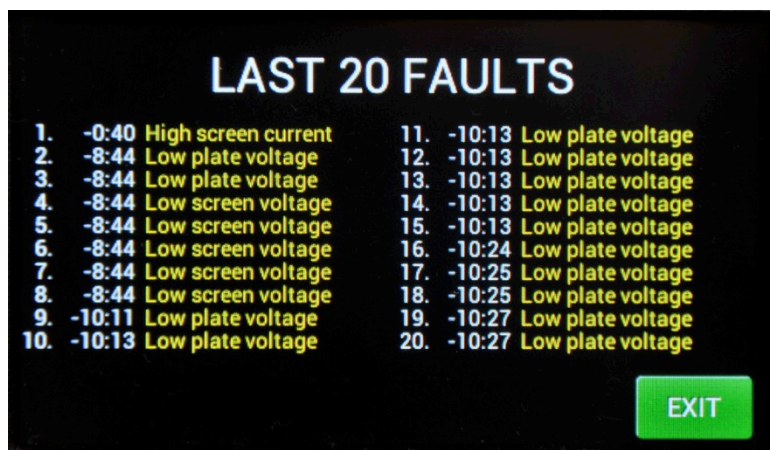

Press **EXIT** to go back to the home screen.



Now press **SETTINGS**. Display shows menu which allows to set CAT, ANTENNA, DISPLAY, EBS, CLEAR user settings for one or all bands, BLOWER mode and another INFO.

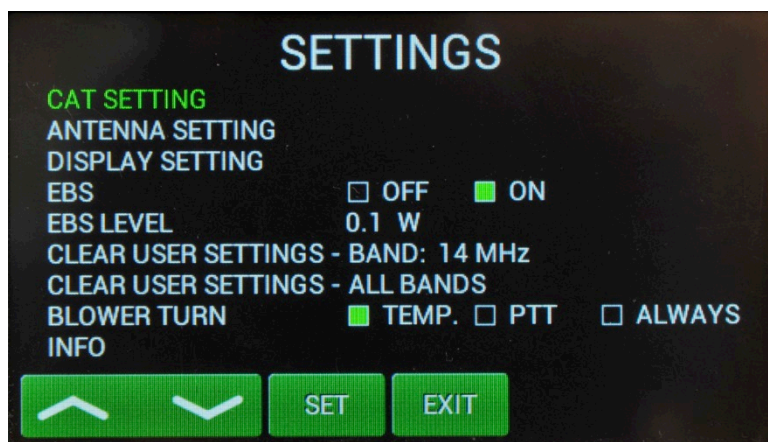

Scroll to **CAT SETTINGS** (up or down) and touch **SET**.



Scroll to your TCVR family (up or down) and select baudrate (left or right), then press **SET**.

Or select **NO CAT** and press **SET**.



If you choose **YAESU** or **ICOM NEW**, after **SET** pressing you will go to deeper level which allows you to select specific type of TCVR. See the following picture for **ICOM NEW** selection, for example.