


1. Product Appearance

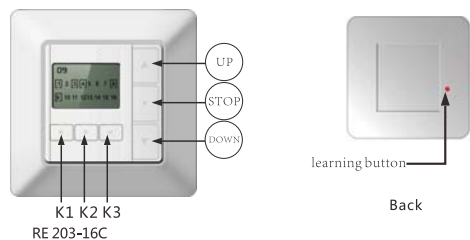

2. Technique Data

- Power: 3V Model: CR2032
- Working Temperature: -10 C to +60 C (LCD)
- Working Temperature: -20 C to +60 C (Non- LCD)
- Working Current: ≤ 12mA
- Code: Rolling Code
- Frequency: 433.92MHz


Battery Rated Voltage: 3V
Capacity: 210mAh

3. Code Learning Note: Please do not perform code learning in group control mode

01. Single Channel

Press Up and Down buttons simultaneously once, then short press Stop button once.


02. LCD multi-channel (take 8-channel emitter as an example)

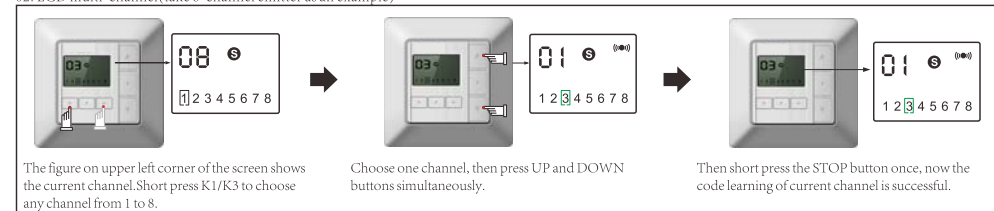


4. Single Control

Select a channel by press K1/K3 as the current channel, then you can control this channel by pressing UP/STOP/DOWN button.

5. Group Control (LCD) Short press K2 to choose Group Control (M) or Single Control (S).

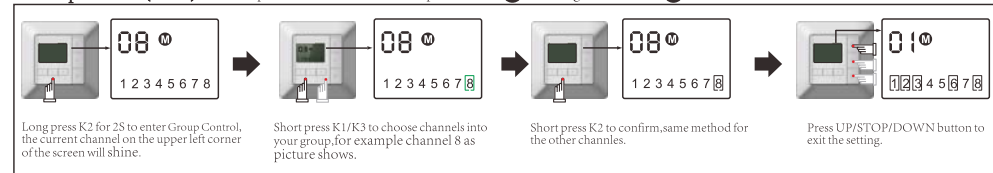


6. Delete Group Control

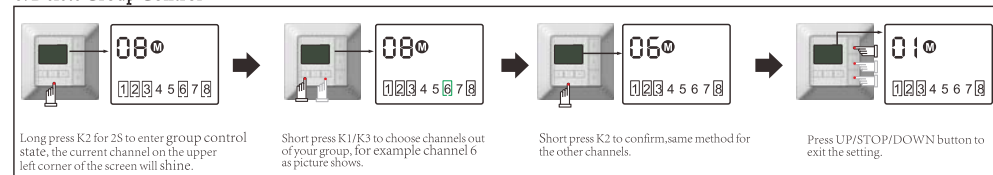

Note: Whether in (M) or (S) mode, the current channel is always selected


7. LCD timer emitter (4-channel)

01. Time Setting

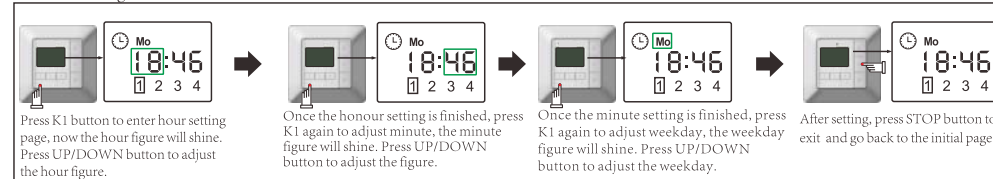


02. Timing Setting (set different time points to make the motor to close or open)

In the initial page, press K2 to enter timing setting page, there is a timing clock (M) on the upper left corner. You can respectively set 8 opening time and 8 closing time, in total 16 points, 1~8 Press K2 to cycle among 16 time points. Press K3 to choose the output channels which you want (single channel or 4 channels)

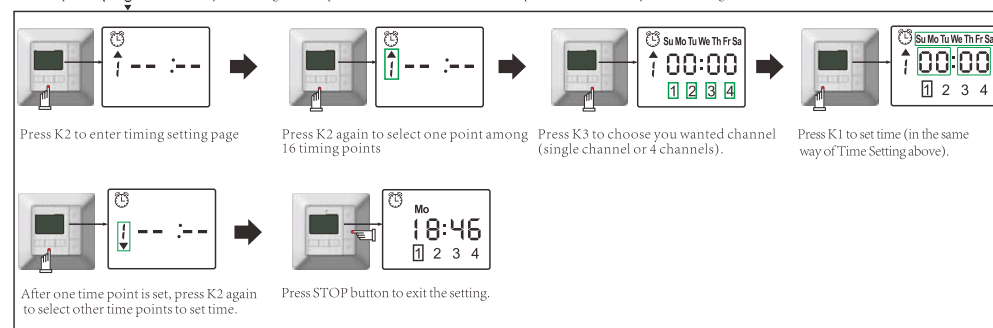


03. Close Timing Function

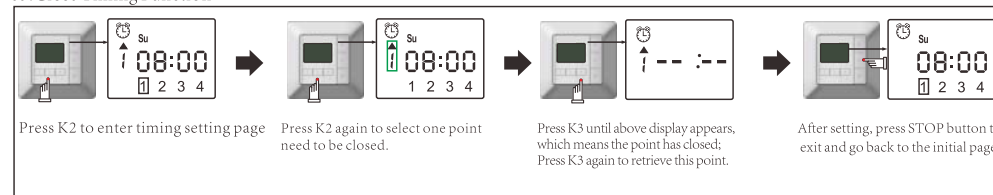


8.LCD timer emitter(1-channel)

01.Time Setting

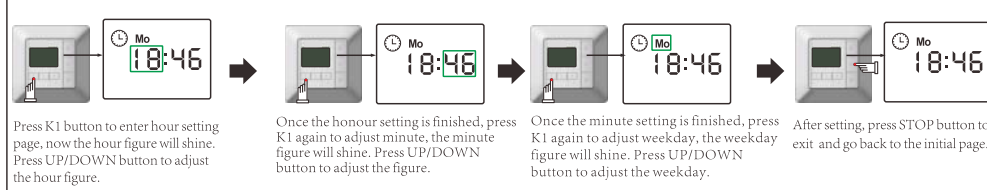


02.Timing Setting


In the initial page, press K2 enter timing setting page, there is a timing clock ⌚ on the upper left corner, You can respectively set 8 opening time and 8 closing time, in total 16 points 1~8 Press K2 to cycle among 16 time points.

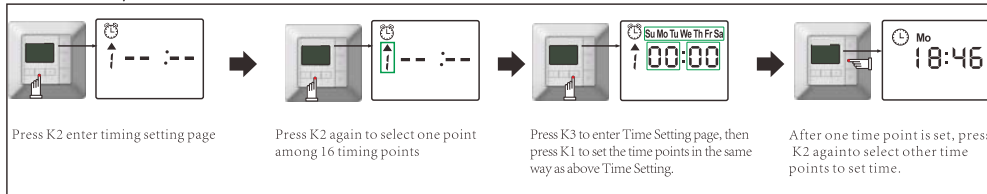

03.Close Timing Function

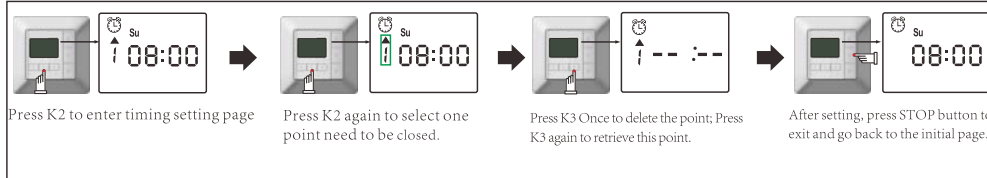

04.Stop Watch Function

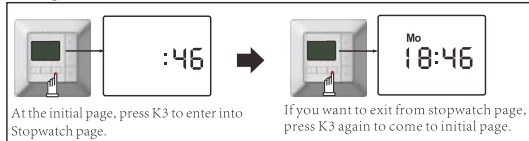

⚠ Note:

- You need enter timing setting page if you want set timing points. There should be a timing clock on the upper left corner, otherwise, the adjustment is invalid. If there is no clock on the screen, please hold Stop button and press K2 within 10 seconds, there will be a clock on the upper left corner.
- It is better not to press the emitter's buttons too long so as to prolong the battery life. The button press should be about 0.5s with 1s interval.
- The emitter would stop working if the battery is in low power. Please change new battery for the emitter

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.