


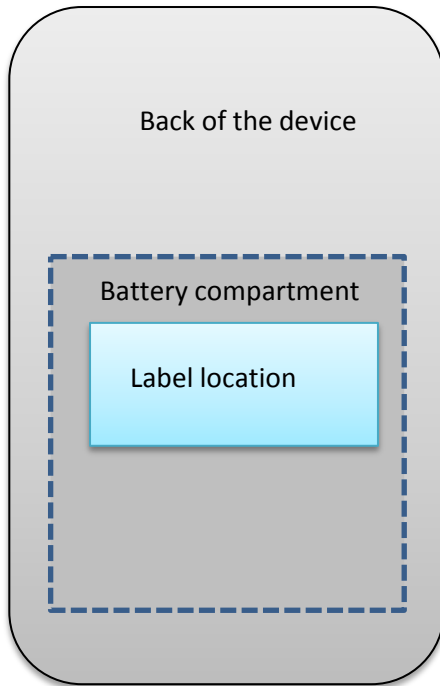

The label is placed in the battery compartment and it is viewable for the users as they install the SIM card.