 



nook
NOOK GlowLight™ 3
Quick Start Guide

1 Charge Your NOOK™

You must charge your NOOK before you can use it for the first time.
Plug your NOOK into a USB port on your computer using the USB Cable included with your device.
It takes approximately 4 hours to charge your NOOK from your computer.

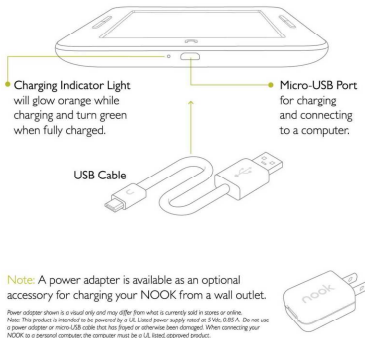

 
2 Get to Know Your NOOK

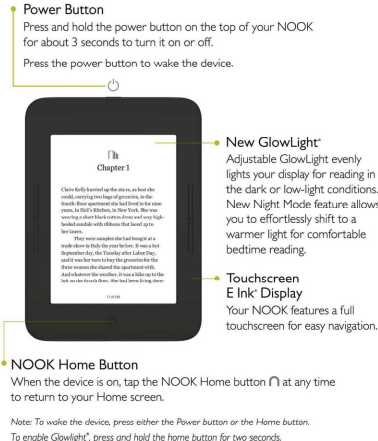

3 Setting up Your NOOK

- Turn on the Device**
Press & hold the power button for 3 seconds to turn the device on. Tap Let's Get Started.
- Select your Time Zone**
Tap on your time zone (for example, Eastern Time). Then tap Next.
- Connect to a Wi-Fi network**
To register your NOOK you need to be connected to a Wi-Fi network. Select your preferred network and enter the password if required.
- Register your NOOK**
You must register your device to your NOOK (or BN.com) account. This gives you access to any books in your NOOK Library and allows you to shop for new books, magazines, and newspapers on your NOOK.
If you already have a NOOK (or BN.com) account:
1. Enter the email address and password for your account.
2. Tap Sign In.
If you do not yet have a NOOK (or BN.com) account:
1. Tap the Create New Account button.
2. Follow the prompts to fill in the form with your name, email, password, and other information.
3. Lastly, add a credit card for future purchases or Skip.
You've now registered your NOOK and are ready to shop at the NOOK Store® and read your favorite books, magazines, newspapers, and more.

 4 Home Screen

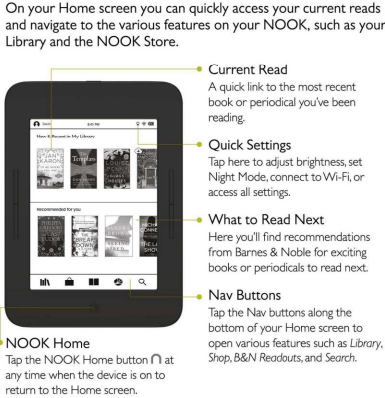


5 Glowlight With Night Mode


Our new Night Mode feature allows you to effortlessly shift to a warmer light for comfortable bedtime reading.



 6 Touch Navigation

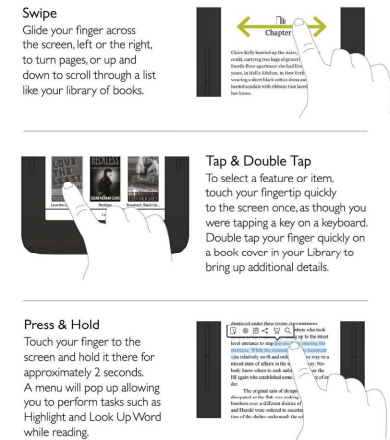

7 Start Reading

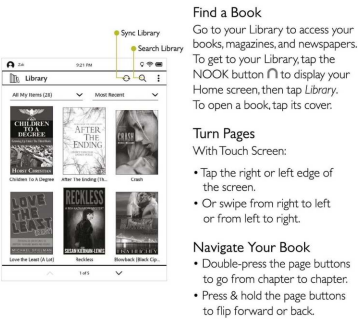 

8 Discover New Favorites



Just Tap to Buy
Once your NOOK account is set up with a valid credit card, you can make purchases with the tap of your finger. Just tap the book or periodical you want, then tap the price shown and Confirm. Your NOOK will download the item to your Library automatically.

9 Learn More

User Guide
In addition to this Quick Start Guide, please read the User Guide for complete information about all the features of your NOOK. You'll find a copy of the User Guide in your Library on your NOOK.

Additional Support
Please visit NOOK.com/support for additional information, including:
• A PDF version of the NOOK® User Guide that you can download to your computer
• Frequently Asked Questions
• Live Chat with a NOOK Expert
• Tutorial videos and more
You can also tweet Customer Service at @NOOK_Care.

Note: To ensure the highest quality of reading, your NOOK has an anti-glare film already installed. To protect your NOOK's screen from accidental damage, we recommend using a NOOK cover. Your limited warranty does not cover damage to your NOOK's screen resulting from accidental drops or regular wear & tear.

NOOK Digital, LLC, 166 Avenue of the Americas, 18th Floor, New York, NY 10036
© 2017 NOOK Digital, LLC. All rights reserved. NOOK, NOOK GlowLight, NOOK GlowLight Plus, NOOK Store, B&N Readouts and the NOOK logo are trademarks or registered trademarks of NOOK Digital, LLC or its affiliates. Patent Pending. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All trademarks or registered trademarks that are not the property of NOOK Digital, LLC or its affiliates are the property of their respective owners. Screenshots and product images are simulated; they may differ from the actual product and are subject to change. Use of NOOK is subject to the Terms of Service and Privacy Policy located in the Settings area of your device and at www.NOOK.com/legal. Contains Reader® Mobile technology from Adobe Systems Incorporated.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Ver. 3.0-000001-01
C10-000001-01